

HC-250 Controller Quick Start Guide

For Your Information...

Things to Consider Before You Install the HC-250

- 1 Mounting options. You can mount the HC-250 Controller on a wall or stack it on a shelf. See the HC-250 Controller Installation Guide for details.
- 2 The HC-250 can be used as a Primary Controller or a Secondary Controller.
- **3** We recommend that the HC-250 be used for small systems or as a Secondary Controller.
- 4 PoE (Power over Ethernet) or AC can be used to power the Controller.
- **5** Ensure that your network is in place. We recommend that you use Ethernet with PoE rather than WiFi for the best network solution.
- 6 If you are adding the Controller to an existing ZAP, see *How to Migrate My ZAP Coordinator to My New HC-800* or *HC-250*.
- 7 To use Director on the HC-250 Controller, see *Migrating a Control4 System to a New Primary Controller* in the Knowledgebase.
- 8 If you use an external drive, a powered USB or solid state USB drive is supported.

Resources

You can find useful information in these documents and videos (in most cases, Dealer login is required).

Marketing, Installation, and Setup Guides

- 1 HC-250 Controller Datasheet (PDF, Dealer HC-250 product page)
- 2 READ THIS FIRST Notice for OS 2.2.1 (PDF, Dealer software releases page)
- **3** OS 2.2.1 Release Notes (PDF, Dealer software releases page)
- 4 HC-250 Controller Installation Guide (PDF, Dealer product Documentation page)
- **5** Composer Pro Getting Started (PDF, Dealer product Documentation page) or Composer Pro Getting Started help (in the Composer Pro software)
- 6 Composer Pro User Guide (PDF in two parts, or online help on Dealer product Documentation page)

How To's, Technical Notes, and Videos

We are constantly adding new quick reference sheets and videos to support our products. Please check our website often to see what's new.

1 Controllers: A Comparison (PDF, Dealer product page)

- 2 System Performance Calculator (PDF, Knowledgebase article #747)
- **3** Product Support Matrix (PDF, Dealer product page)
- **4** How to Use 240V Lighting (PDF, Knowledgebase article #889)
- **5** How to Migrate My ZAP Coordinator to My New HC-800 or HC-250 (PDF, Knowledgebase article #885)

About This Document

Part number: 200-00294, Rev. A, 4/09/2012

