




Congratulations on purchasing this product

PJWU-101B

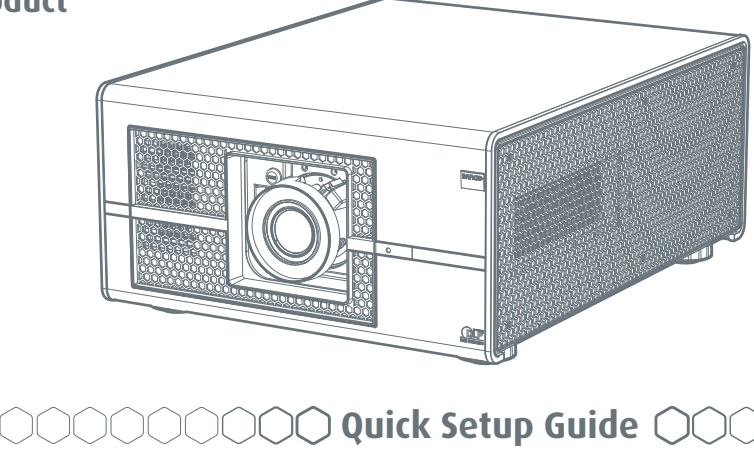


Quick Setup Guide

 1 Packaging Contents

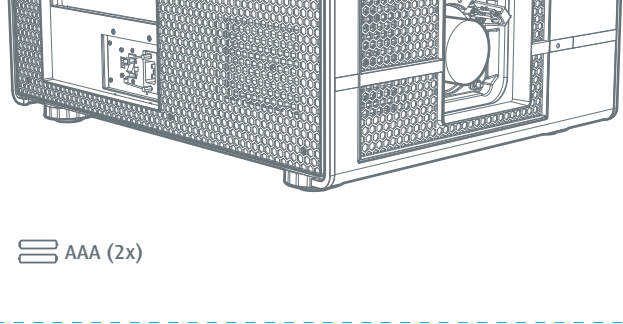


2A Lens Assembly A.

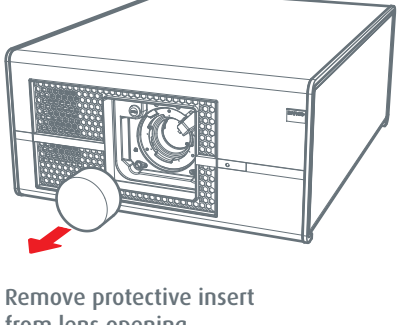


Remove protective insert from lens opening.




Remove protective covers from both ends of the lens before starting assembly.

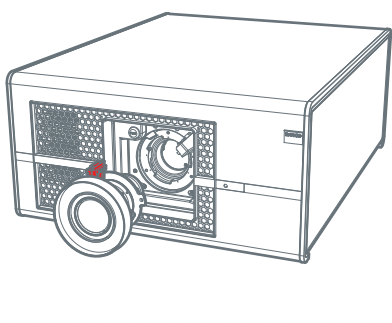


2B Lens Assembly B.

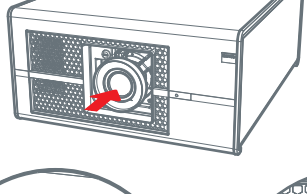


Keep connector in upright position, while inserting the lens.

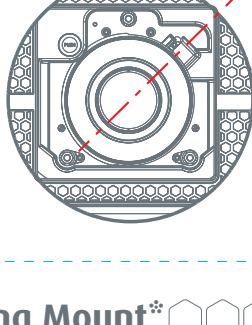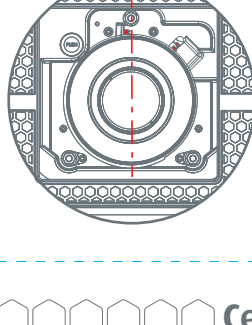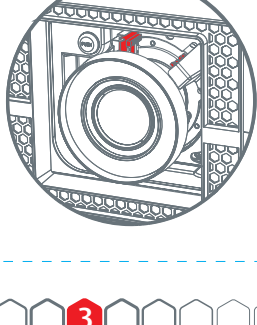

3 Ceiling Mount*

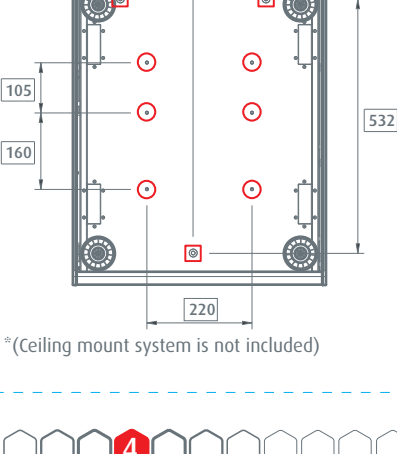

*(Ceiling mount system is not included)

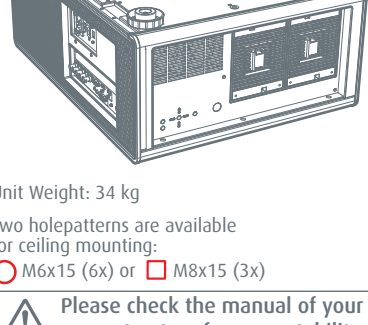

Unit Weight: 34 kg
Two holepatterns are available for ceiling mounting:
○ M6x15 (6x) or □ M8x15 (3x)

Please check the manual of your supportsystem for compatability


4 Input Cables



(HDMI to DVI-D cable included in the box)



(See User Manual for detailed info)

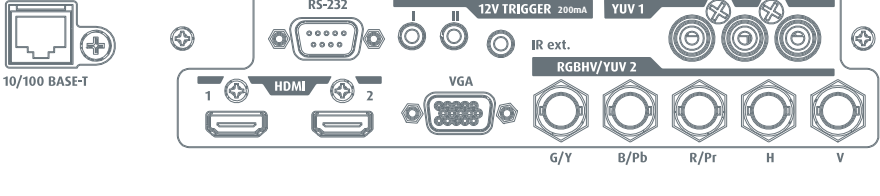

5 Keypad



HOME
Displays or hides the OSD adjustment screen.
^ / \ / > / <
Use these buttons to scroll, configure or adjust items on the OSD or toggle between different images.

ENTER
Press this button to confirm selection of OSD item; either to "Select item" or to access "Sub Menu" configurations.




STBY
Use this button to start or shut down the projector.

INPUTS
Used to toggle between different input signal sources.


QUICK ACCESS
Press ENTER key for quick access to "Focus/Zoom Menu"

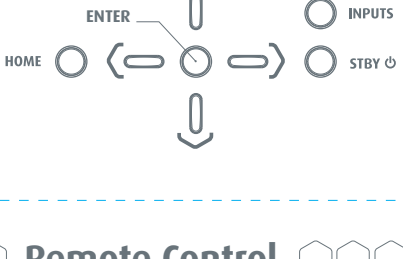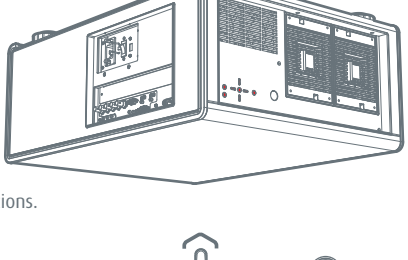




6 Remote Control

 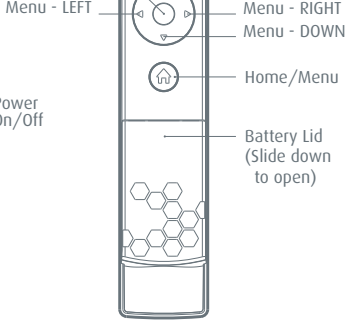 


Quick Keys
(for Remote and keypad)
Quick Key 1
Push Menu-UP twice for instant 'Picture Mute'
Quick Key 2
Push Menu-OK for quick access to the Focus/Zoom Menu

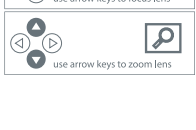


7 Starting Projector

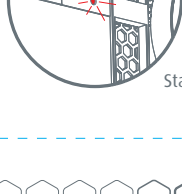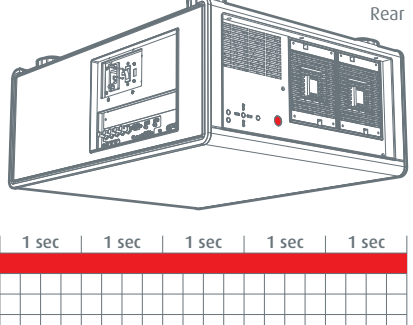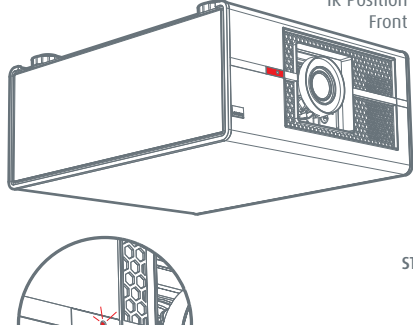

Status Led

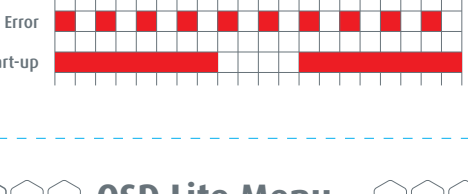


8 OSD Lite Menu

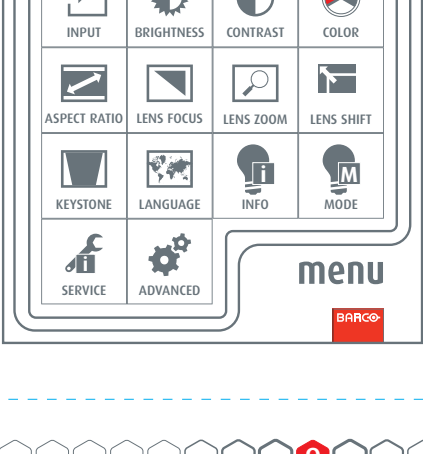

INPUT _____ Toggle between input sources
BRIGHTNESS _____ adjust image brightness level
CONTRAST _____ adjust image contrast
COLOR _____ adjust display mode
ASPECT RATIO _____ modify image aspect ratio
LENS FOCUS _____ adjust lens focus
LENS ZOOM _____ adjust lens zoom
LENS SHIFT _____ adjust lens shift
KEYSTONE _____ adjust keystone
LANGUAGE _____ select language
INFO _____ information on lamp status
MODE _____ normal/eco/power
SERVICE _____ service information
ADVANCED _____ see user manual

 9 Important Info



- Remove the lens before transporting the projector.
- To save lamp lifetime, first switch the projector to standby mode and wait two minutes, then switch off the main power.
- Ensure that the projector is operating with clean filters.
- Do not block the ventilation in- and outlets.
- Using the projector at a non recommended tilt angle will reduce the lifetime of the lamps or create unexpected behaviour of the unit.
- Laser light can cause severe damage to the DMD. This damage is not covered by warranty.



For more information and Maintenance Guidelines, check the Detailed User Manual on:

<http://www.barco.com/en/products-solutions/projectors>