

# Control Commands



Model No. PT-LB425  
PT-LB385  
PT-LB355  
PT-LW375  
PT-LW335  
PT-LB305

PT-TW371R  
PT-TW370  
PT-TW430  
PT-TW340

## CONTROL COMMANDS

2018/12/14

CATEGORY	FUNCTION	Parameter/Name	Sub-Parameter	CONTROL	QUERY		LB425 SERIES
				COMMANDS	COMMANDS	CALL BACK	LB425 TW371R
BASIC OPERATION	POWER	ON		PON	QPW	001	✓
		OFF (STANDBY)		POF		000	✓
	VOLUME	UP		AUU			✓
		DOWN		AUD			✓
	INPUT SELECT	COMPUTER1		IIS: RG1	QIN	RG1	✓
		COMPUTER2		IIS: RG2		RG2	✓
		VIDEO		IIS: VID		VID	✓
		Y/C		IIS: SVD		SVD	✓
		COMPONENT		IIS: CP1		CP1	✓
		HDMI1		IIS: HD1		HD1	✓
	NETWORK/USB		IIS: NWP		NWP	✓	
	MEMORY VIEWER		IIS: MV1		MV1	✓	
	USB DISPLAY		IIS: UD1		UD1	✓	
	FREEZE (Toggle)	OFF		OFZ	QFZ	0	✓
		ON				1	✓
REMOTE CONTROL	MENU KEY			OMN			✓
	ENTER KEY			OEN			✓
	UP KEY			OCU			✓
	DOWN KEY			OCD			✓
	LEFT KEY			OCL			✓
	RIGHT KEY			OCR			✓
	AUTO SETUP	ON		OAS	QAS	0	✓
		OFF				1	✓
	AV MUTE(Toggle)	OFF		OSH	QSH	0	✓
		ON				1	✓
ASPECT KEY	NORMAL		VS1	QS1	1	✓	
	WIDE				2	✓	
AUDIO MUTE	OFF		AMT: 0	QMT	0	✓	
	ON		AMT: 1		1	✓	
DISPLAY OPTION	CLOSED CAPTION SETTING	OFF		OCC: 0	QCC	0	✓
		CC1		OCC: 1		1	✓
		CC2		OCC: 2		2	✓
		CC3		OCC: 3		3	✓
		CC4		OCC: 4		4	✓
PROJECTOR SETUP	SERIAL NUMBER	SW0101234			QSN	SW0101234	✓
	PROJECTOR RUNTIME	99999H			QVX: RTMI 0	RTMI 0=+99999	✓
	LAMP RUNTIME	9999H			QSL	9999	✓
	LAMP(LIGHT) CONTROL STATUS	LAMP OFF			QSS	0	✓
		In turning ON				1	✓
		LAMP ON				2	✓
	LAMP Cooling				3	✓	
	TEMPERATURE (INTAKE)	0030/0080			QTM: 0	0030/0080	✓

Note: The commands or parameters with "\*" shows available commands or parameters for the projector which has been activated by the Upgrade Kit.