

# Control Commands



Model No. PT-LB423  
 PT-LB383  
 PT-LB353  
 PT-LW373  
 PT-LW333  
 PT-LB303

PT-TW351R  
 PT-TW350  
 PT-TW410  
 PT-TW320

## CONTROL COMMANDS

2018/7/18

CATEGORY	FUNCTION	Parameter/Name	Sub-Parameter	CONTROL	QUERY		LB423 SERIES	
				COMMANDS	COMMANDS	CALL BACK	LB423 TW351R	
BASIC OPERATION REMOTE CONTROL	POWER	ON		PON	QPW	001	✓	
		OFF (STANDBY)		POF		000	✓	
	VOLUME	UP		AUU				✓
		DOWN		AUD				✓
	INPUT SELECT	COMPUTER1		IIS: RG1	QIN	RG1	✓	
		COMPUTER2		IIS: RG2		RG2	✓	
		VIDEO		IIS: VID		VID	✓	
		Y/C		IIS: SVD		SVD	✓	
		COMPONENT		IIS: CP1		CP1	✓	
		HDMI1		IIS: HD1		HD1	✓	
		NETWORK/USB		IIS: NWP		NWP	✓	
		MEMORY VIEWER		IIS: MV1		MV1	✓	
		USB DISPLAY		IIS: UD1		UD1	✓	
	FREEZE (Toggle)	OFF		OFZ	QFZ	0	✓	
		ON				1	✓	
	MENU KEY			OMN			✓	
	ENTER KEY			OEN			✓	
	UP KEY			OCU			✓	
	DOWN KEY			OCD			✓	
	LEFT KEY			OCL			✓	
RIGHT KEY			OCR			✓		
AUTO SETUP	ON		OAS	QAS	0	✓		
	OFF				1	✓		
AV MUTE(Toggle)	OFF		OSH	QSH	0	✓		
	ON				1	✓		
ASPECT KEY	NORMAL		VS1	QS1	1	✓		
	WIDE				2	✓		
AUDIO MUTE	OFF		AMT: 0	QMT	0	✓		
	ON		AMT: 1		1	✓		
DISPLAY OPTION	CLOSED CAPTION SETTING	OFF		OCC: 0	QCC	0	✓	
		CC1		OCC: 1		1	✓	
		CC2		OCC: 2		2	✓	
		CC3		OCC: 3		3	✓	
		CC4		OCC: 4		4	✓	
PROJECTOR SETUP	SERIAL NUMBER	SW0101234		QSN		SW0101234	✓	
	PROJECTOR RUNTIME	99999H		QVX: RTMI 0		RTMI 0=+99999	✓	
	LAMP RUNTIME	9999H		QSL		9999	✓	
	TEMPERATURE (INTAKE)	0030/0080		QTM 0		0030/0080	✓	

Note: The commands or parameters with "\*" shows available commands or parameters for the projector which has been activated by the Upgrade Kit.