

WILLIAMSOUND

DLR 400 ALK

Digi-Wave™ Digital, Alkaline Battery Receiver

QUICK SETUP GUIDE




Operating Instructions

The DLR 400 ALK (DLR) receiver is compatible with Williams AV model DLT 400 transceiver only.

1. One DLT 400 assigned as the Master must be on.
 2. Insert two AAA batteries into the DLR. Be sure to observe correct polarity.
 3. Power on by holding the power button for 3 sec.
 4. If the DLT 400 is in interpretation mode, the DLR will seek an active DLT. Press the **^** or **v** button to seek the active DLT channel. In other modes, the group must be selected (see step 5).
 5. To change group, press and hold **^** and **vol +** at the same time. Then release, and push the **vol +** or **vol -** button until the correct group is displayed. It can take up to 5 seconds for the DLR to sync with the DLT.
 6. The antenna symbol will flash if not synched with a DLT 400. When synched, the antenna symbol stays on. When the TALK button is pushed on the DLT, signal strength bars show up on the DLR.
 7. If the units are synched, briefly push the power button to show group assigned, 0 to 99.
 8. To change volume level, press **vol+** or **vol-** button. Display will show **VOLUME** and a number 0-30.
-

9. Users can listen to the audio by plugging in stereo or mono earphones into the headphone jack.
10. Low battery is indicated by no bars inside the battery symbol on the display, and the battery symbol flashes.
11. The DLR will automatically power down after 5 minutes if not synched with a DLT.

Controls and Connectors

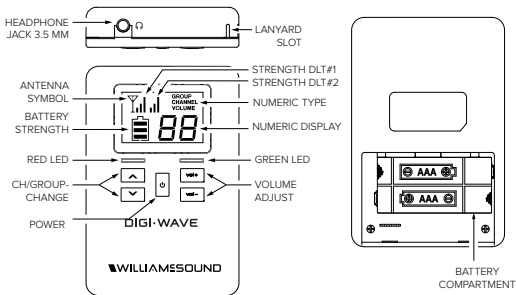

HEARING SAFETY

CAUTION!

This product is designed to amplify sounds to a high volume. To protect your hearing and the hearing of others:

1. Make sure the unit is OFF or the volume is turned down before putting on the earphones.
2. Set volume level at the minimum setting you need to hear.
3. Do not allow children or other unauthorized persons to have access to this product.

BATTERY SAFETY

CAUTION!

Do not attempt to recharge alkaline or other non-rechargeable batteries, which may explode, release dangerous chemicals, cause burns, or cause other serious harm to the user or product. To reduce the risk of fire or burns, do not crush, puncture, short contacts, or expose to temperatures above 140F (60C). Replace only with battery types designated for this product. Recycle or dispose of properly.

MEDICAL DEVICE SAFETY

CAUTION!

Before using this product with a pacemaker or other implantable medical device, consult your physician or the manufacturer of the device to make sure that you are using this product in accordance with their safety guidelines.

Specifications

Dimensions:	2.36" W x 3.54" H x 0.63" D (60 mm x 90 mm x 16 mm)
Weight:	1.7 oz. (47 g) without batteries.
Frequency Band:	2.4 GHz (ISM band)
Battery:	2 x AAA Alkaline Batteries; Lasts up to 30 hrs
Audio Frequency Response: (-3dB knee level)	Intercom Mode: 100 – 7.3 KHz; Interpretation and other modes: 100-11.2KHz
Temp. Range:	14° – 113°F (-10° to 45°C)
Approvals:	FCC, Industry Canada, RoHS 3, CE, WEEE, RCM, ANATEL, KC, Giteki
Warranty:	2 years parts and labor (90 days on accessories)

NOTE: SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE

Recycling Instructions



Help Williams AV protect the environment!

Please do not dispose of equipment or used batteries in the household trash. Take the equipment to an electronics recycling center or return to the factory. Take batteries to a retail or community recycling location.

Limited Warranty

Williams AV products are engineered, designed and manufactured under carefully controlled conditions to provide you with many years of reliable service. Williams AV warrants the DLR 400 ALK receiver against defects in materials and workmanship for two (2) years. During the first two years from the purchase date, we will promptly repair or replace the DLR 400 ALK receiver.

Earphones, headphones, cables, carry cases, and all other accessory products carry a 90-day warranty.

WILLIAMS AV HAS NO CONTROL OVER THE CONDITIONS UNDER WHICH THIS PRODUCT IS USED. Williams AV, THEREFORE, DISCLAIMS ALL WARRANTIES NOT SET FORTH ABOVE, BOTH EXPRESS AND IMPLIED, WITH RESPECT TO THE DLR 400 ALK RECEIVER, INCLUDING BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. WILLIAMS AV SHALL NOT BE LIABLE TO ANY PERSON OR ENTITY FOR ANY MEDICAL EXPENSES OR ANY DIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY ANY USE, DEFECT, FAILURE OR MALFUNCTION OF THE PRODUCT.

This device complies to “RSS-Gen Issue 2 June 2007” for Industry Canada and FCC part 15.105(b) for the United States.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This device complies with ICES-003 class B. Test data is available from the manufacturer on request.

This device complies with FCC part 15.105 (b)

FCC RF Radiation Exposure Statement:

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment is a handheld device and should be maintained with a minimum safety distance of 20 cm from the antenna. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

Note: FCC regulations, section 15.21, requires the user to comply with the rules of transmitter operation. Any changes or modifications made by the user not expressly approved for compliance may result in the loss of all privileges and authority to operate the equipment.

Customer Service

If you experience difficulty with your system, call Toll-Free for Customer Assistance:

1-800-843-3544 (U.S.A.) or

+1 952 943 2252 (Outside the U.S.A.)

If it is necessary to return the system for service, your Customer Service Representative will give you a Return Authorization Number (RA) and shipping instructions.

For Additional Information

This manual is a quick start guide for getting your Digi-Wave system up-and-running. Most features and customization options are not documented in this manual.

For additional information, feature instructions, commands, warranty information and more, please download the full user manual from the Digi-Wave 400 system's product page on Williams AV's website.

WILLIAMS AV

info@williamsav.com / www.williamsav.com

800-843-3544 / INTL: +1-952-943-2252

©2019 Williams AV, LLC · All Rights Reserved. MAN 267A