TO: TOKIWA CO., LTD.

SPECIFICATION SHEET

TYPE: XENON SHORT ARC LAMP MODEL: YXL-4500B2L

Please return one copy with your receipt stamp or sign after specification check.

AGREED BY
【 TOKIWA CO., LTD. 】

DATE: / /

APPROVED BY K Fazila

CHECKED BY J. Makazu

ISSUED BY

YUMEX INC

DATE: 28-Nov-19 SPEC No.: YYT280916

RECORD

TYPE: XENON SHORT ARC LAMP

MODEL:YXL-4500B2L

DATE	NOTE	CHECK
28-Nov-19	New issue.	越越
		1
AL-10.,		

YUMEX INC.

[Confidential]

Specification

Date:

28-Nov-19

1. Appreciation of this specification

This specification is provided for Xenon Short Arc Lamp, model YXL-4500B2L which is supplied from YUMEX INC.

2. Type of the Lamp

Xenon Short Arc Lamp

3. Model No. of the Lamp

YXL-4500B2L

4. Application of the Lamp

Light Source for Digital Cinema Projector

- 5. Structure and dimension
 - 1) The Lamp is a Double-Ended D.C. type discharge lamp which has the anode, cathode and quartz glass are bulb sealed at both ends.
 - 2) The appearance, dimensions and weight of the Lamp are specified in the drawing No.EDWX285.
- 6. Electrical characteristics

Rated	Rated	Rated		
Lamp Voltage	Lamp Current	Lamp Wattage		
31.5±2 V	145±1 A	4500 W		

^{*} The above is initially value.

7. Operation conditions

7-1. Lamp wattage

The Lamp should be operated within the Item 6 as above.

7-2. Burning position

The Lamp should be operated only in the horizontal position with $\pm 5^{\circ}$.

7-3. Cooling

The Lamp should be cooled to keep the conditions in Fig. 1 during the operation.

The cooling conditions below shall be subject to the specification of the machine.

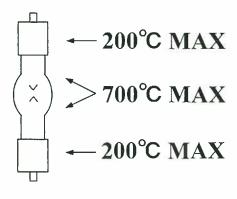


Fig. 1 Temperature condition for each portion of the Lamp for cooling

7-4. Warning the installation and uninstallation

3 base of the Lamp should be fixed and the other end should not be fixed. The Lamp should be installed without twist and stress from outside.

7-5. Lighting power supply

Use the power-supply unit the maximum output 4500W.

7-6. Warranty

3 years from delivery date.

The lamp is not guaranteed after the term of guarantee expire.

7-7. Use environment

Temperature Humidity		Pressure	Others	
+10 ~ +40°C	10 ~ 80% RH	Atmospheric	Nothing	

8. Storage conditions

Temperature	Humidity	Humidity Pressure	
- 40 ~ +70°C	10 ~ 80% RH	Atmospheric	Non condensing

9. Optical characteristics

9-1. Initial illumination

Total luminous flux · · · 185000lm

We lighted it by integrating sphere and measured by CL-200 made by KONICA MINOLTA.

9-2. Spectral Characteristics

Fig. 2 shows the Spectral Characteristics measured at 1 meter distance in horizontal direction from the center of the Lamp when the Lamp is operated at Rated Lamp Wattage.

The data in Fig. 2 is for reference only. The actual characteristics is slightly affected by the circumstances where the Lamp is operated.

*Refer to Fig.2 to next page.

^{*} The measurement method shall be based on YUMEX rule.

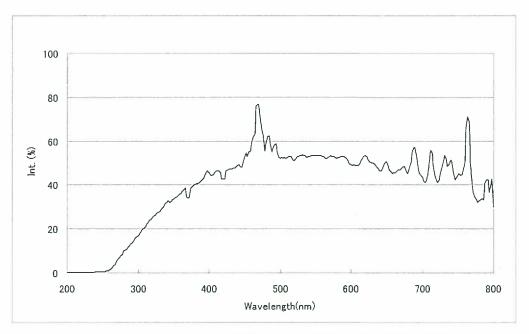


Fig. 2 YXL-4500B2L Spectral Distribution Map

10. Warranty for Lamp life

10-1. Definition of Life-End

The Lamp should be judged as Life-End when either of the following 1), 2) or 3) occurs under continuous operation with the conditions specified in Item 7.

- 1) The intensity from the Lamp itself comes down to 50% of the initial value (Called " Decrement")
- 2) The Lamp becomes inoperable within 1300 hours of operation. (Called "Inoperative")
- 3) Explosion of the Lamp under the correct operation with the conditions specified in Item 7 within 1300 hours of operation. (Called "Explosion")
- * The measurement method of the illumination and stability shall be based on YUMEX rule.

10-2. Life warranty and compensation

The Lamp should be replaced with free of charge or determined its compensation by Formula 1. if the Lamp reach "Life-End" as specified in Item 10-1 within the operated hours specified in the Table 1 under the correct operation with the conditions specified in Item 7.

Table 1 Life Warranty by Life-End Mode

Life-End Mode Decrement		Inoperative	Explosion	
Life Warranty	1300 (h) ※1	1300 (h) ※1	1300 (h) ※1	

* Formula 1. Life Warranty by Operated Hours

- 10-3. Not covered under warranty
 - 1) The defect is judged to be caused by a mistake by the handling of the Lamp.
 - 2) The peculiarity is not discovered from the lamp, the Lamp is judged to be able to use.

10-4. Coverage

We YUMEX should compensate for whole or some parts of the damage which is occurred by the defect or fault of the Lamp.

In this regard, however we should not compensate you if the following case.

- 1) The cause of the damage is not to obeyed the conditions as mentioned in this specifications.
- 2) No notice within one week after the damage occurs.
- 3) No offer of the broken Lamp, documents and data to specify the cause of the damage.
- 4) No offer of the documents and composition letter to assess and fix of the damages.
- 5) All damage is occurred by the underperformance of the Lamp such as the "Decrement" or "Inoperative" (We compensate by gratuitous repair or the exchange of the new Lamp.)
- 6) The damage by the defect that occurs over the settled life warranty in Item 10-2.
- 7) All damage that occurs indirectly such as a loss by the suspension of business, passive damages and opportunity loss.
- 8) The damage by the Fire and/or natural disaster such as earthquake, etc.

11. Cautions in handling the Lamp

- 11-1. Cautions after taking off the Lamp from the Lamp case.
 - 1) Do not make any hit the Lamp, to stress from outside such as twisting and bending and hurt to the Lamp.

(It may cause the damage and the explosion of Lamp.)

- 2) To handling the Lamp, be sure to wear face shield (which can be protected including neck), protection gloves and thick long sleeve clothes.
 - (It may cause the injury when the damage and the explosion happened.)
- 3) Do not apply vibration and shock to the Lamp. (It may cause the damage or short life.)
- 4) Do not touch the lamp with bare hands directly. If the Lamp is stained, to wipe it with clean cloth which is soaked alcohol. (It may cause the damage or short life.)
- 5) Not throwing away an exclusive Lamp box for safekeeping or using for the disposal of the Lamp.
- 6)As the lamp is filled with high-pressure gas, do not remove its cover before lighting.

11-2. Caution in installation the Lamp

- 1) Install the Lamp with instruction of "Cautions after taking off the Lamp from the Lamp case." in Item 11-1.
- 2) Install the Lamp to machine after switching off the machine to be sure.
 - (It may cause the damage or short life.)
- 3) Install Anode side and Cathode side in the proper position as specified. (It may cause the damage or short life.)
- 4) Do not make electrical connection before confirming the electrical contacts have no rust, no burnt-surface, no color-change, etc.
- 5) To be sure to connect the Lamp or the lead-wire to the machine without any stress such as twisting and bending.
- 6) Connect surely (without loose) the electrical contacts of the Lamp to the machine (the terminal portion of the operating equipment).



11-3. Caution in the Operation (Lighting)

- 1) Never receive the radiation from the Lamp directly with bare eyes or skins, as the Lamp produces high intensity radiation including the harmful Ultra-Violet rays to human's body. (It may cause the eye hurt and visually-impaired.)
- 2) The Lamp should be operated in the equipment specially designed to use the Lamp and with understanding about the accompanying instruction.

Do not use the Lamp with other application.

(It may cause the explosion or the machine trouble.)

- 3) Make sure the door of the lamp house in the equipment is closed before operation.
- 4) The Lamp house should be the special structure which a piece of glass is not scatted by the explosion. (It may cause the Fire.)
- 5) Do not use the Lamp with a flammable atmosphere such as thinner etc.
 In addition, do not close to the paper and cloth which is easy to burn to a lamp, and do not overturn. (It may cause of the Fire or explosion)
- 6) Take at least 10 minutes interval before re-starting operation after switching off.
- 7) Do not use the Lamp which operated over the warranty. Exchange to new one. (It may cause the explosion.)

11-4. Caution in the explosion or breakage

 Take refuge from the place to have possibilities to suck the mercury which is leaked when the Lamp breakage or explodes during lighting.
 In addition, ventilate more than 30 minutes.

11-5. Caution after Operation

- 1) Do not open the door of the lamp house in the operating equipment in at least 10 minutes after switching off. (It may cause the injury because the pressure of filled gas in the bulb is very high during and after the lighting.)
- 2) After lights out, do not touch the lamp till a lamp gets cold enough. (It may because the burn injury.)
- 3) After lights out, do not close to the paper and cloth which is easy to burn to a lamp, and do not overturn. (It may cause of the Fire.)

11-6. Caution in taking off the Lamp

- 1) Taking off the Lamp with instruction of "Cautions after taking off the Lamp from the Lamp case." in Item 11-2.
- 2) Install the Lamp to machine after switching off the machine to be sure. (It may cause the damage or short life.)
- 3) After lights out, do not touch the lamp till a lamp gets cold enough.

11-7. Keeping the Lamp (including the operated Lamp)

Put the Lamp in an exclusive Lamp box with show the Lamp model and serial number on the face in the upper side and keep it as pushing over sideways.

11-8. Carrying the Lamp

The Lamp should be in an exclusive Lamp box when the carrying. (It may cause the injury if the breakage and explosion.)



11-9. Checking the equipment and the Lamp

The followings should be checked.

1) The Lamp

The appearance of terminal and base: Make sure there is no rust, no burnt-surface,

no color-change, etc.

Operated hours: Checking the operated hours that it is not past guarantee life time.

2) The machine

Appearance of electrical connection portion: Make sure there is no rust, no burnt-surface, no color-change, etc.

Appearance of Insulating portion: Make sure there is no burnt-surface, no color-change, etc.

Electrical connection portion: Make sure they are connected surely without loose.

Cooling portion: Make sure the cooling fan is working properly.

Note: Confirm the instruction manual of the device.

11-10. Transportation of the Lamp

- 1) In case that the Lamp is packaged and transported again, the Lamp should be packed in an exclusive Lamp box and the box for transportation in the same manner as the ones when the Lamp is delivered.
- 2) The exclusive Lamp box should be placed into the durable box for transportation. (The face of exclusive Lamp box with "UP" marking should be kept up during the transportation.) Sufficient cushion materials should be put in between the excusive Lamp case and the box for transportation.
- 3) During transportation of machine, the Lamp should be take off from the machine.

12. Returning of the Lamp

- 1) The Lamp in need of the judgment of Good or Defective should be not broken and returned to supplier carefully in the same manner as the ones when the Lamp is delivered.
 - (YUMEX don't bear the expense at the time of the return.)
- 2) In case that the Lamp should be returned due to the defect, the "Check list for defect inspection (lamp)" as attachment must be described the details of accident including operated hours etc. and must be sent together with the Lamp will be returned.

13. Disposal of the Lamp after use

The Lamp after use should be disposed in the proper manner.

14. Note

- 1) The special note which is not shown on the specification and drawing is decided by agreement in each time with both should be added a postscript to Item 15.
- 2) The revision and abolition of this specification should be decided with agreement of both.

15. Special Note

No.1 Decode of serial number.

- ex) PJY031
- 1) Head 2 alphabet columns (ex. PJ) means production month. Please refer following table.
 - 2) Next alphabet column (ex. Y) means production factory.
 - 3) Last 3 number columns (ex. 031) means production consecutive number of the month.

of the month.												
	Jan.	Feb.	Mar.	Apr.	May	Jun.	Jul.	Aug.	Sep.	Oct.	Nov.	Dec.
2014	ĪZ.	DX.	N	Œ	I R	П	IU	OI	IA	IS	ID.	F
2015	IG	DH	1_	IC	IB	IN	1M	PQ	PW	PY	PI	PP
2016	PJ	PK	PZ	PX	PV	PE	PR	PT	PU	PO	PA	PS
2017	PD	PF	PG	PH	PL	PC	PB	PN	PM	JQ	J₩	JY
2018	IJ	JP	JJ	JK	JZ	JX	JV	JE	JR	JT	JU	JO
2019	JA	JS	JD	JF	JG	JΉ	JL	JC	JB	JN	JM	KQ
2020	KW	KY	KI	KP	KJ	KK	KZ	KX	KV	KE	KR	KT
2021	KU	ко	KA	KS	KD	KF	KG	KH	KL	KC	KB	KN




16. Packing for Transportation


16-1. Packing Material


	Kind	QTY	Material	Standard
(A)	Packing Box	L: 1-12	Cardboard	115*135*510 (L)
(B)	Transportation Box(Outside)	1	Cardboard	Packing Box 1-6PC:410*360*710 Packing Box 7-12PC:560*475*710
(C)	Cushioning(1)	Proper Quantity	Polystyrene resin	"S" shaped Cushioning
(D)	Cushioning(2)	2	Urethane foam	-
(E)	UP Seal	2	Paper	les :
(F)	FRAGILE Seal	2	Paper	
(G)	Adhesive Tape	4	Cloth	* 1

16-2. How to pack

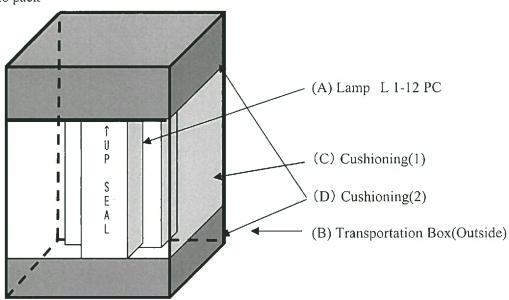

16-3. Sealing

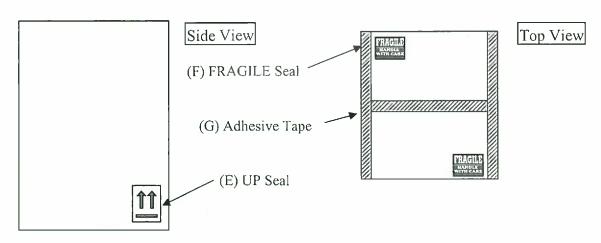

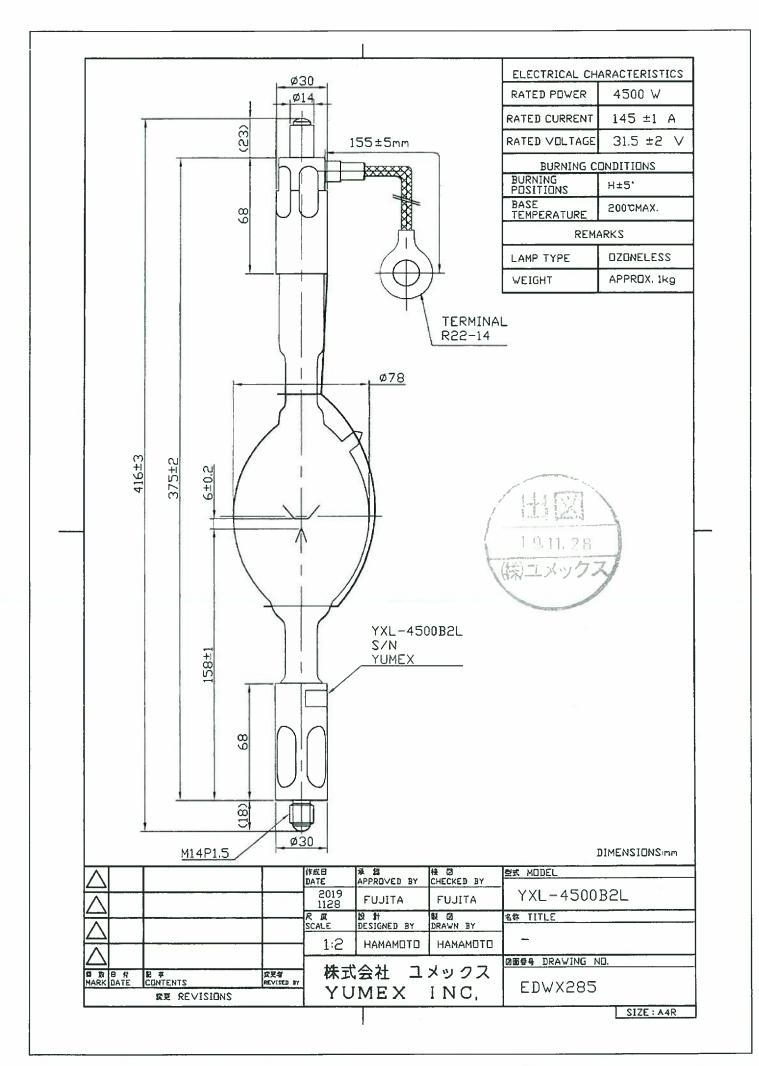

Check list for defect inspection (lamp)

*Please attach this documen	t with defect lar	np and return it to	us.	NAME: _	
Customer information					
Customer					
Occupation (please check)	PCB	LCD	PDP	SEMI	Others
Area			Country		
Using conditions				I	
Lamp Model			S/N		-
Electric Properties	V	′ A	*Data of pre- shipment		
Wavelength		nm	Control method		
Illuminance Meter maker			Meter type		
Intensity of primary stage			Require Intensity	(minimum)	
Timing of exchange lamp				•	
	Continuity	Operating Time	hours/day (OFF time)	
Using condition	Dlinking		ON	OFF	
	Blinking	Operating Time	hours/day (hours OFF)	
Warranty		hours	shot	·	
Operated Hours		hours	shot		
Details for defect lamp					
Unit information					
Manufacturer			Туре		
Application			Usage		
Modification					
Special Note					
Power supply(Ballast)			1		
Manufacturer			Туре		
Special Note					
Control to resident Com-		30.2	*		PREPARED

(Confidential)

DATE: