

Entero RPMWU/RPMSP/RPMHD-LED01

USER MANUAL

020-100367-05

CHRISTIE®

Entero RPMWU/RPMSP/RPMHD-LED01

USER MANUAL

020-100367-05

NOTICES

COPYRIGHT AND TRADEMARKS

© 2011-2012 Christie Digital Systems USA, Inc. All rights reserved.

All brand names and product names are trademarks, registered trademarks or trade names of their respective holders.

REGULATORY

The product has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the product is operated in a commercial environment. The product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of the product in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at the user's own expense.

This Class A digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

이 기기는 업무용 (A 급) 으로 전자파적합등록을 한 기기이오니 판매자 또는 사용자는 이점을 주의하시기 바라며, 가정 외의 지역에서 사용하는 것을 목적으로 합니다.

GENERAL

Every effort has been made to ensure accuracy, however in some cases changes in the products or availability could occur which may not be reflected in this document. Christie reserves the right to make changes to specifications at any time without notice. Performance specifications are typical, but may vary depending on conditions beyond Christie's control such as maintenance of the product in proper working conditions. Performance specifications are based on information available at the time of printing. Christie makes no warranty of any kind with regard to this material, including, but not limited to, implied warranties of fitness for a particular purpose. Christie will not be liable for errors contained herein or for incidental or consequential damages in connection with the performance or use of this material.

The product is designed and manufactured with high-quality materials and components that can be recycled and reused. This symbol  means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from regular waste. Please dispose of the product appropriately and according to local regulations. In the European Union, there are separate collection systems for used electrical and electronic products. Please help us to conserve the environment we live in!

Canadian manufacturing facility is ISO 9001 and 14001 certified.

GENERAL WARRANTY STATEMENTS

For complete information about Christie's limited warranty, please contact your Christie dealer. In addition to the other limitations that may be specified in Christie's limited warranty, the warranty does not cover:

- a. Damage occurring during shipment, in either direction.
- b. Projector lamps (See Christie's separate lamp program policy).
- c. Damage caused by use of a projector lamp beyond the recommended lamp life, or use of a lamp supplied by a supplier other than Christie.
- d. Problems caused by combination of the product with non-Christie equipment, such as distribution systems, cameras, video tape recorders, etc., or use of the product with any non-Christie interface device.
- e. Damage caused by misuse, improper power source, accident, fire, flood, lightning, earthquake or other natural disaster.
- f. Damage caused by improper installation/alignment, or by product modification, if by other than a Christie authorized repair service provider.
- g. For LCD projectors, the warranty period specified applies only where the LCD projector is in "normal use." "Normal use" means the LCD projector is not used more than 8 hours a day, 5 days a week. For any LCD projector where "normal use" is exceeded, warranty coverage under this warranty terminates after 6000 hours of operation.
- h. Failure due to normal wear and tear.

PREVENTATIVE MAINTENANCE

Preventative maintenance is an important part of the continued and proper operation of your product. Please see the Maintenance section for specific maintenance items as they relate to your product. Failure to perform maintenance as required, and in accordance with the maintenance schedule specified by Christie, will void the warranty.

1: Introduction

1.1 Labels and Markings 1-1

1.2 Safety Warnings and Guidelines 1-1

1.3 Purchase Record and Service Contacts 1-2

1.4 Projector Overview 1-2

 1.4.1 Projection Head Module (PHM) 1-3

 Main Power Switch 1-3

 1.4.2 Electronics Module (EM) 1-3

 Input Panel 1-3

 Status Display 1-3

 Status LED 1-3

 IR Sensor 1-3

 1.4.3 Key Features 1-4

 1.4.4 How the Projector Works 1-4

 1.4.5 List of Components 1-4

2: Setting Up a Source

2.1 Projector Power 2-1

 2.1.1 Turning the Projector ON 2-1

 2.1.2 Disconnecting the Projector from AC 2-1

 2.1.3 Re-connecting the projector to AC 2-2

2.2 Connecting Sources 2-2

 LEDS 2-2

 DVI Digital Video 2-3

 Dual Link DVI Input Card 2-3

 Twin HDMI Input Card 2-3

 Analog BNC Input Card 2-4

 Dual SD/HD - SDI Input Card 2-4

 Video Decoder Input Card 2-4

2.3 How Color Settings Interact in a Entero Array 2-5

2.4 Optimizing the Projectors for the Source 2-6

3: Operation

3.1 Using the IR Remote 3-1

 3.1.1 IR Remote 3-2

 3.1.2 Wired Remote 3-3

 3.1.3 IR Remote Commands 3-3

 Power ON/OFF 3-3

 Test 3-3

 Auto 3-3

 Channel 3-4

 Slot 1, 2, 3, 4 3-4

 Input 3-4

 PIP 3-4

 Swap 3-4

Contrast	3-4
Bright	3-5
Gamma	3-5
Number Keys	3-5
10+	3-5
Help	3-5
Menu	3-5
OSD (On-screen display)	3-5
Shutter	3-6
Function Key	3-6
Proj	3-6
Enter	3-6
Exit	3-7
Arrow Keys	3-7
Laser	3-7
3.2 Navigating the Menus	3-7
3.2.1 Main Menu	3-7
3.2.2 On-line Help	3-8
3.2.3 The Global Icon	3-8
3.2.4 Using Slide bars and Other Controls	3-8
3.2.5 Editing Text	3-9
3.3 Using Inputs and Channels	3-10
3.3.1 Inputs	3-10
Switching Inputs	3-10
3.3.2 Channels	3-11
Creating a New Channel	3-12
Using a Channel	3-12
Channel Setup Menu	3-12
Signal Type	3-13
Copying a Channel	3-14
Deleting a Channel	3-14
To Delete Multiple Channels	3-14
Editing a Channel	3-15
Channel Edit Menu	3-15
3.4 Adjusting the Image	3-16
3.4.1 Automatic Image Setup	3-16
3.4.2 Size and Position Menu	3-17
Custom Sizing Option	3-17
Resize Presets	3-17
Size	3-18
Vertical Stretch	3-18
Pixel Track	3-19
Pixel Phase	3-19
H-Position	3-19
V-Position	3-19
Keep Aspect On Auto Setup	3-19

Blanking	3-20
3.4.3 Image Settings Menu	3-21
Contrast	3-21
Brightness	3-21
Color Space	3-21
Video Options	3-22
Input Levels	3-24
Advanced Image Settings	3-26
3.4.4 Configuration - Adjusting System Parameters and Advanced Controls.....	3-30
Language	3-30
Output Options	3-30
Power Management	3-31
Date & Time	3-32
Menu Preferences	3-32
Communications	3-34
Geometry & Color	3-36
What is a Blend?	3-41
Advanced Edge Blending Controls	3-42
Diagnostics & Calibration	3-45
Service	3-47
Option Card Settings	3-47
ArrayLOC Menu	3-48
Managing Colors with ArrayLOC	3-55
3.4.5 Status.....	3-58
3.4.6 Secondary Input & Switching.....	3-59
Main Input	3-59
Secondary Input	3-59
Swap Main & Secondary inputs	3-60
PIP Enable	3-60
PIP Window Options	3-60
Secondary Size & Position	3-61
Secondary Image Settings	3-61
Fade Time	3-61
Frame Locking	3-61
Auto Input Searching	3-62
HDMI Output Loop Source	3-62
Standby Active Loop-Through	3-62

4: Menu Tree

4.1 Menu Tree.....	4-3
4.1.1 Menu Tree Continued - Configuration	4-4
4.1.2 Menu Tree Continued - Geometry and Color.....	4-5
4.1.3 Menu Tree Continued - ArrayLOC	4-6

5: Maintenance

5.1 Maintaining Proper Cooling 5-1

5.2 Maintenance and Cleaning..... 5-1

 5.2.1 Warnings and Safety Guidelines..... 5-1

 5.2.2 Labels and Markings..... 5-1

 5.2.3 Instructions..... 5-2

 5.2.4 Projector Location..... 5-2

 5.2.5 Servicing..... 5-2

 5.2.6 Preventative Maintenance..... 5-3

5.3 Light Module Replacement 5-4

5.4 Lens Replacement..... 5-4

 5.4.1 Remove Lens..... 5-4

 5.4.2 Install Lens..... 5-5

6: Troubleshooting

6.1 Troubleshooting Guidelines..... 6-1

6.2 System Warnings / Errors 6-1

 System Warnings 6-2

 System Errors 6-2

 6.2.1 LED Status Display on the Projector 6-2

 6.2.2 Error Codes 6-3

6.3 Power 6-5

 6.3.1 Projector Does Not Power ON..... 6-5

6.4 Light Module 6-5

 6.4.1 Light Module Suddenly Goes OFF..... 6-5

6.5 Displays 6-5

 6.5.1 The Projector Is ON, but There Is No Display 6-5

 6.5.2 The Display Is Jittery or Unstable..... 6-5

 6.5.3 The Display Is Faint..... 6-5

 6.5.4 The Upper Portion of the Display Is Waving, Tearing or Jittering..... 6-6

 6.5.5 Portions of the Display Are Cut OFF or Warped to the Opposite Edge..... 6-6

 6.5.6 Display Appears Compressed (Vertically Stretched) 6-6

 6.5.7 Data is Cropped from Edges..... 6-6

 6.5.8 Display Quality Appears to Drift from Good to Bad, Bad to Good 6-6

 6.5.9 Display Has Suddenly Frozen..... 6-6

 6.5.10 Colors in the Display Are Inaccurate..... 6-6

 6.5.11 Display Is Not Rectangular..... 6-6

 6.5.12 Display Is “Noisy” 6-7

6.6 ArrayLOC 6-7

 6.6.1 Cannot Find Color Adjustment Controls 6-7

 6.6.2 Color/Image Settings Are Greyed Out..... 6-7

 6.6.3 Sensor Isn’t Calibrated (Yellow Alert)..... 6-7

 6.6.4 Invalid Target Gamut (Yellow Alert) 6-7

 6.6.5 Unable to Achieve Target Brightness/Gamut (Yellow Alert) 6-8

 6.6.6 ArrayLOC Troubleshooting Tree - Matching Projectors for Color and Brightness..... 6-9

 6.6.7 ArrayLOC Troubleshooting Tree Continued - Array Brightness Setup..... 6-10

 6.6.8 ArrayLOC Troubleshooting Tree Continued - Array Color Setup..... 6-11

7: Specifications

7.1 Regulatory 7-1

 7.1.1 Safety 7-1

 7.1.2 Environmental Regulations 7-2

 7.1.3 Emissions 7-2

 7.1.4 Electromagnetic Compatibility 7-2

 7.1.5 Immunity 7-2

7.2 Entero Specifications 7-3

 7.2.1 Display 7-3

 7.2.2 Lenses 7-4

 7.2.3 Power Requirements 7-4

 7.2.4 Light Module 7-4

 7.2.5 Physical Specifications 7-5

 Maximum Product Dimensions (L x W x H) 7-5

 Product Weight 7-5

 7.2.6 Projector Dimensions and Mounting Information 7-5

 7.2.7 Environment 7-7

 Operating Environment 7-7

 Non-Operating Environment 7-7

 7.2.8 Standard and Optional Components 7-7

 Standard Components 7-7

 Optional Accessories 7-7

7.3 Inputs 7-8

A: Interconnect Drawing

A.1 Interconnect Drawing A-3

B: Web User Interface

B.1 Logging On B-1

B.2 Navigating the Web User Interface B-3

 B.2.1 Help Text B-3

B.3 Basic Operation B-3

 B.3.1 Main Tab - General B-3

 B.3.2 Main Tab - Status B-4

 B.3.3 Tools Tab - Virtual OSD B-4

 Virtual OSD Menu B-5

 B.3.4 Admin Tab - System B-7

 Uploading a Logo File or Gamma File B-8

 Creating a Backup File B-8

 Restoring a File B-8

 Performing a Diagnostic Test using Interrogator B-9

 B.3.5 Admin Tab - Users B-9

 Creating a User Name and Password B-9

 Change Password B-9

 Delete User B-9

B.3.6 Advanced Tabbed Page - RTE B-10
 RTE Buttons B-10
 B.3.7 To Add a Serial Command B-13

C: Serial Command Overview

C.1 Introduction C-1
 C.1.1 Connection and Use C-1
 C.2 Understanding Message Format C-1
 C.2.1 Basic Message Structure C-2
 Start and End of Message C-2
 Prefix Characters (Optional) C-2
 Projector Numbers (Optional) C-2
 Function Code C-2
 +Subcode C-2
 Request/Reply Symbols C-3
 Other Special Functions (Optional) C-3
 Data C-3
 Text Parameters C-4
 C.2.2 Sample Messages and their Meaning C-4
 C.2.3 What is Actually Sent in a Message C-5
 C.2.4 Maximizing Message Integrity C-5
 C.2.5 Accessing Specific Channels or Inputs C-6
 C.2.6 Flow Control C-6
 C.2.7 Network Operation C-6
 C.3 Description Of Control Types C-7
 C.3.1 Subclasses C-7
 C.3.2 Control Groups C-7
 C.3.3 Access Levels C-8

D: Serial Command Reference

1 Introduction

1.1 Labels and Markings

Observe and follow all warnings and instructions marked on the projector.

⚠ DANGER Danger symbols indicate a hazardous situation which, if not avoided, will result in death or serious injury.

⚠ WARNING Warning symbols indicate a hazardous situation which, if not avoided, could result in death or serious injury.

⚠ CAUTION Caution symbols indicate a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE: Information provided with this heading alerts users to key points of interest not related to personal injury.

1.2 Safety Warnings and Guidelines



Be aware of the caution label on the projector warning of possible eye hazard if the projected visible LED radiation light is viewed directly through certain optical instruments at close range. Figure 1-1 indicates where the label is located.

⚠ CAUTION The projector is a class 2M source of visible LED radiation. Directly viewing the LED output with certain optical instruments (for example, eye loupes, magnifiers and microscopes) within a distance of 100 mm may pose an eye hazard.

NOTICE: This projector must be operated in an environment that meets the operating range specification, as listed in Section 7.2.7 Environment.



1.3 Purchase Record and Service Contacts

Whether the projector is under warranty or the warranty has expired, Christie’s highly trained and extensive factory and dealer service network is always available to quickly diagnose and correct projector malfunctions. Complete service manuals and updates are available for all projectors. If a problem is encountered with any part of the projector, contact your dealer. Usually servicing is performed on site. If you have purchased the projector, fill out the information below and keep with your records.

Table 1.1 Purchase Record

Dealer:
Dealer or Christie Sales/Service Contact Phone Number:
Projector Serial Number*:
Purchase Date:
Installation Date:


** The serial number can be found on the license label located on the back of the projector.*

Table 1.2 Ethernet Settings

Default Gateway	
DNS Server	
Projector IP Address	
Subnet Mask	

1.4 Projector Overview

The Entero RPMWU/RPMSP-LED01 projectors are professional quality WUXGA and SXGA+ data projectors featuring the latest in DLP™ display technology to achieve high brightness, high resolution multimedia, and video projection images. Projectors use Christie’s exclusive KoRE™ electronics and firmware to accept data, graphics and video input signals for projection onto flat, front or rear projection screens.

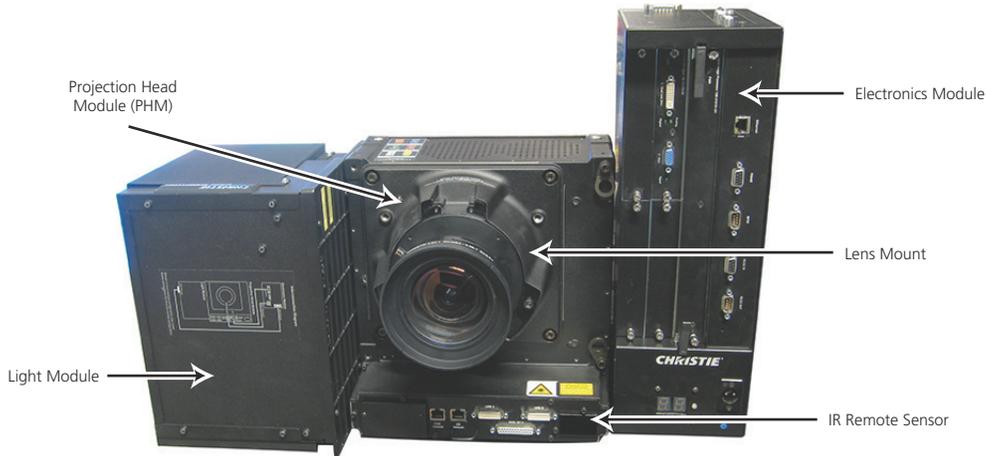

1.4.1 Projection Head Module (PHM)

The PHM is the center module of the projector. It contains the projection lens, IR sensor, Digital Mirror Device (DMD), light module and other optical components. It also supplies the electrical interfaces required to drive these components. The projector light module (LM) consists of 3 LEDs and combining optics. There are 2 PHM models available with the Entero, one with SXGA+ resolution and another with WUXGA resolution.

Main Power Switch

⚠ CAUTION Power should always be disconnected from the illumination module before servicing to avoid the possibility of inadvertent exposure to visible LED radiation. Directly viewing the illumination module optical output through certain optical instruments (for example, eye loupes, magnifiers and microscopes) within a distance of 100 mm may pose an eye hazard.

The **Main Power Switch** is located above the AC receptacle on the Illumination Module (LM). Place this switch in the OFF position to cut all power to the projector before disconnecting from an AC wall outlet.

1.4.2 Electronics Module (EM)

The EM module contains the main electronics and input connectors of the projector.

Input Panel

All source connections are made to the main input panel. If additional connections are required, install one of the available optional input modules. For more details on connecting sources, refer to [2.2 Connecting Sources, on page 2-2](#).

Status Display

The 2-digit status display window displays the current status of the projector. If there is an error during operation, an error code number will display. During normal operation, ON will appear in the *Status* window.

Status LED

Located next to the 2-digit status display is a single LED that illuminates one of 3 colors to convey the current status of the system. A solid red LED shows a system error and the corresponding error code will display in the status display. Refer to **Table 6.1 LED Operational Status Codes** for a description of LED variations. Press EXIT twice on the keypad to acknowledge and clear the error.

IR Sensor

The projector has a front IR sensor that is optimally placed to receive transmissions from the IR remote from up to 100 feet away, regardless of the projector configuration. For uninterrupted communications with the projector, it is important to keep the transmission path to this sensor unobstructed at all times and to point the IR remote directly at the projector (or center of the screen in rear screen applications).

1.4.3 Key Features

- WUXGA, 1920 x 1200 resolution

Or:

- SXGA+, 1400 x 1050 resolution
- 0.69:1 Fixed Lens
- 10-bit image processing module
- Display of RGB, NTSC, PAL, and SECAM video inputs and HDTV formats
- Picture-in-Picture (PIP) display
- Edge Blending ability via software for seamless displays
- Dual frequency IR sensor for use with standard IR remote and optional long-range dual frequency remote
- Memory for up to 99 custom “channels” (source setups)
- Intuitive on-screen menu system
- Built-in GPIO port to enable active control of external devices
- LED display for projector status monitoring
- Multiple control options including RS-232 and RS-422
- On-board ChristieNET™ software
- Universal AC input 100-240 VAC, 50/60Hz

1.4.4 How the Projector Works

Sequential RGB color primaries are generated by the light module. This colored light illuminates a single Digital Mirror Device (DMD) located in the projector head module. The reflected light from the DMD chip then passes through the projection lens to the screen to display the image.

1.4.5 List of Components

Make sure these components were received with the projector:

- Projector Head Module (PHM), with attached Light Module (LM)
- Electronics Module (EM)
- Warranty Card
- Web Registration Form
- Line Cord (rated, North American)

NOTE: Each projection system requires a User Kit (P/N: 125-104106-xx). If you did not receive a User Kit or if you want to purchase additional kits, you can order them separately.

2 Setting Up a Source

This manual assumes that the projectors have been setup, and connected. For detailed hardware installation and setup instructions, see the Entero Installation Guide.

This section provides information about connecting sources and adjusting source specific image settings. Illustrations are for reference only and may not depict your projector model exactly.

2.1 Projector Power

⚠ WARNING

- Do not operate if the AC supply and cord are not within the specified voltage and power range.
- The North American rated line cord is supplied with this projector. For all other regions, use only a regionally approved line cord, power plug and socket.
- Do not use a damaged line cord.

⚠ CAUTION The projector is a class 2M source of visible and invisible LED radiation. Directly viewing the LED output with certain optical instruments (for example, eye loupes, magnifiers and microscopes) within a distance of 100 mm may pose an eye hazard.

2.1.1 Turning the Projector ON

1. Flip ON the Power switch on the LM (Light Module). The projector takes about 2 minutes to initialize.
2. When the LED display shows 2 dashes and the status light is yellow, press the POWER button, and then the UP arrow on the remote control.
3. Press one of the Input keys on the remote to select and display the image for the source connected in [2.2 Connecting Sources, on page 2-2](#). For more information on the keys available on the remote and their function, see [3.1 Using the IR Remote, on page 3-1](#).

2.1.2 Disconnecting the Projector from AC

⚠ WARNING Do not turn the main Power switch to the OFF position, or disconnect the projector until the cooling fans have stopped.

If you need to check the power connections, an interconnection label is available for reference on the light module.

1. Stop the projector.
2. After the internal cooling fans stop, move the main power switch on the Light Module to the OFF position. This gives the Light Module enough time to cool down.
3. Disconnect the line cord from the wall outlet. Refer to [Section 7 Specifications](#) for complete details on all power requirements for the projector.

2.1.3 Re-connecting the projector to AC

If you need to check the power connections, an interconnection label is available for reference on the light module.

Connect a correctly-rated line cord to the AC receptacle located on the electronics module and use the 3-pronged end into a grounded AC outlet. The input voltage to the projector must be capable of 100-240 VAC.

NOTE: Do not use a line cord or AC supply not in the specified voltage and power range. Refer to Section 7 Specifications for projector power requirements.

1. Connect an approved line cord to the AC receptacle on the projector, located on the Electronics Module.

NOTE: Use only the line cord supplied with the projector or a power cord of correct ratings that comply with regional standards.

2. Connect the 3-pronged end of the line cord to a grounded AC outlet. The outlet must be near the equipment and easily accessible.

2.2 Connecting Sources

All source connections are made to the input panel of the Electronics Module. Each input is labeled for easy identification. Using the correct cable(s), connect your source. Sources are connected to the *Input Panel* located at the top of the EM. The Input Panel has slots for 1 image processor board, and up to 4 Input cards. Input cards are hot swappable; they can be plugged in and out while the projector is running. Sources can also be plugged in and out while the projector is running. The image processor should only be replaced when the projector is OFF or when it is in STANDBY mode.

The video card that is installed in your projector determines the type of video source you can use. These video cards are supported:

- Twin HDMI (High-Definition Multimedia Interface)
- Analog BNC
- Dual SD/HD-SDI (Serial Digital Interface)
- Dual Link DVI
- Video Decoder

These cards slide into any of the available Option slots. One or more of the Option slots may be used with any combination of option cards, including multiples of the same card type. There may be up to 2 active Inputs displayed at any time, either from 1 card or from 2 cards. These 2 inputs can be routed to outputs or to the main or PIP video image. **NOTE:** Use only high quality shielded cables for all connections.

LEDS

LEDs are located on the faceplate of each Input card, and indicate the following:


- Power ON - Green
- Signal Valid - Green
- Signal Invalid - OFF

DVI Digital Video

- Use the DVI-I connector to connect either analog or digital video devices to the projector. Use a cable with DVI-I connectors at both ends to connect devices that transmit digital and analog video signals such as high-quality DVD players, satellite receivers and digital cable TVs.
- **NOTE:** For true digital output from devices that transmit digital signals, connect to the DVI-I connector.

Dual Link DVI Input Card


This card accepts a single DVI signal over a DVI-I connector and analog video signals over the DVI-I or 15-pin VGA connector. The module can simultaneously support a digital signal on the DVI input and an analog signal on the VGA port; however it does not support 2 analog signals at the same time. There are 4 LEDs on the module faceplate. PWR indicates that power is applied and the card is initialized, and the other three LEDs on the right-side of the corresponding connectors indicate that a valid signal has been detected.

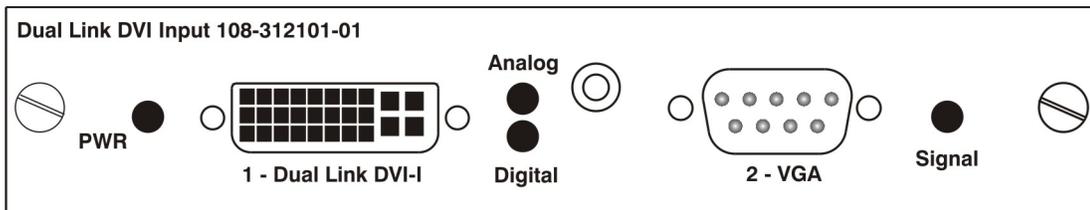

Twin HDMI Input Card


This card accepts 1 or 2 HDMI inputs, and can route one or both inputs to the card’s outputs. Any input from any card can be looped out of this card. The output label **1-OUT** loops out the main image being displayed on the projector. The output labelled **2-OUT** loops out the image displayed in the picture-in-picture (PIP). Any input from any optional input card can be looped out of this card.

There are 5 LEDs on the module faceplate. The PWR LED on the left side indicates power is applied, and that the card is initialized. The LEDs to the right side of the corresponding connectors indicate that a valid signal is detected. In the case of the outputs, the LED indicates that a signal is currently being looped out.

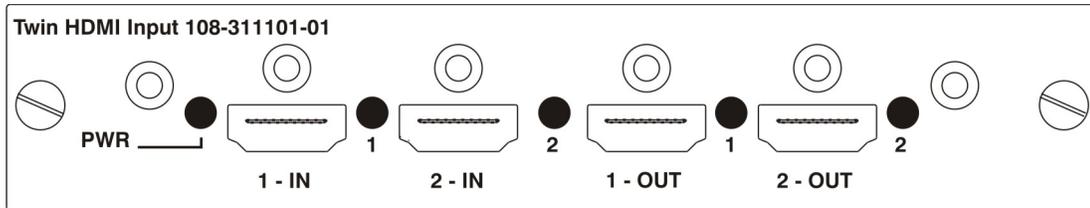


Analog BNC Input Card

This card accepts several types of Sync modes. In 5-wire Sync mode, all 5 BNC connectors are used. If H/C and V connectors are swapped, this card will still operate normally. An analog graphic source such as a VGA from a PC can be connected. The card can operate in 4-wire Sync mode, which accommodates 4-wire RGBC sources. The composite Sync cable can be connected to either the H/C BNC or the V BNC. The card supports 3-wire RGB or YPBPr Sync modes, sometimes called Sync-On-Green (SOG). In this mode the H/C and V connectors are not used. The Sync is connected to the Green/Y BNC connector. This card offers no loop out capability. There are 2 LED's on the module faceplate. PWR indicates power has been applied, and the card is initialized. Signal indicates a valid signal has been detected.

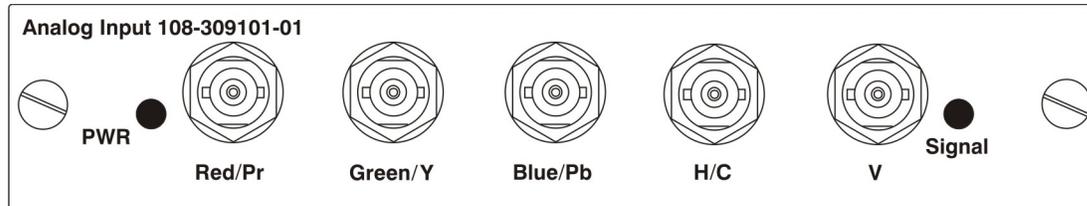

Dual SD/HD - SDI Input Card

This card accepts both standard-definition (SD) and high-definition (HD) serial-digital-interface (SDI) signals from one of two SD or HD SDI sources. Both single-link HD and dual-link HD signals are accepted. The card has two SD/HD-SDI outputs, each of which is “loop through” for its respective input. There are three LEDs on the module faceplate. PWR indicates power has been applied and the card is initialized, and the two signal LEDs indicate a valid signal has been detected on the respective input.

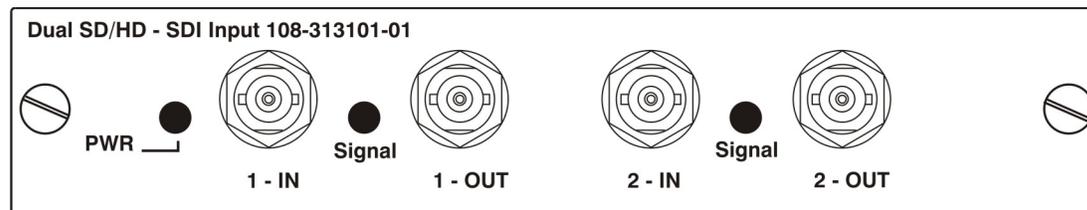


Video Decoder Input Card

This card accepts and decodes SD video. This includes CVBS (composite video), S-Video, and component sources. This card supports as many as 6 video signals, four of them on BNC connectors and 2 on 4-pin mini-DIN connectors. Each mini-DIN connector accepts one S-Video signal. The first BNC accepts composite video (only), while the remaining 3 BNCs can be grouped to allow one of the following combinations:

- 3 CVBS sources on 4, 5 & 6
- 1 CVBS source, 1 S-Video source: Luma (Y) connected to 4 (Sy) and Chroma (C) connected to 6 (Sc)
- 1 YPbPr source: component signal on 4(Pr), 5(Y) & 6(Pb)

The video decoder Input card has 8 LED indicators. The PWR LED indicates that the module is installed properly, and has been successfully configured. The YPbPr LED indicates that a valid component signal has been detected on inputs 4, 5, and 6 (Component Input grouping must also be selected in the projector menu. Refer to [Section 3 Operation](#). The remaining LEDs are each associated with one of the inputs and indicate that a valid signal has been detected on that input.

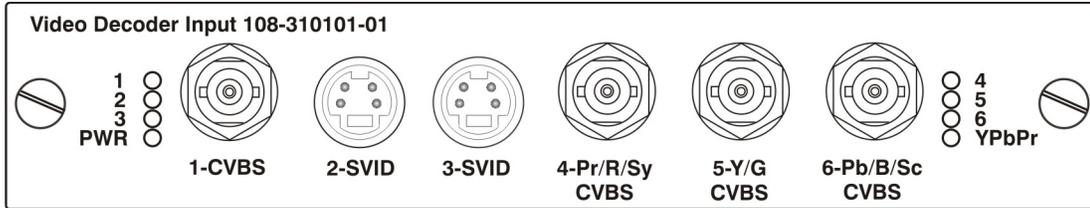

2.3 How Color Settings Interact in a Entero Array

Image Settings > Color Space tells the projector how to interpret video data coming in. See [Color Space, on page 3-21](#).

Image Settings > Advanced Image Settings > Color Settings adjusts the color temperature. Use ArrayLOC color and color temperature settings instead. When enabled, ArrayLOC overrides the settings on the Color Settings menu. See [Color Settings, on page 3-29](#).

Configuration > Geometry & Color > Manual RGB Adjustment is the manual way to set the levels of each LED. These adjustments are available when ArrayLOC is OFF or set to Fixed mode. When ArrayLOC is set to Cool or Bright mode, LED levels are controlled by ArrayLOC function automatically.

Configuration > ArrayLOC > Array Color Target tells the projector what you expect to see on the screen. This is the recommended way to control the color space for the projector and array. See [Array Color Target, on page 3-43](#). This menu is also available under Configuration > Geometry & Color.

Configuration > ArrayLOC > Projector Color Adjustment lets you adjust each projector output so that it represents the color target. Adjustments compensate for projector-to-projector differences and for the projection system as a whole, including loss of brightness or color shift due to lens, mirror, and screen. For example the mirror might not reflect blue 100 percent, or the screen might absorb more blue. You can measure the output at the screen with a color meter and use this option to increase the blue until you get the array color target value at the screen. See [Projector Color Adjustment, on page 3-43](#). This menu is also available under Configuration > Geometry & Color.

Configuration > ArrayLOC > Projector Color Adjustment > White Brightness Adjustment lets you turn the brightness target adjustment into a meaningful number, for example a number that relates to Ft-L.

2.4 Optimizing the Projectors for the Source

1. Select **Image Orientation** in the **Configuration > Output Settings** menu, and change the orientation of the displayed image to suit the installation. For example, for Christie cube installations, select **Rear Projection Inverted**.
2. Assign a unique projector ID number for each projector.
3. If the projectors are connected serially, enable **Broadcast Key** in the **Communications** menu. This allows you to switch between communicating with one or all projectors.
4. Display the source to optimize.
5. Select **Auto Setup** to give the projector a chance to setup the best possible settings for the chosen incoming signal.
6. Make sure that the **Processing Mode (Image Settings)** menu is correct for the selected source.
7. Change **Resize Presets** if you want the image displayed at a resolution other than *native*.
8. For analog sources, adjust **Pixel Phase** and **Pixel Tracking** from the **Size and Position** menu to eliminate noise from the displayed image.
9. ArrayLOC automatically adjusts projector colors and brightness. Ensure that ArrayLOC is enabled.
10. If required, adjust image **Blacklevels** and **Input Levels**.
11. If required, optimize Projector Color and Brightness, see [Managing Colors with ArrayLOC on page-3-55](#).
12. If required, adjust brightness uniformity, see [Adjust Brightness Uniformity on page-3-40](#).

3 Operation

⚠ WARNING Refer to Safety Warnings and Guidelines in 5 Maintenance.

This section describes the controls and switches used for basic projector operation once it is properly installed, aligned, and configured by a Christie accredited service technician. You can access projector controls and settings with the standard IR remote, or with laptop using the web interface. This chapter focuses on the use of the remote and the projector menus. For information about access the same functionality through the web interface, refer to [Appendix B: Web User Interface](#).

3.1 Using the IR Remote

⚠ WARNING Laser radiation is emitted from the laser diode in the remote. Do not look directly into the laser beam.


The standard IR remote can be used as a wired or wireless control. Under optimal conditions, the wireless keypad can communicate with a projector over a 100 foot distance. In wireless mode, the standard IR remote communicates with the projector with a battery-powered infrared (IR) transmitter.

Use the standard IR remote the same way you would use a remote control supplied with a TV or DVD player. When pressing a function key, direct the standard IR remote toward the projector's front IR sensor. The IR sensor on the projector will detect the signal and relay the commands for internal processing. A laser pointer is built into the standard IR remote. Refer to [3.1.1 IR Remote, on page 3-2](#).

Keep these guidelines in mind:

- Press keys one-at-a-time; there are no simultaneous key combinations required.
- **NOTE:** To use *Power, Shutter, and OSD functions*, press the appropriate button, and then press the UP arrow to switch ON or the DOWN arrow to switch OFF: You can also press-and-hold the appropriate button for 2 seconds, or press it twice quickly. Refer to [3.1.1 IR Remote, on page 3-2](#).
- Arrow keys are held down for continuous adjustment/movement in the related key direction.
- **NOTE:** In serial networks, pause briefly between adjustments to make sure that more distant projectors can “keep up” with the commands. If you press a key while the projector is still responding to the previous action, such as during power-up, the second key press may not take effect.
- Refer to [3.1.1 IR Remote, on page 3-2](#) for the description of those keys provided on the standard IR remote keypad.

3.1.1 IR Remote

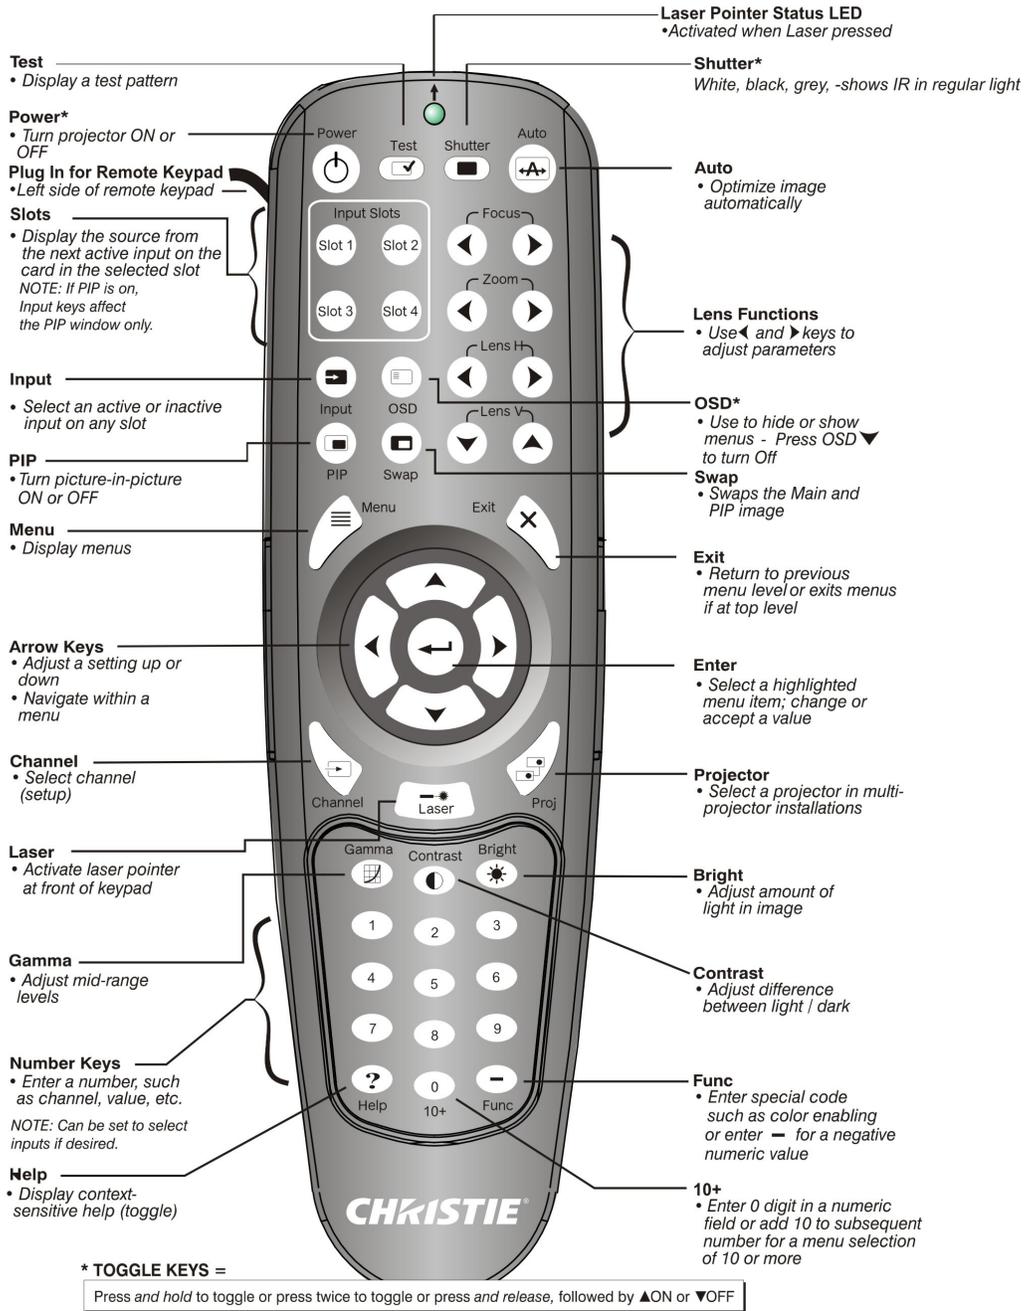

3.1.2 Wired Remote

You can convert the standard IR remote into a wired remote using the optional cable. Connect one end into the standard IR remote, and the other to the XLR connector labeled Remote on the Electronics Module. The wired remote is recommended when the lighting conditions are unsuitable for proper IR transmission.

To use the wired remote, make sure that wired remote support is enabled on the projector the remote is connected to: **Main Menu > Configuration > Communications > Wired Keypad Enabled.**

To use the wired remote to control multiple projectors in an ArrayLOC network, ensure that wired remote support is enabled on the controlling projector, and make sure that key synchronization is enabled on the controlling projector and on all the receiving projectors: **Main Menu > Configuration > ArrayLOC > ArrayLOC Configuration > Synchronize Keys, Test Pattern, Color Enable.**

NOTE: Batteries are not required for the wired remote projector control to operate; however, if the laser pointer is required batteries must be installed in the remote.

3.1.3 IR Remote Commands

Specific keypad commands are explained.

⚠ CAUTION The projector is a class 2M source of visible LED radiation. Directly viewing the LED output with certain optical instruments (for example, eye loupes, magnifiers and microscopes) within a distance of 100 mm (3.94") may pose an eye hazard.

Power ON/OFF

Press and hold POWER for 2 seconds or press twice quickly to power the projector ON or OFF. Or, press and release POWER followed immediately by the UP arrow key (ON) or DOWN arrow key (OFF) to guarantee that the correct action is initiated. This is useful if you are unsure of the present state of the projector.

Test

Steps forward through all internal test patterns. After stepping past the last test pattern, you will return to current input. Press TEST and then cycle by using the LEFT or RIGHT arrow keys, to cycle in either direction through the test patterns. Press EXIT to return to the current input.

Auto

Initiates an automated process in which the projector optimizes critical display parameters such as size, position, pixel tracking, etc., for the current source. These parameters are listed in **Table 3.1**. An auto setup can save time in perfecting a display, and you can modify the adjustments as desired.

Table 3.1 Auto Setup

OPTIMIZES	SETS TO DEFAULT
Pixel Tracking	Contrast
Pixel Phase	Brightness
Size and Blanking	Auto Input Level (OFF)
Vertical Stretch	Detail (if video source)
Position	Filter
Input Levels	Luma Delay

NOTE: You must have an unlocked channel present to use Auto Setup.

The best Auto Setup will be obtained under the following conditions:

- **Input levels:** It is best to have an image with saturated (very bright) colors.
- **Phase:** High contrast edges are needed.

To determine Active Window size:

- Video images should have whites and blacks in the image.
- Wide range video images should have content (including white) that extends to all edges of the image.

Channel

Select a specific source setup (channel) defined and stored in projector memory. Once you hit the CHANNEL key and enter a two-digit channel number (or, if there is a list displayed, highlight it and press ENTER), the display will automatically change and update according to the numerous setup parameters defined for that channel. For more information about channels, inputs, and slots, see [3.3 Using Inputs and Channels, on page 3-10](#).

NOTE: A new channel is automatically created if you adjust an image from a new source. 2) Channel key behavior during a presentation depends on whether or not the Display Channel List option is enabled in the Menu Preferences menu. You can choose to use a scrollable list of channels when you press Channel, or you may prefer to enter the desired channel number “blind”, i.e., without on-screen feedback. See [Menu Preferences](#) discussed later in this section.

Slot 1, 2, 3, 4

Press a SLOT key to select the input card in that slot. Press the SLOT key again to display the next active INPUT on the card. Press a different SLOT key to select a different input card. For more information about channels, inputs, and slots, see [3.3 Using Inputs and Channels, on page 3-10](#).

Input

Displays all inputs in all slots, both Active and Inactive. Press INPUT once and scroll through the list to select an Input for the main image. Press INPUT again to show the list, and select the secondary image. For more information about channels, inputs, and slots, see [3.3 Using Inputs and Channels, on page 3-10](#).

PIP

Switches the secondary image (Picture-In-Picture or Picture-By-Picture) ON or OFF.

Swap

Swaps the main and secondary images.

Contrast

Changes the level of peak white in your images. Use LEFT/RIGHT arrow key until you reach the desired level of contrast. For best results, start low and increase so that whites remain bright, but are not distorted or tinted, and that light areas do not become fully white (i.e., “crushed”). Conversely, low contrast causes dim images.

Bright

Increases or decreases the black level in the image. Use LEFT/RIGHT arrow key until you reach the desired level of brightness. For best results, start high and decrease so that dark areas do not become fully black (i.e., “crushed”). Conversely, overly high brightness changes black to dark grey, causing washed-out images.

Gamma

Determines how grey shades are displayed between minimum input (black) and maximum input (white) for a given amount of signal. The proper setting helps maintain optimized blacks and whites while ensuring a smooth transition for the “in-between” values utilized in greys. Unlike brightness and contrast controls, the overall tone of an image can be lightened or darkened without changing the two extremes, and your images will be more vibrant yet with good detail in dark areas when using the Gamma control. The nominal setting for Gamma Correction of 0 is correct for most signals and conditions. If excess ambient light washes out the image and it becomes difficult or impossible to see details in dark areas, increase the gamma correction setting to compensate.

Number Keys

Press 1 to 9 to enter a value in a text box or to select a menu item.

10+

Press 0 (zero) before pressing another number to enter a number greater than 9. For example, press 0 (zero), then 2 to enter the number 12 as a menu selection.

NOTE: *When entering numbers in a text field, the 0 (zero) button only acts as zero. See 3.2.5 Editing Text, on page 3-9.*

Help

Press HELP to display context-sensitive help. Press HELP again to close the Help window.

Menu

Press MENU to enter or exit the projector’s menu system.

OSD (On-screen display)

Press OSD and then the DOWN arrow to hide the projector’s menu system during use.

To see the menus again, do one of the following:

- Press and hold OSD for 2 seconds.
- Press and release OSD followed immediately by the UP arrow.
- Press OSD **twice**

Invisible menus are fully functional, enabling “hidden” access to numbered features and image adjustments by entering the corresponding sequence of key presses on the IR remote keypad.

NOTE: *With OSD “ON”, you can still hide error messages and slidebars by disabling these options in the Menu Preferences menu (Main Menu > Configuration).*

Shutter

The shutter is open upon power-up. Press and hold SHUTTER to move between simulated shutter states in the order; OPEN-CLOSED-WHITE-OPEN. Or, press and release SHUTTER followed immediately by UP arrow key (Closed) or DOWN arrow key (Open) to guarantee the correct state.

Close the shutter to block the displayed image while maintaining access to projector functions.

The white shutter state allows you to view menus and images if RGB brightness is set to 0. The LED status display shows SH when the shutter is in either black or white modes.

Function Key


In a Numeric Field in a Menu: Use FUNC to enter a negative number.

In a Text Field: Press FUNC followed by:

- the UP arrow key or DOWN arrow key to convert between capital and lowercase letters.
- the LEFT arrow key or RIGHT arrow key to insert or delete a character.
- the ENTER to delete all characters.

Within a Presentation: Press FUNC followed by 2 numeric numbers to enable a specific color or colors in the display (see right). For example,

will display only red, and will display green data. Eliminating one or more colors can help with certain diagnostics and setups, such as when accurately overlaying one image on top of another from stacked projectors.

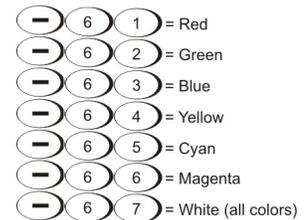

NOTE: Color enabling can also be implemented from numerous locations within the menu system.

Figure 3-1 Function Key

Press FUNC followed by HELP to disable **Keystone**, **Edge Blending** and **Brightness Uniformity** settings. This will disable the features without changing the settings associated with them.

Proj

Press PROJ to access a specific projector within a group of projectors or to confirm if the local projector is listening. The number in the “**Enter Number**” window indicates which projector is currently listening to commands and will match the projector address defined in the **Configuration > Communications** menu. The **Proj** check box (read-only) shows whether or not the projector physically connected to a remote is listening to commands from that remote. A checkmark means that connected projector is listening; if there is no checkmark, you are communicating with a different projector. To control a specific projector with the keypad, press PROJ and then enter the 3-digit number assigned to the projector you want to use. If you switch to a projector other than the one you are currently using, the checkmark will disappear. To broadcast to multiple projectors, press PROJ and then PROJ again without entering a projector number. Keypad commands will then affect all projectors present.

NOTE: The projector address can be set in the *Configuration > Communications* menu.

Enter

Press ENTER to select a highlighted item, to toggle a check box, or to accept a parameter adjustment and return to the previous menu or image.

Exit

Press EXIT to return to the previous level (the previous menu).


NOTE: EXIT *does not save changes within text editing boxes (including number editing of a slide bar value) or within drop-down lists. It acts as a “cancel” in these cases.*

Arrow Keys

Use the LEFT/RIGHT arrow key to change a slide bar value or to select a different option within a drop-down list without having to first scroll through options or navigate within a menu, drop-down list, or text box.

Laser


Press and hold LASER to activate the laser pointer on the remote. Point the remote at the screen to highlight an area of your presentation. The LASER pointer requires batteries in the wired remote in order to work.

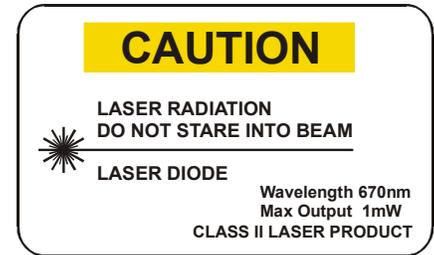

3.2 Navigating the Menus

3.2.1 Main Menu

Most of the projector controls are accessed from within the projector menu system. There are several groups of related *functions*, with each group selectable from the **Main Menu**. Press MENU at any time to display this **Main Menu**.

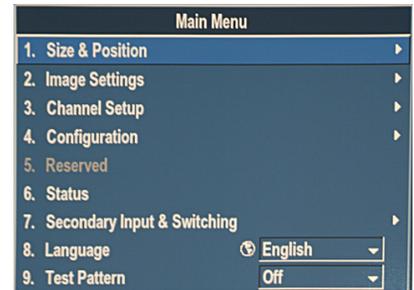

On the remote keypad, enter the number corresponding to the function menu you wish to access, such as 2 for the **Image Settings** menu. Or use the UP/DOWN arrow key on any keypad to highlight the desired option, then press ENTER. The corresponding function menu or drop-down list of further options will appear.

With a function menu displayed, enter a menu option number for any numbered option, or use the UP/DOWN arrow key to highlight the desired option and then press ENTER.

Long menus have a scroll bar on the right—use the arrow keys to access the remainder of the menu. Locked items or items that do not pertain to the current action or condition appear dimmed and cannot be selected.

When finished with a function menu:

- Press EXIT to return to the previous screen.


OR

- Press MENU to leave the menu system and return to the presentation.

NOTES: 1) *If there is no signal present, all source-dependent adjustments are disabled. 2)* *After 15 minutes of inactivity, the projector exits the menus and returns to the presentation. 3)* *The Status menu is read-only.*

3.2.2 On-line Help

Press HELP to display summary information about the current menu or highlighted option. Press HELP again to exit.

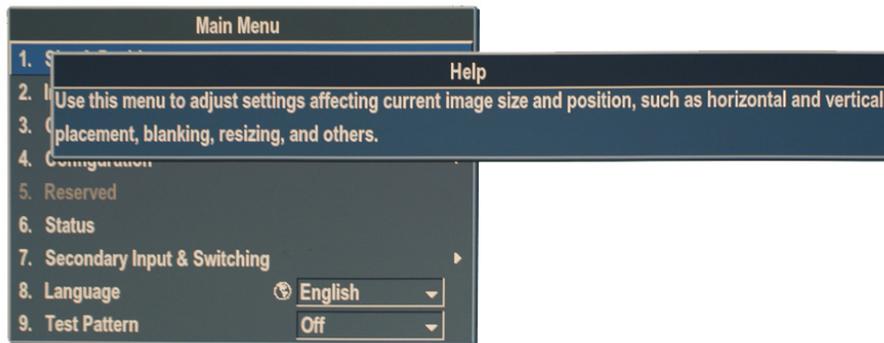

3.2.3 The Global Icon



Menu options that include this icon apply universally. Menu options without this icon apply to the selected channel only.

3.2.4 Using Slide bars and Other Controls

Most of the function menus allow you to change settings by using slide bars, check boxes, and drop-down lists. Navigating options:

Enter the menu option number corresponding to the setting you wish to change (for example, press MENU 1 3 to select “Vertical Stretch” in the **Size and Position** menu).

- Move the highlight to the option desired and press ENTER.
- Move the highlight to the option desired and press LEFT/RIGHT arrow key to adjust immediately. Both the number and the length of the bar change accordingly. See **Figure 3-2**. Hold for continuous adjustment.
- You can bypass the menus entirely and use a single key to immediately access an adjustment during your presentation (applies only to options having their own key, such as CONTRAST, BRIGHT, GAMMA, etc.).
- For “blind” access, hide the entire menu system (see *OSD (On-screen display), on page 3-5*) and access using the proper sequence of key presses.

Slide bars in menus: The current value for a given parameter, such as size or vertical stretch, appears to the left of its slide bar icon (adjustment window). This number often expresses a percentage, or it may have units associated with it (such as pixels), depending on the specific option.



Figure 3-2 Slide Bar Example

Press LEFT/RIGHT arrow key to gradually adjust the setting up or down—both the number and the length of the bar change accordingly. Hold for continuous adjustment.

Press ENTER to activate a slide bar text box for specific number entry via the keypad and then press ENTER to save (or press EXIT to cancel).

“Direct” slide bars: For quick access, to Gamma, Brightness, and Contrast slide bars without traveling the menu system. Press GAMMA, BRIGHTNESS, or CONTRAST to display the contrast slide bar. Use the arrow keys to adjust a direct slide bar, or press ENTER and enter a specific number from the keypad, then ENTER or LEFT ARROW key or RIGHT arrow key to save (or EXIT to cancel). When you are done, press EXIT to save and return to your presentation.

NOTES: 1) You can still adjust a direct slide bar as usual if the display is turned OFF (see OSD or Menu Preferences menu) — the slide bar won't be visible. **2)** A direct slide bar disappears if it is not used within five seconds.

Check boxes: A conditions is present if its adjacent check box contains a checkmark. To toggle the check box, highlight and press ENTER, or highlight and use RIGHT arrow key to check and LEFT arrow key to uncheck. If a check box is numbered, enter its number to immediately toggle the check box.



Figure 3-3 Check Box Example

Drop-down lists: To see a list of options available for a given parameter:

- Highlight the list and press ENTER; or
- Enter the menu option number
- Use the UP arrow key or DOWN arrow key to navigate up and down within the list. Press ENTER to choose an option from the list.
- To quickly scroll through a list without first pulling it down, highlight the option and use LEFT arrow key or RIGHT arrow key. Press ENTER when the desired choice appears.


NOTES: 1) Press LEFT arrow key or RIGHT arrow key to jump between pages in an extra long drop-down list. **2)** Press EXIT while in a drop-down list to cancel any change.

3.2.5 Editing Text

Activate the Edit Window: To enter or edit text, highlight the desired parameter (such as a channel name) and press ENTER to activate its adjacent edit window. Any previously entered text is displayed with its first character highlighted in a square cursor, signifying that this character is ready for editing.


Navigate Within the Edit Window: Press RIGHT arrow key to move the cursor forward or LEFT arrow key to move the cursor backwards as desired.

Edit a character: To edit a highlighted character, use UP arrow key and DOWN arrow key to scroll through the alphabet, numbers, spaces and punctuation available. When the character you need is highlighted, press RIGHT arrow key to select it. The cursor will move to the next available character of current text.

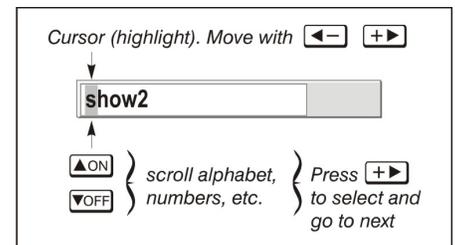

Change Case: To convert a lower case letter to a capital letter, position on the letter and press FUNC followed by the UP arrow key simultaneously. To convert a capital letter into a lower case letter, position on the letter and press FUNC followed by the DOWN arrow key.

Add or Delete a Character or Space: To insert a space at the cursor location, press FUNC then the RIGHT arrow key simultaneously. To delete a highlighted character (or space), press FUNC then the LEFT arrow key simultaneously.

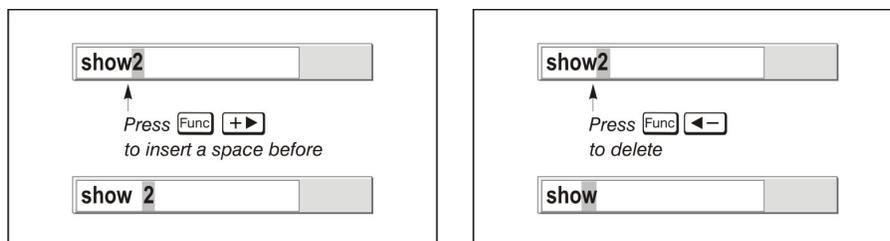

Delete all Characters: Press FUNC followed by ENTER.

Press ENTER When Finished: To accept edits and leave the edit window, press ENTER.

NOTE: Press EXIT at any time to cancel changes and return to the previously-defined text.

Edit numerical values: Enter numbers directly from the keypad to specify numbers representing projector channels (source setups), or slots. As each digit is entered, it is inserted on the right of the field, and the numbers already in the field are shifted to the left.

Channel numbers are defined with 2 digits—for example, if you enter only a single digit (such as “7”) for a channel number, the channel will automatically be defined as “07”. Enter “07” to use this channel. If you press any non-numbered key, the number entered up to that point is accepted and updated as the new value. Press EXIT to cancel editing of numerical values.

3.3 Using Inputs and Channels

The projector allows you to define, store and recalls up to 99 different channels (customized setups or configurations) for a variety of inputs. Depending on what you have defined, each physical source connection (i.e., input at the projector) can have several different channels associated with it.

- Slot refers to an input card installed in the projector. There are 4 Input card slots.
- Input refers to both the physical connector on the Input card and to the media source connected to it. Each Input card can have one or more inputs.
- Channel refers to the setup parameters for a media source input. The parameters include the Slot and Input, Input type, and Input resolution.

NOTE: See [Section 2 Setting Up a Source](#), for a full explanation of how to connect sources to the projector.

3.3.1 Inputs

An input is a source physically connected to the projector. **Input** describes the source signal and which input slot it is connected to.

Switching Inputs

To select an input using the IR remote:

- Press the INPUT key. This will display a list of the four slots, with the card type and input signal type in each slot. The currently selected input for the main image will be highlighted. Scroll up or down through the list and press ENTER to make a new selection. Press the INPUT key again to show the list and allow the selection for the PIP image. Repeatedly pressing the INPUT key will toggle between the main and PIP image.
- Press the appropriate SLOT key (1-4) to quickly display one of the 4 Inputs connected to the projector for the Main image. Press SLOT again to select a different Input. This will not display any menu selection, and is only applicable for the Main image.

To select an input using the menu system:

- Use the menu options **Menu > Secondary Input & Switching > Main Input** and **Menu > Secondary Input & Switching > Secondary Input** to select the source of the image for the main or secondary image.



With any of these methods, the image will be displayed according to the following:

- If it is the first time you have used the source/input (or if you used the input but did not define a channel by adjusting anything), the projector will recognize the new input signal based on its frequencies and polarities, automatically displaying an image according to default settings for that signal. In general, the image from the new source will be as large as possible without losing its aspect ratio. This and other default image settings depend on the incoming source.
- If you used the source once before and changed a display parameter, such as contrast, V-Position, etc., then a channel was automatically created and still exists in projector memory (see [Creating a New Channel, on page 3-12](#) below). Using one of the input or slot keys will automatically recall this channel—and all its setup parameters—and will update the display accordingly. If more than one channel exists for the input, the image will be displayed according to the setup parameters for the first channel with matching characteristics.

3.3.2 Channels

A channel is a collection of measurements, locations and settings that tailor the display of a signal to your specific needs. Since source types and applications can vary greatly, you will likely want to adjust and define a wide variety of parameters, such as brightness, contrast, size, etc., in order to customize and optimize the display from or for a particular source. For example, the display settings you choose for a VCR source may be very different from those you choose for a high-resolution computer source. Once you have adjusted a display parameter, such as pixel tracking or contrast, all current settings are collectively stored in projector memory as a unique 2-digit channel, such as 09. You can have numerous distinct channels available for the same input, any of which can be selected by using the CHANNEL key on the keypad followed by the two-digit channel number. Shown in **Figure 3-4** is a sample channel list of channels available for **Main Channel: 03**.

Current Channel#

Channel#	Slot Input	Signal Type	Horizontal Frequency	Vertical Frequency
Main Channel: 03				
01.	1,1	pDVI	77.14kHz-	p59.94Hz+
02.	1,1	pDVI	77.14kHz-	p59.94Hz+
03.	1,2	p5W	63.98kHz-	p60.02Hz+

i-Interlaced
p-Progressive

Figure 3-4 Channel List

NOTE: The CHANNEL key may display a channel list or not, depending on what you have defined for “Display Channel List” (see Menu Preferences later in this section).

Creating a New Channel

To use a new source with the projector, a new channel must be created so that the projector will respond to an input signal from that source. A new channel can be created automatically, or it can be copied from an existing channel and then edited as necessary. See [Copying a Channel, on page 3-14](#). When you select a direct input (SLOT 1, SLOT 2, SLOT 3, or SLOT 4), any existing channels in the projector are searched for matching input and signal parameters – this only occurs if **Auto Source** is enabled on these channels. If no match to the incoming input signal is found in currently defined channels, a new channel is temporarily created based on factory-defined defaults for this type of signal. The channel number assigned is the lowest available number from 01-99.

NOTES: 1) An automatic channel will be discarded unless one or more of its parameters are changed and it will not appear in the channel list. **2)** If 2 channels have the same distinguishing source characteristics except for the reversal of sync connectors (i.e., H-sync and V-sync, are switched), they are still defined as distinct channels. **3)** You cannot define a new channel without an incoming signal.

Using a Channel

You can normally select a channel from the **Channel Setup** list at any time by pressing the CHANNEL key. If you want to hide a channel from appearing in this list, you must deselect the **In Menu** option (check box - see [IN MENU on page 3-15](#)) for that channel. If you wish to access the channel, press the CHANNEL key and enter its associated number.

Channel#	Slot Input	Signal Type	Horizontal Frequency	Vertical Frequency
Main Channel: 03				
01.	1,1	pDVI	77.14kHz-	p59.94Hz+
02.	1,1	pDVI	77.14kHz-	p59.94Hz+
03.	1,2	p5W	63.98kHz-	p60.02Hz+

TO CHANGE CHANNEL:
Enter 2 digit Channel#
or
Move highlight and press Enter

NOTES: 1) The current channel is highlighted in the channel list, or if the current channel is hidden, the first channel in the list is highlighted. **2)** Channels created automatically do not appear in the channel list unless a parameter for the channel was changed. See [Creating a New Channel on page-3-12](#).


Channel Setup Menu

All available channels are listed in the **Channel Setup** menu, which describes how each channel can be accessed and provides access for editing, copying and deleting channels Press MENU then 3 (Channel Setup). The **Channel Setup** menu appears.

The far left column lists channel numbers defined in sequential order, unless you have deleted a channel. Refer to [Deleting a Channel, on page 3-14](#). The values in the far right columns indicate:

- Horizontal and vertical frequencies, or if there is a defined name for a channel, appear here. The H & V frequencies will not appear if a name has been defined for the channel; instead only the name is seen. The H & V frequencies are inserted as the name when the channel is first created. The vertical frequency is displayed with the sync polarity.
- The remaining columns pertain to each signal type, such as; input number, slot location, a variety of icons indicating access to each channel, and an abbreviated description of each signal type.
- A **Channel Setup Icon** legend is provided as a reference.

NOTE: Use UP and DOWN arrow keys to see the remaining channels not visible in the initial display of channels.

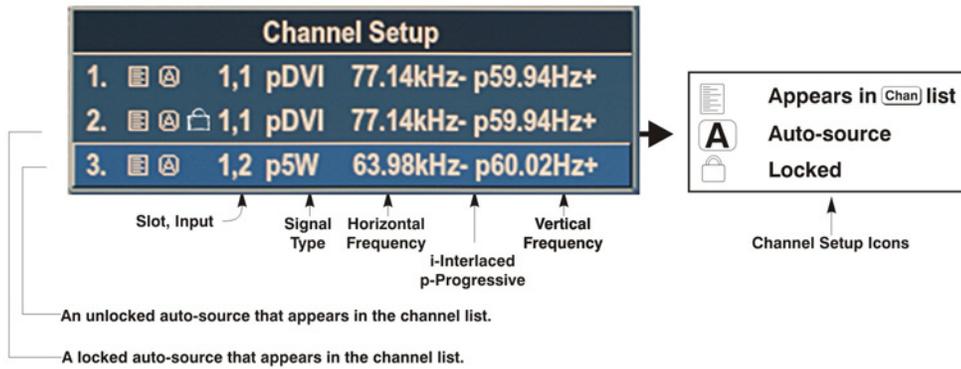

Signal Type

The channel list or the **Channel Setup** menu, identifies signal types abbreviations as defined below in **Table 3.2**. Composite Sync is on the H/C input or the V input (4-wire). These abbreviations are preceded by either an 'i' (interlaced signals) or 'p' (progressive signal).

Table 3.2 - Abbreviations for Signal Type


Abbrev.	Signal Type
--	No Sync
4WH	Composite (4 wire) on HC input
4WV	Composite (4 wire) on V input
SG	Sync-on-green (4 wire)
5W	Separate H,V (5-wire)
5WR	Separate H,V swapped (5-wire)
SVid	S-Video
CVid	Composite Video
Dig	Digital
DSDI	Digital Dual Link HD-SDI
DVI	Digital DVI
HDMI	Digital HDMI
HSDI	Digital HD-SDI
SDI	Digital SDI

The first 5 items in this table are analog RGB with various sync combinations indicating Sync Source when editing the channel.

Copying a Channel


Highlight the desired channel in the **Channel Setup** menu, then press **ENTER** to go to the **Select Channel Operation** submenu. Select **“Copy Channel”** and press **ENTER**—a new channel will be created. It is identical to the original, which still remains, but it is identified with the next available number from 01-99. If you change your mind and do *not* want to copy the current channel, press **EXIT** to cancel and return to the previous menu.

Copying channels is a quick method for creating numerous channels, each of which can then be edited and adjusted for a variety of presentations in the future.

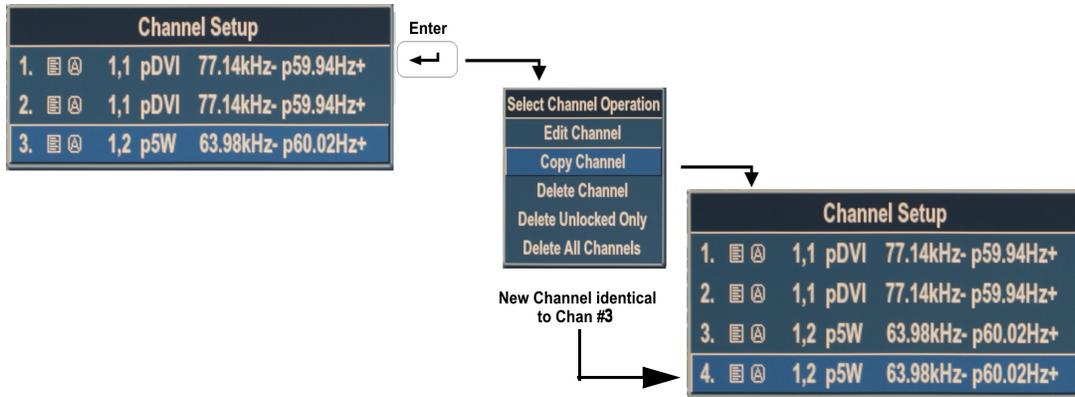

Deleting a Channel

Highlight the desired channel in the **Channel Setup** menu, then press **ENTER** to activate the **Select Channel Operation** submenu. Select **Delete Channel** and press **ENTER**—a window will appear to confirm the deletion of this channel.

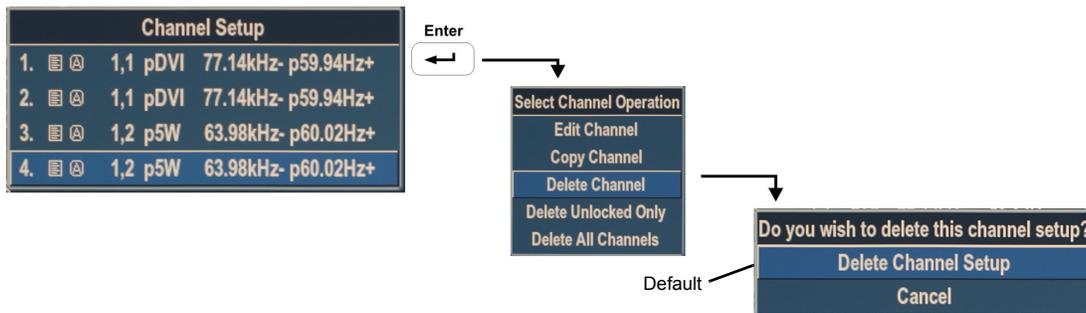

To Delete Multiple Channels

Highlight any channel in the **Channel Setup** menu and press **ENTER** to go to the **Select Channel Operation** submenu.

Select **Delete Unlocked Only** and press **ENTER** to delete all unlocked channels.

Select **Delete All Channels** to delete all channels, even those that are locked. In either case, the current channel will remain but will be redefined from projector defaults.

NOTE: For any deletion, a window will appear to confirm the deletion of the desired channel. Select **Cancel** (default) if you don't want to delete.

Editing a Channel

1. Press MENU from the presentation level to display the **Main** menu. To display the **Channel Setup** menu, press 3 or move the highlight to the **Channel Setup** option and press ENTER. The **Channel Setup** menu will appear.
2. To edit parameters shown in the **Channel Setup** menu, select the relevant channel and press ENTER. The **Channel Edit** menu will appear similar to the sample illustration on the right.
3. If desired, review and/or edit the following channel setups in the **Channel Edit** menu:

Channel Edit: 04	
Card Type	Dual Link DVI Input Card
H-Frequency	63.98 kHz-
V-Frequency	60.02 Hz+
Interlaced	No
Sync Source	Separate H,V
<hr/>	
1. Name	63.98kHz - p60.02Hz+
2. Channel	4
3. Slot	1
4. Input	2
5. In Menu	<input checked="" type="checkbox"/>
6. Auto Select	<input checked="" type="checkbox"/>
7. Locked	<input type="checkbox"/>
8. Previous Channel	
9. Next Channel	

Channel Edit Menu

• **NAME**

An alphanumeric label can be defined and/or changed here. Channel names can be up to 25 characters in length. The default name is the horizontal and vertical sync frequencies.

• **CHANNEL**

A 2-digit channel number can be changed here.

NOTES: 1) If you enter a channel number that already exists, a dialog message appears indicating that this number is already in use—assign a different channel number. **2)** You can define up to 99 channels.

• **SLOT**

1-4, corresponding to which slot in the projector input panel the source is connected.

• **INPUT**

1-6, corresponding to which input on the selected slot the source is connected.

• **IN MENU**

If checked (default, except for automatically defined channels with unchanged parameters), this defined channel will then appear in the list available when CHANNEL key is pressed. If unchecked, the channel must be accessed via CHANNEL on the keypad or via the **Auto Source** function.

NOTE: On-screen display of the channel list is an option that must be set in the Menu Preferences menu.

• **AUTO SELECT**

If checked, (default), the projector can automatically locate this channel when an incoming input signal matches. If not checked, the projector can locate the selected channel only when it is directly selected via CHANNEL on the keypad, and a change in input signal will not result in a channel change.

• **LOCKED**

If checked, all of the image settings for this channel are locked. If unchecked (default), all available image settings can be adjusted as desired. You cannot use **Auto Setup** with a locked channel.

• **PREVIOUS CHANNEL**

Select this option to see or change **Channel Edit** settings for the previous channel in the **Channel Setup** list.


- NEXT CHANNEL

Select this option to see or change **Channel Edit** settings for the next channel in the **Channel Setup** list.

3.4 Adjusting the Image

The most commonly-used options for image adjustments are accessed through two menus: **Size and Position** (MENU then 1) and **Image Settings** (MENU then 2), both of which appear in the **Main** menu. You can change settings affecting the image from the current channel by working with the appropriate slide bars, check boxes and drop-down lists from either of these two menus. EXIT returns to the previous menu (or to the presentation, if from the **Main** menu) and accepts any changes you may have entered. Settings are saved with the current channel. From your presentation, you can access any of the individual options in these menus by pressing MENU followed by the appropriate number keys representing their location in the menu system. For example, press MENU then 2 then 7 then 1 to quickly access the “**Gamma Settings**” option in the **Image Settings > Advanced Image Settings** menu.

NOTES: 1) Some frequently used display functions have dedicated keys on the IR remote. For example, press CONTRAST to access the contrast slide bar. Press EXIT to return to your presentation. **2)** To hide “direct” slide bars, disable the Display Slide bars check box in the Menu Preferences menu. **3)** To hide the entire menu system from view, turn off the on-screen display by pressing OSD then the DOWN Arrow Key.

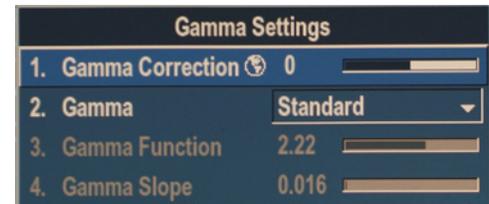

3.4.1 Automatic Image Setup

Auto setup is a good first step in setting up the image. Press AUTO on the remote. This optimizes critical display parameters such as size, position, pixel tracking, etc., based on the type of incoming source. An Auto Setup can save considerable setup time, and you can still adjust the image as described below.

The best auto setup will be obtained under the following conditions:

- Input levels: It is best to have an image with saturated (very Bright) colors.
- Phase: High contrast edges are needed.


To determine active window size:

- Video images should have whites and blacks in the image
- Wide range video images should have content (including white) that extends to all edges of the image.

3.4.2 Size and Position Menu

To increase or decrease the size of your image, change its proportion (aspect ratio), move the image to a specific area of the screen, and refine other related parameters, select **1. Size and Position** on the **Main** menu.

Use **Size and Position** controls to match the image precisely to the screen used at the site. Refer to [3.2.4 Using Slide Bars and Other Controls, on page 3-8](#) if you need help using any of the options and controls. Changes made in the **Size and Position** menu are applied immediately and are saved when you exit the menu (press EXIT or MENU).

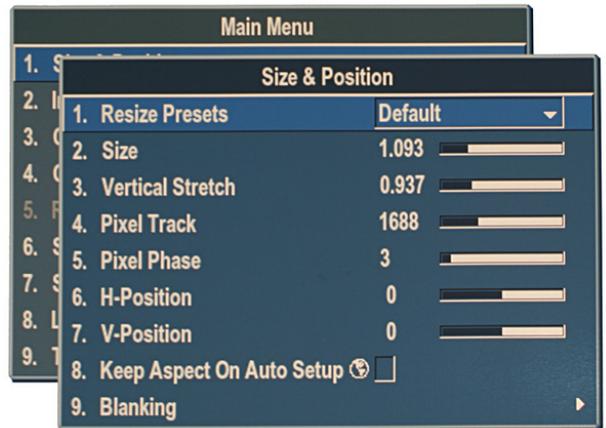


Custom Sizing Option

The “Custom” re-size option automatically appears in the **Size and Position** menu when any of the values for **Size**, **Vertical Stretch**, **H-Position**, **V-Position** or **Blanking** do not correspond to those for a preset. This option is not offered in the **Resize Presets** drop-down list.

Resize Presets


Resize Presets will display an image in its native resolution (no resizing) or will resize the image by maximizing either the height, width or both height and width, or will resize to the maximum size possible while keeping the original aspect ratio. **Size**, **Position** and **Blanking** parameters will automatically adjust accordingly or, if

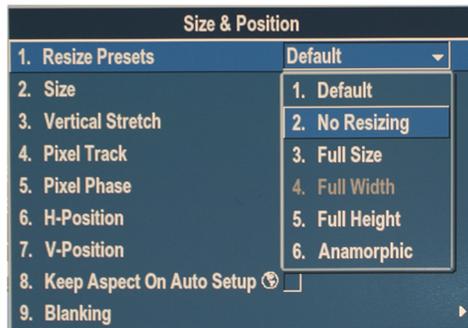


- = maximize for current source
- = display in native resolution
- = fill the screen (regardless of source)
- = fill display width & keep aspect ratio
- = fill display height & keep aspect ratio
- = retain 16:9 aspect ratio

Blanking is set first (which defines an Active Input Area), **Resize Preset** scaling will occur in this region of interest only. Resizing options are explained below.


- Select **DEFAULT** for most sources (factory default). The image will be centered and displayed as large as possible, depending on the type of source. By default when displaying a new source, your image will use as much of the projector display area as possible for the type of incoming source data, but with minimal or no changes to aspect ratio.

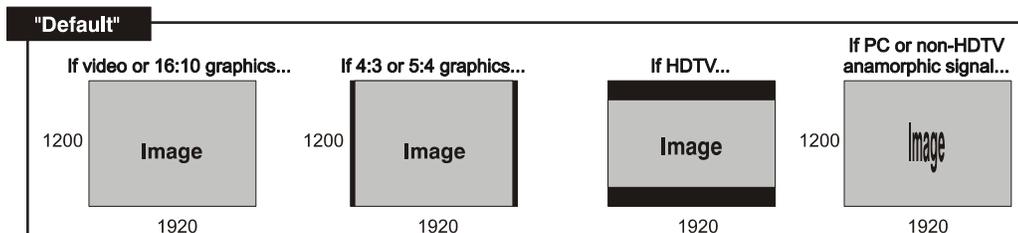


- **NO RESIZING** displays the image in its native resolution, which may or may not match the projector resolution. For example, for a source with a native resolution of 800 x 600, “**No Resizing**” in an SXGA+ projector will use the central 800x 600 pixels and have a black border—the black border areas are unused areas, see below.

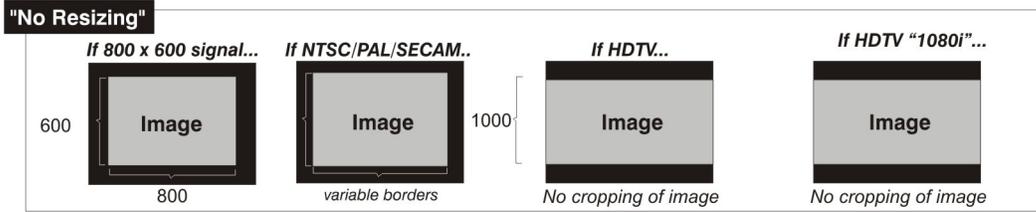


- **FULL SIZE** uses all pixels for displaying the image, regardless of source or original aspect ratio. Incoming source material having a different aspect ratio than the projector will be stretched for display.

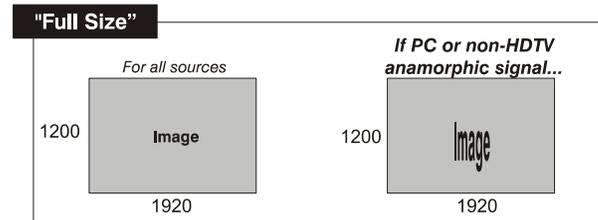


- **FULL WIDTH** fills the projector’s display from left-to-right without changing the original aspect ratio of the image. Depending on the source, data at the top and bottom may be discarded (cropped), or the display may have black borders at the top and bottom (called “letterboxed”).

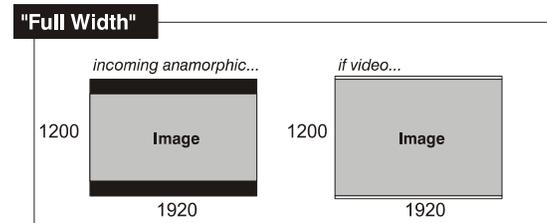

- **FULL HEIGHT** fills the display from top-to-bottom. Depending on the source, this may create borders.

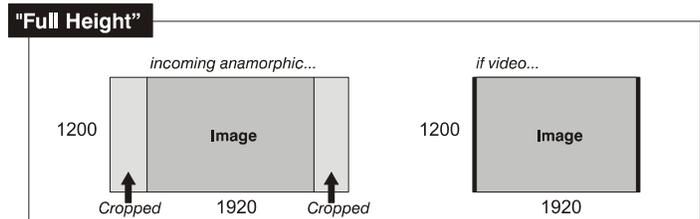

- **ANAMORPHIC** displays an anamorphic image in its native 16:9 aspect ratio. The image will fill the screen from side-to-side and be centered between black bars at top and bottom.

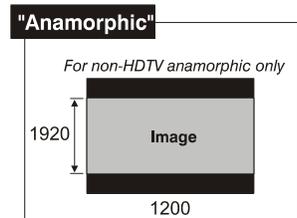

Size

Controls both the image width and height in tandem, maintaining the current aspect ratio of the displayed signal data.

Vertical Stretch

Adjusts the *height* of the image while keeping the width constant. Use “**Vertical Stretch**” to change the aspect ratio of the display.

Pixel Track

Steady flickering or several soft vertical stripes or bands across the entire image indicates poor pixel tracking. Proper pixel tracking ensures that the image quality is consistent across the screen, the aspect ratio is maintained, and that the pixel phase can be optimized (described below). Tracking determines the frequency of the pixel-sampling clock, indicated by the number of incoming pixels per line, so that all pixels generated by a particular source are sampled.

NOTE: *By default, the projector samples at the correct frequency for most sources.*

For best results, use a test pattern such as a smooth grey consisting of a clear pattern of black and white pixels, or a similar “half on, half off” graphic image, such as the *Windows* shutdown screen. Adjust the slide bar until the vertical stripes broaden to the point where one large stripe fills the image. If the image still exhibits some shimmer or noise, adjust **Pixel Phase** (below).

Pixel Phase

Adjust “Pixel Phase” after “Pixel Track”. Adjust pixel phase when the image (usually from an RGB source) still shows shimmer or “noise” after pixel tracking is optimized. Pixel phase adjusts the phase of the pixel-sampling clock relative to the incoming signal. Adjust the slide bar until the image stabilizes and each pixel is clearly defined. You may notice that you can stabilize the image at more than one point—i.e., you may find that the image appearance at “11” is identical to the image appearance at “38”, thus you can use either setting. If some shimmer from a video or HDTV source persists, use the “**Filter**” control to remove high-frequency noise from the signal. See *Filter*, on page 3-23.

H-Position

Moves the image right or left within the area of available pixels.

NOTE: *The value shown represents where the approximate center of the image lies in relation to the total number of pixels available horizontally. This varies widely according to the signal—watch the image while adjusting.*

V-Position

Moves the image up or down within the area of available pixels.

NOTE: *The value shown represents where the approximate center of the image lies in relation to the total number of pixels available vertically. This varies widely according to the signal—watch the image while adjusting.*

Keep Aspect On Auto Setup

Ensures that auto setup for any source will maintain the input aspect ratio when the default size is calculated. If disabled and the source is not a special case video source where a default stretch is defined, the source is scaled to fit the platform.

Blanking

Active Input Window

This read-only value indicates the current size of your displayed data or “region of interest” as defined by the blanking controls. By default, the projector automatically determines what portion of its full resolution to use, and pixels in the surrounding borders are turned off. Specify the active input window size by adjusting one or more “Blank” settings (**Figure 3-5**). For example, if you have blanked (cropped) 100 pixels from both the left and right edges of an incoming source of 1400 x 1050, the remaining active input window will be reduced to 1200 x 1050.

Blanking (Top, Bottom, Left, and Right)

Crop the image so that unwanted edges are removed from the display (changed to black). Blanking defines the size of the Active Input Window, or area of interest. Range of adjustment depends on the source resolution and other factors.

NOTE: *Blanking a PIP image resembles zoom. For example, left Blanking zooms the right side of the PIP image; Right Blanking zooms the left side. There are no black bars.*

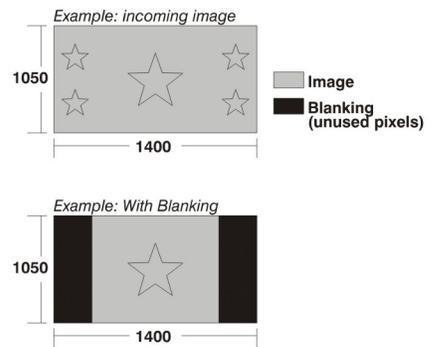


Figure 3-5 Blanking of a Primary Image


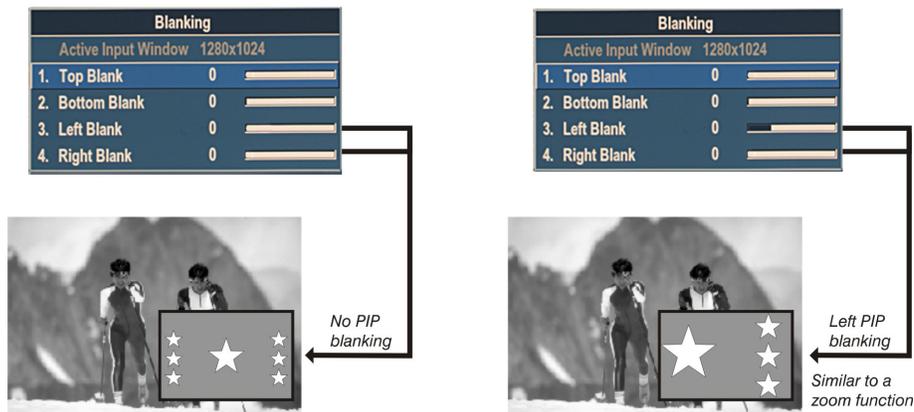


Figure 3-6 Blanking of a PIP Image

3.4.3 Image Settings Menu

Use the **Image Settings** menu to alter your main image without affecting its size or position. Changes made are applied immediately and are saved when you exit the menu (press EXIT or MENU). Options not available for the projector model or source are disabled (grey).

Image color is managed by ArrayLOC (see [ArrayLOC Menu on page-3-48](#) and [Managing Colors with ArrayLOC on page-3-55](#)).

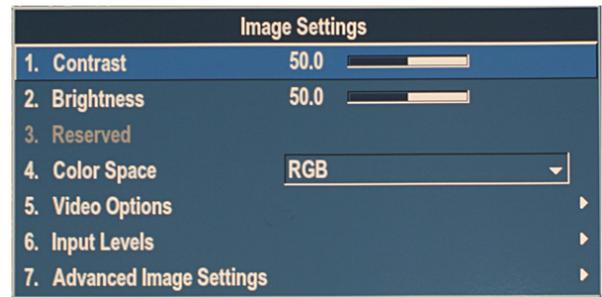

Contrast

Contrast increases or decreases the perceived difference between light and dark areas of your image (0-100). For best results, keep close to 50. For best results, start with a low value and increase so that whites remain bright but are not distorted or tinted, and light areas do not become white.

NOTE: *If the environment lighting changes, an adjustment of Gamma is recommended (see below).*

Brightness

Increases or decreases the amount of black in the image (0-100). For best results, keep close to 50. Start with a high value and decrease so that dark areas do not become black. Conversely, high brightness changes black to dark grey, causing washed-out images.

Color Space

Determines how the color components of an analog input signal are decoded for accurate color in the display. Useful only for analog signals and certain digital sources. Although color space for these analog signals is automatically determined by the projector, you may wish to override this and manually set a specific color space.

NOTE: *For some signals, the color space function is entirely automatic and the drop-down list is disabled.*

The current color space appears in the **Image Settings** menu. Press ENTER to select a different option:

- Select **RGB** unless you are using component video
- Select **YCbCr (Video)** with a standard definition televised signal (SDTV).
- Select **YCbCr (HDTV)** with a high definition televised signal (HDTV).

NOTE: *When certain RGB signals are first connected, the projector may not recognize them as RGB and will incorrectly decode their color information as YPbPr (video). These signals can include:*

- *RGB signals in NTSC, PAL, SECAM frequency ranges.*
- *Scan-doubled sync-on-green.*
- *Scan-quadrupled sync-on-green.*

For these signals, change the color Space to RGB, and then define a new channel for future use.

Video Options


This submenu is used with video sources only.

Enable Decoder AGC

Automatic Gain Control (AGC) affects decoded video images only. Enter a checkmark (default) in most instances. Activate the decoder’s AGC circuit to ensure properly bright images. Delete the checkmark if a decoded video image exhibits strange color artifacts such as stripes in highly saturated colors, indicating an incompatibility between this source and the AGC.

Video Standard

For most video standards available in the world, the projector automatically detects the incoming horizontal and vertical frequencies and sets the projector’s processing of this signal to the corresponding standard. The current video standard name appears in the **Video Options** submenu, and includes an “A” if it is auto-detected. Press ENTER to view or select a different video standard from those available to the projector—any that are disabled have frequency characteristics that differ from those of the incoming signal. Selecting a specific standard forces the projector to process the signal according to this standard.

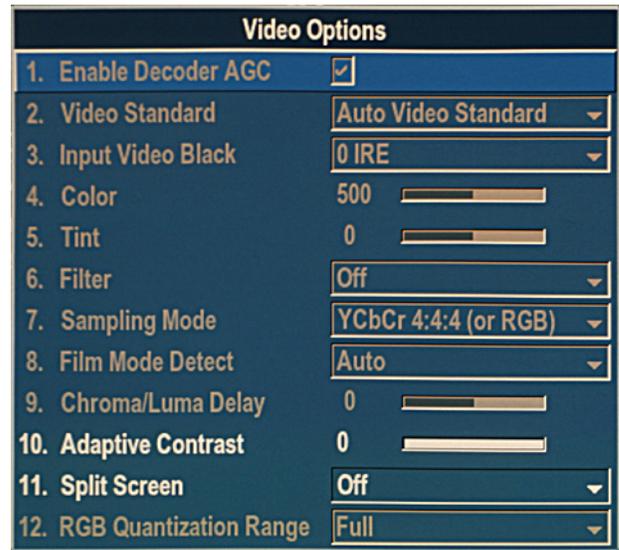

NOTE: Best results are obtained with defined channels. Otherwise, switching from one video source to another can sometimes cause slight disturbances in the display, indicating that the Auto function is struggling. Recover by briefly selecting a different video standard, then going back.

Table 3.3 - Regions and Video Standards: Summary

STANDARD	WHERE USED (Subject to Change)
PAL	Most of Europe, China, Australia, some of S. America, some of Africa
NTSC	N. America and Japan
SECAM	France, Eastern Europe, most of Africa
NTSC 4.43	A tape-only standard for partially-translated hybrid signals
PAL-M	Brazil
PAL-NC	Argentina, Chile, other Latin American countries
PAL 60	

NOTE: Generally, use “Auto” for all instances except: a poor quality input signal or a black-and-white video signal. In order to detect and display such signals, select the relevant standard from the list.

Input Video Black

This control compensates for incoming elevated black levels present in certain video signals, and ensures that blacks in the display are neither crushed (i.e., where dark greys appear black) nor excessively elevated (i.e., where blacks appear dark grey). By default, the projector automatically determines the best setting according to the type of incoming video signal:

If grays are black, select → **1. 0 IRE**
 If blacks are gray, select → **2. 7.5 IRE**

- **0 IRE** – Used for DVD output with “enhanced black”, SECAM, most PAL standards, and Japanese NTSC.
- **7.5 IRE** – Used for most NTSC video signals.

For some types of video, you can override the setting. The control is disabled for other types of video (and all graphics sources). Generally, if black appears crushed when brightness = 50, choose “0 IRE”. If black appears excessively elevated, use “7.5 IRE”.

Color

This slide bar adjusts the color saturation level. Lower settings produce less saturated colors, for example a setting of “0” produces a black and white image. If the color level is too high, colors will be overpowering and unrealistic.

Tint

Adjusts the red/green color hue for true color reproduction of video and HDTV signals. For best results, adjust tint while displaying an external test pattern—it is recommended that tint remain at its default setting.

Filter

The proper filter setting is automatically set for virtually all signals, and rarely needs to be changed. Override only if standard pixel tracking and phase adjustments do not adequately clear up a “noisy” video signal, or if a graphics signal appears overly “soft”. Both instances indicate that “Filter” may be set to the wrong option.

Sampling Mode

Sets the color sampling mode for a digital signal to either YCbCr 4:4:4, RGB or YCbCr 4:2:2. The proper sampling mode is determined automatically by the projector; you can override this setting.

Film Mode Detect

Enable or disable film motion detection. Only available for interlaced or segmented frame sources.

Chroma/Luma Delay

Affects any incoming composite or S-video signal, delaying the luma signal (intensity) in relation to the chroma (color). In the image, increasing the luma delay will move luma (seen as a shadow where colors overlap) to the right slightly, with colors remaining in place. Decreasing this delay will move the shadow slightly to the left. If necessary for your current source, adjust so that no shadows occur with adjacent colors.

Adaptive Contrast

Dynamically expands the contrast of the output image producing vibrant images with seamless response to scene changes and fades. The slide bar adjusts the amount of adaptive contrast to apply, with a setting of “0” producing no change. Adaptive contrast is disabled when the Dynamic Iris is operating in Dynamic mode.

Split Screen

This control allows a snap shot of the main image to be presented on the right side or lower part of the screen, to allow evaluation of advanced image processing features. All resizing controls are honoured on both images. However, image processing controls (such as, Detail, Sharpness, Noise Reduction and Adaptive Contrast) only happen on the left side or top image. Changing inputs, channels or test patterns will disable this control. PIP operation must be disabled prior to enabling this control.

RGB Quantization Range

This control defines the RGB quantization levels for digital DVI and HDMI inputs using the RGB color space. Typically, graphic sources use the full range of levels for the given bit depth (i.e. 8-bit, 10-bit, 12-bit) and consumer electronics (CE) products typically use a limited range of data within the given bit depth. This control must be set to limited to correct the levels for those CE products that use the limited space. This adjusts what is considered black and white levels in the image. As an example for 8 bit space, full range RGB uses levels 0(black) to 255(white). A limited CE range is 16-235 for 8-bit video sources.

Input Levels

Only experienced users should use the Input Levels submenu. The projector automatically optimizes input levels for all but the most unusual of sources. Before starting, check that overall contrast and brightness settings are near 50 and that color temperature is properly set up on an internal grey scale test pattern. Good RGB or input levels—that is, the *drives* and *black levels* for each of the three colors, red, green and blue—ensure that images from analog sources other than decoded video have maximum contrast without crushing black or white. By default (and in an “Auto Setup”), the projector automatically determines the best input levels by monitoring image content and adjusting the controls appropriately—further adjustment is typically not required to obtain proper blacks or whites.



Turn OFF before leaving menu.

Levels adjust automatically and correctly.

NOTE: This automatic adjustment requires at least 6-12 consecutive white pixels in the image. Without these pixels, input levels may produce skewed colors, particularly in non-video images.

For a source exhibiting overly high black levels (typically caused by a noisy source causing black level spikes) use the **Input Levels** menu. These adjustments serve as a calibration process compensating for differences in sources and cabling, and perfect the source image input levels to eliminate *overshoot* and *undershoot*.

NOTES: **1)** Input Levels are of limited use with digital signals, but do offer some ability to tweak poorly mastered source materials. **2)** Input levels apply for the current source only, but for any color temperature used. **3)** Assuming that color temperature has been set up based on the internal test patterns, you can then set up input levels for a given source so that it matches the color temperature of the internal test patterns.

Auto Input Level

Use only if you are an experienced user and you have an unusual source that you feel needs further color temperature and/or input level adjustment. This compensates for incoming out-of-range drives (white) and black levels (black) that would cause “crushing” of light and dark colors in the image. After entering a checkmark, wait for the six slide bar values to stabilize, then delete the checkmark and exit. The **Auto Input Level** is automatically turned off upon exit from the **Input Levels** Menu.

Black Levels and Input Drives

IMPORTANT: Do not use Input Levels to adjust color temperature. This will distort contrast and brightness functions as well as color temperature.

NOTE: If color temperature is set up based on the internal test patterns, you can set up input levels for a given source so that they match the color temperature of the internal test patterns.

To check your image levels and adjust these controls:

1. Confirm that you are using an input on an Analog BNC card or a Dual Link DVI card. Input Levels are not applicable for sources going through the decoder.
1. Display a representative image for source you are setting up.
2. Make sure that overall “Contrast” and “Brightness” settings are both set to near 50.
3. If black levels are too high (or whites are too low, which is rare), you likely have a noisy source that is producing skewed input levels.
4. To adjust levels automatically, check to enable **Auto Input Levels** in the **Input Levels** menu. Wait for all six Blacklevel and Input Drive values to stabilize. Uncheck the **Auto Input Levels** option.

NOTE: Do not use Auto Input Levels for dark images.

5. Exit the **Input Levels** menu. Exiting the Input Levels menu automatically disables **Auto Input Levels** and **Auto Color Enable**.

NOTE: To adjust levels manually, see [Input Peak Detector on page 3-46](#).

Auto Color Enable

When a checkmark is present, selecting a specific black level or drive to adjust will automatically enable the corresponding color in the display. Delete the checkmark to see all colors, or to enable a different specific color through the **Color Enable** control.

Clamp Location

Brightens the image produced from certain high-resolution high-frequency graphic sources. The projector automatically selects the best clamp location for most sources. Use the normal **Back Porch** location if the image is either sufficiently bright or overly bright. Select **Sync Tip** if the image appears unusually dim, if there are horizontal streaks across the image, or if there is significant color drift. This moves the clamping pulse from the normal back porch location (which is likely too short) to the tip of the horizontal sync pulse. **Tri Level** is typically needed for an HDTV source.

Input Peak Detector

Input Peak Detector is a tool to assist with defining individual input levels, enabling you to accurately set the input levels for any source with the appropriate image. Enabling the peak detector activates a special operating mode for detecting *only* pixels that are considered black or white—all other levels are displayed as a mid-level grey. When used with a smooth greyscale pattern in which black and white are known to be at opposite edges of the image, you can watch these isolated areas while adjusting individual black levels and input drives until both black and white edges are *just* visible and distinguished from neighboring pixels. Images from this source will then display correct blacks and whites without crushing.

To adjust levels manually:

- Do not enable Auto Input Levels.
 - To judge by eye and adjust levels manually, change one or more of the six levels as necessary to obtain proper blacks and whites.
1. Display a 16-level greyscale test pattern from the desired external source, and check the **Input Peak Detector** check box.
NOTE: The Input Peak Detector will initially render the greyscale as a uniform grey field before adjustment or extreme crushing.
 2. Check **Auto Color Enable** to ensure the correct color is displayed for each setting.

3. For the current color, adjust its corresponding **Blacklevel** slide bar just until a single solid band of black appears at one edge of the screen. This band represents the first band of the greyscale pattern. It should be 100% black.
4. With the same color still active, adjust its corresponding **Input Drive** slide bar *just* until a single band of color appears at the opposite edge of the screen. This band represents the last band of the greyscale pattern, which should be 100% white (or the current color, if a certain color is enabled).

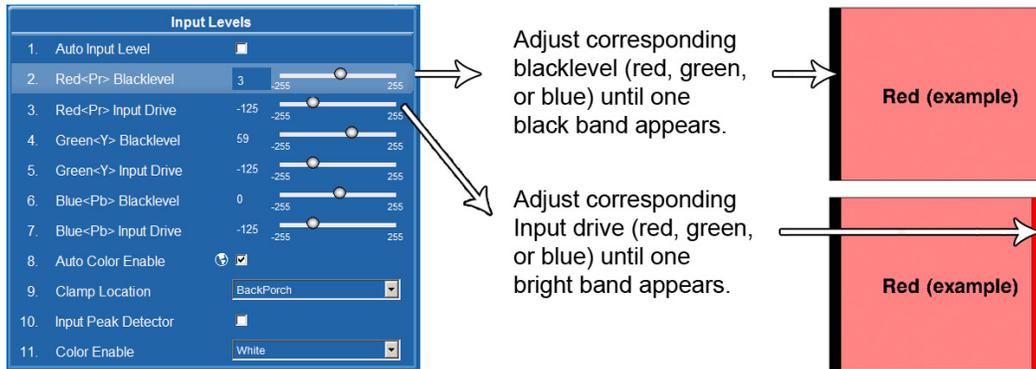


Figure 3-7 Adjusting Input Levels Using the Peak Detector

5. Check the black band and adjust the black level slide bar if necessary.
NOTE: *Adjusting the black level affects the gain. Only adjust when necessary.*
6. Repeat steps 3-5 with the two remaining primary colors. When each primary color shows one optimized black band and white (or colored) band, the input levels for this source are correctly set. Upon exiting the **Input Levels** menu, the **Peak Detector** check box will clear.



NOTES: **1)** *Input levels apply to the current source only, but for any color temperature used.* **2)** *If color temperature is set up based on the internal test patterns, you can set up input levels for a given source so that they match the color temperature of the internal test patterns.*

Advanced Image Settings

Use the **Advanced Image Settings** submenu to make the adjustments for lesser-used but more specialized applications on your projector.

Gamma Settings

The system offers 2 types of gamma correction. Gamma correction can be applied to a specific source to correct for luma encoding. This is a channel setting and reapplied every time the same signal is detected. This is the 'Gamma' control. On the other hand the system also provides a global **Gamma Correction** control. The global control offers an offset applied to all channels. This offset is used to compensate for changes in ambient conditions such as ambient light in the room and projected material.

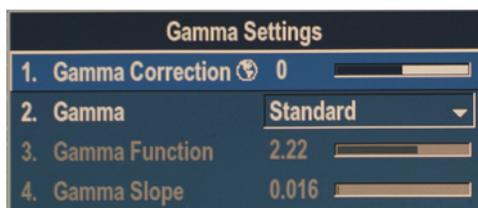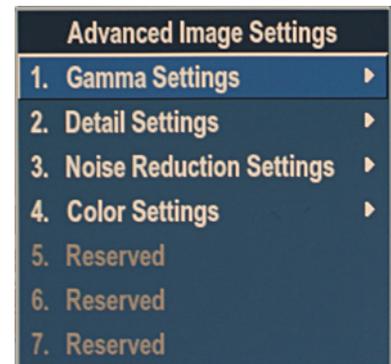

Gamma Correction

Applies a global offset to all gamma settings for each channel. It affects the shape of the curve by performing a linear transform toward a gamma curve of 1.0 while the control is increasing and likewise a linear transform toward a gamma of 3.0 as the control is decreasing. The control should only be adjusted to compensate for ambient conditions. To correct a particular source only, use the **Gamma** control.

Gamma

Select the base gamma table for a given source. Select from one of the standard tables, a custom gamma function, or select an arbitrary gamma table that has been downloaded to the projector.

NOTE: A separate PC utility is needed to do this.

The 2.22 curve is a power curve typically used to encode graphics and video sources. See **Figure 3-8**. The 'standard' curve (auto setup default) is a modified 2.22 curve with a small linear section in the black that enhances the detail in darker areas of the projected content. Typically standard or 2.22 is used for all sources. Alternatively, if neither default is ideal, apply a simple gamma curve by defining a custom power function and slope. Select **Custom** to enable the function and slope controls. For more complex non-standard gamma curves, a user-defined curve created externally and downloaded to the projector can be used (requires separate PC-based Arbitrary Gamma software application to create the table and the Web UI to download it).

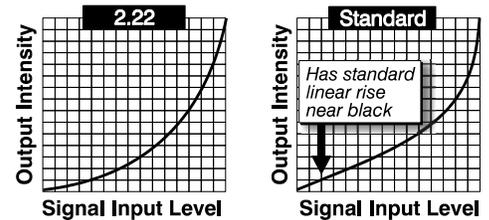


Figure 3-8 Gamma Curve

NOTE: If any of these special user curves have been installed, their names will appear in the Gamma Table drop-down list.

- **Gamma Function**

Defines the base gamma power curve used when the base gamma table value is set to “custom”. This value, combined with gamma slope setting determines the base gamma table to be used as the custom base table. The curve is generally a power curve with a small linear segment at the bottom defined by the slope.

- **Gamma Slope**


This control defines a slope to be used for the base custom gamma table for a small section at the bottom of the curve. This slope can be used to bring in or out the low level blacks in the image. This slope, combined with the gamma function, defines the custom gamma table.

Detail Settings

Adjusts the sharpness of the image. Setting detail above the halfway point can introduce ‘noise’ in the image. Lower settings can improve a noisy signal.

- **Detail**

Adjusts the sharpness of the image. Setting detail above the halfway-point can introduce noise in the image. Lower settings can improve a noisy signal. This command does not take effect unless the minimum change required in the **Detail Threshold** control is reached.

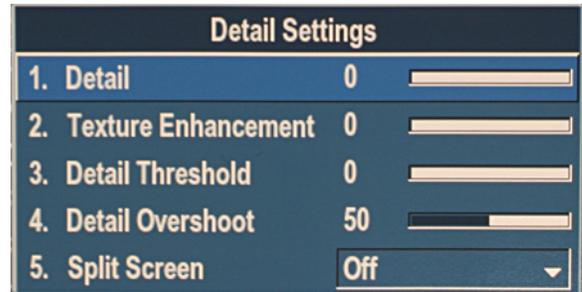

- **Texture Enhancement**

Applies texture detail enhancement based on adaptive horizontal, vertical, and diagonal large edge and small edge enhancement processes.

- **Detail Threshold**

Selects a filter sensitivity to noise. A higher value may improve noisy sources especially for higher settings of detail.

- **Detail Overshoot**

Minimizes ringing on the enhanced edges detail and texture effects.

- **Split Screen**

Allows a snap shot of the main image to be presented on the right side of the screen to allow evaluation of advanced image processing features. All resizing controls are honoured on both images; however, image processing controls only happen on the left side image. Changing inputs, channels or test patterns will disable this control.

NOTE: PIP operation must be disabled prior to enabling this control.

Noise Reduction Settings

- **Noise Reduction**


Selects a filter sensitivity to noise. A higher value may improve noisy sources, but it will soften the image.

- **Block Artifact Reduction**

Locates and reduces block edges produced by discrete cosine transform (DCT) based compression processing.

- **Mosquito Noise Reduction**

Reduces mosquito artifacts around sharp edges in DCT based compression by dynamically adapting to image content.

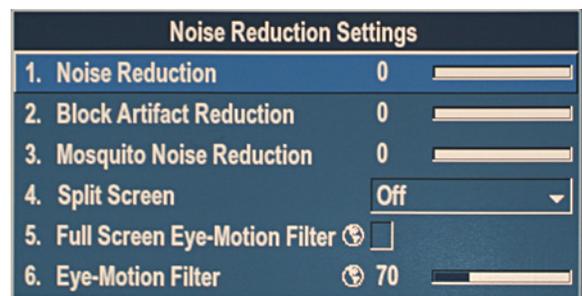

• **Split Screen**

This control allows a snapshot of the main image to be presented on the right side of the screen to allow evaluation of advanced image processing features. All resizing controls, as well as input card features such as color/tint, etc. are honored on both images. Image processing controls such as the detail-texture/ noise reduction and adaptive contrast features, however, only happen on the left side image. Changing inputs, channels or test patterns will disable this control. PIP operation must be disabled prior to enabling this control.

• **Full Screen Eye-Motion Filter**


Checking this control applies the eye-motion filter to the entire screen, rather than applying just to the edge blending regions.

• **Eye-Motion Filter**

Adjust this filter to reduce saccadic eye-motion artifacts, sometimes noticeable in edge blending regions. Too much filtering may result in loss of detail. For best results, adjust this setting while positioned at the nominal screen-viewing distance.

Color Settings

IMPORTANT: Use this Color Settings menu to set up color manually only if you override ArrayLOC. See *Managing Colors with ArrayLOC*, on page 3-55.

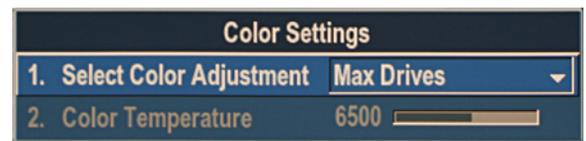

ArrayLOC is enabled automatically, and **Select Color Adjustment** is set to *Max Drives*. Use the color function under ArrayLOC to manage projector color. ArrayLOC color and color temperature settings override settings in this menu.

NOTE: To check ArrayLOC operational status, check *Main Menu > Status*. ArrayLOC can only be disabled from the passcode-protected *Service* menu. Please contact *Customer Support* for more information.

• **Select Color Adjustment**

Select the output color adjustment most suited to this input signal. The options include the following:

- **Max Drives** - All color adjustments are turned off, allowing the projector to run at maximum brightness.
- **SD Video and HD Video** - Sets the output color to a specific standard value. Adjusts the colors; red, green, blue, and white.
- **User#** - Select 1 of 4 user defined sets of color adjustments; defined in the **Configuration** menu.

• **Color Temperature**

Allows you to specify a color temperature between 3200°K and 9300°K based on the setting of the color temperature slidebar.

Expressed in degrees Kelvin (3200°K, 5400°K, etc.). Lower numbers appear reddish white and higher numbers appear bluish.

Standard settings are:

- 9300°K is close to the white of many computer monitors
- 6500°K is the standard for color video, in both standard and high definition forms
- 5400°K is a standard for graphics and black and white video
- 3200°K is useful if the projected image is to be filmed or shot as part of a studio set illuminated with incandescent lights

For all color temperatures the color primaries; red, green, and blue are unchanged and reflect the native colors of the projector.

3.4.4 Configuration - Adjusting System Parameters and Advanced Controls

Use the **Configuration** menu to define general operating parameters and communications with other projectors and equipment, and to access other advanced processing and image adjustments affecting overall performance. The **Configuration** menu provides access to diagnostics, calibration tools and the Service submenu (password-protected).

The first 6 options in the **Configuration** menu are explained below:


Language

Choose the language to use in the projector's menus. The change will take effect immediately.

Output Options

Screen Image Orientation

Select the on screen image orientation from Front, Rear, Front Inverted, and Rear Inverted.

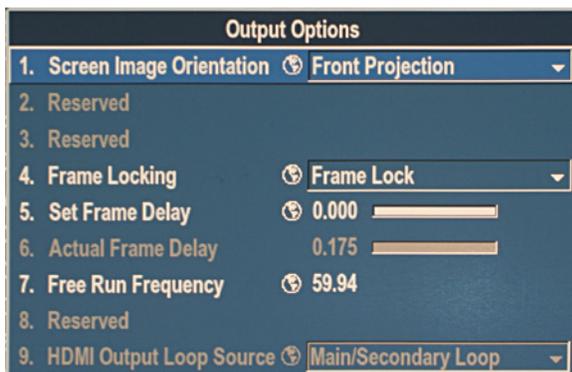

Frame Locking


Select how the projector controls the output frame timing based on the input signal. When set to **Frame Lock**, output image frames are locked to the input if possible. When locked, the output is always locked to the primary input, never the PIP image. When set to **Free Run**, sets the output to the **Free Run Frequency** value.

NOTE: *Frame locking on projectors in a ArrayLOC network can be controlled from one projector. See [Synchronize Frame Delay on page-3-55](#). When Synchronize Frame Delay is used, the master projector sets the frame delay for the synched projectors in the array.*

Set Frame Delay

This control delays the output signal timing relative to the input signal timing by a fraction of a frame, and up to several frames. The control is only available when the input signal is frame locked. When setting up a projector array or projector tiling, all projectors should be set to the highest minimum frame delay for the array.

In free run mode, or in cases where the signal cannot be frame locked, the minimum latency reported in **Actual Frame Delay** is applied to the signal.

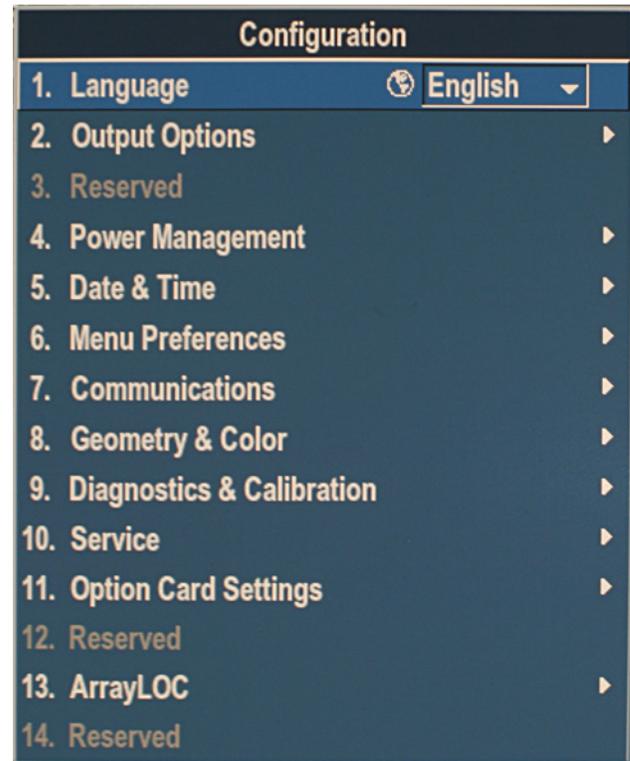

NOTE: Frame locking on projectors in a ArrayLOC network can be controlled from one projector. See [Synchronize Frame Delay on page-3-55](#). When Synchronize Frame Delay is used, the master projector sets the frame delay for the synched projectors in the array.

Actual Frame Delay

iIndicates the dynamically calculated, effective minimum frame delay for the projector. The calculated delay is affected by image shift, scaling, warp/keystone applied, and format. For example, the minimum latency can vary based on the amount of scaling applied to the image. When using keystone or warping, an additional latency is required, depending on the amount of warp.

Free Run Frequency

This control sets the output video vertical frequency when **Frame Locking** is set to **Free Run**.

HDMI Output Loop Source

The HDMI output options are:

- Choose **Direct Loop** to directly pass-through the HDMI input signals from the same Twin HDMI input card. The Input1 signal is looped to Output1, and the Input2 signal is looped to Output2.
- Choose **Main/Secondary Loop** to loop the main & Secondary video to the outputs regardless of which card these signals originate from. The main video signal is looped to Output1, and the secondary video signal is looped to Output2.

Power Management



Auto Power Up

If there is an AC power interruption, while **Auto Power Up** is enabled, the projector will resume operation in the same state as it left off. If the light engine is ON and an image is showing when AC power is lost, the projector automatically powers back up with the light engine ON and an image will show when AC is restored.

Auto Shutdown Enable

When AUTO SHUTDOWN Mode has been selected, and no projector activity has been seen for the activation time-out period, the projector will enter a power saving mode in which the light engine dims and the shutter closes. If this condition persists for an additional time-out period, the projector automatically goes into STANDBY mode. The presence of any activity within this combined interval will cancel Auto Shutdown and will return the projector to normal operation.

Turn Off Image After (min)

This sets the activation interval (in minutes) for Auto Shutdown. If all activity (input signals, web or serial port activity, key presses) is lost for this length of time, and Auto Shutdown is enabled, an Auto Shutdown cycle will begin.

Enter Standby After (min)

This sets the interval (in minutes) between starting Auto Shutdown and entering Standby mode. Once Auto Shutdown has been entered, and all activity continues to be absent for this interval, the projector will automatically enter power Standby mode.

EM Stealth Mode

Check this option to operate the projector with the status LED display on the EM module turned off. The status LED is turned OFF during operation only. In standby mode, the status LED displays codes normally.

NOTE: *Option card LEDs on the EM remain visible.*

Fan Assist

Normal cooling uses temperature sensors to regulate fan speed. Fan Assist enables full speed fan operation on the Light Module (LM) when operating in high ambient temperatures or for long periods. This may help to reduce thermal problems and may prevent an emergency shutdown for thermal safety reasons. Fan assist increases noise levels due to the simultaneous full speed operation of the fans.

Date & Time

The current year-month-day, hour-minute-second. Changes here reset the real-time clock on the projector.

Date & Time	
1. Date	1971 / 09 / 23
2. Time	03 : 51 : 07

Menu Preferences

Adjust the appearance, content and/or location of on-screen menus and messages.

Large Menu Font

Enter a checkmark to enlarge menus and their text. Adjust **Menu Location** to accommodate the increased menu area.

Menu Location

Use the drop-down list to choose a pre-defined default or customized location for the display of on-screen menus.

To create a custom menu location:

1. Choose a preset that is closest to the desired location.
2. Adjust **Horizontal Shift** and **Vertical Shift** slide bars to move the menu to the desired location.

NOTE: *Avoid locations too close to a corner or edge to prevent cropping of larger menus.*

Horizontal Shift and Vertical Shift

Shift your menus as desired, creating a customized menu location.

Menu Preferences	
1. Large Menu Font	<input type="checkbox"/>
2. Menu Location	Custom
3. Horizontal Shift	120
4. Vertical Shift	60
5. Display Automatic Message Boxes	<input checked="" type="checkbox"/>
6. Display User Message Boxes	<input checked="" type="checkbox"/>
7. Reserved	
8. Display Error Messages	Serial ports
9. Splash Screen Setup	Startup & No Signal
10. OSD Transparency	<input checked="" type="checkbox"/>
11. Menu Type	Advanced Menu
12. Splash Screen	Default Splash Screen
13. Cascading Menus	<input checked="" type="checkbox"/>

Display Automatic Message Boxes

Check to enable message boxes that are not directly triggered by user actions, for example signal information message boxes.

Display User Message Boxes

Check to enable message boxes that are directly triggered by user actions, for example gamma or lens control message boxes.

Display Error Messages

Choose how you want to be notified of errors detected in either the incoming signal or projector. Select **Screen** or **All** (default) to see brief on-screen messages. This is recommended during setup or testing of the projector. Or, select “**Serial Ports**” to receive messages via RS-232 or RS-422 serial communication only. To hide error message displays, such as during shows and presentations, select **Off** or **Serial Ports**.

Splash Screen Setup

Choose when to display an introductory splash screen image, such as a company logo, graphic or message.

- **Always Off** – A splash screen never appears
- **Start-up Only** – The splash screen logo appears at projector start-up only.
- **Start-up And No Signal** – A splash screen appears at start-up and at any time when there is no signal.

To add your own splash screen in addition to the default “CHRISTIE logo” splash screen, use the Web UI to download the desired bitmap (.bmp) file to the projector. This will overwrite any other user splash screen that has been downloaded.

NOTE: *Only one user splash screen can be saved in the projector.*

OSD Transparency

Check this box if you want the **OSD** menu backgrounds to be transparent.

Menu Type

Menu type is preset to **Advanced** which provides access to all projector functions.

Splash Screen

Choose which splash screen is to be used; the default or user downloaded splash screen.

Cascading Menus


Enable or disable cascading menus. When disabled, a single menu level is displayed on the OSD at a time.

Communications

Defines and controls how single or multiple projectors are linked with each other and to a controlling device. For detailed information, see [C.1 Introduction, on page C-1](#).

Serial Options

NOTE: The *Synchronize Keys, Test Pattern, Color Enable* option lets you use the ArrayLOC network to forward IR remote keys from the master projector to all the synched projectors in the ArrayLOC group. See [Synchronize Keys, Test Pattern, Color Enable on page-3-54](#).

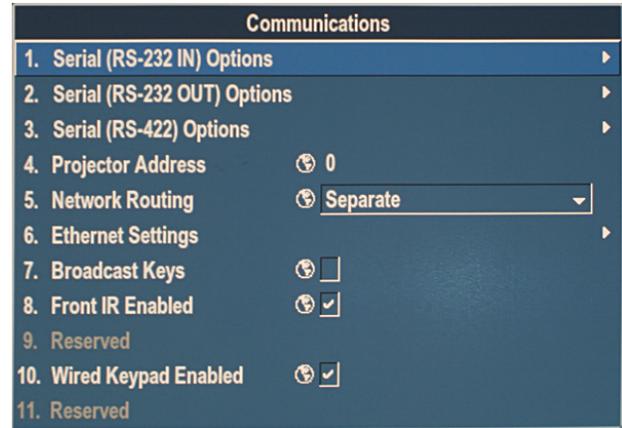

Baud Rate

Determines the speed of communication to and from the projector on the RS-232 or RS-422 links. The maximum rate for the RS-232 is 115200; for RS-422 it is 19200. Set the baud rate to match that of your controlling device, such as your PC. Refer to the documentation for the controlling device to determine the baud rate. In an existing network of projectors, if you discover that a projector has a different baud rate, use the drop-down list and select the correct baud rate using the ENTER key. DO NOT scroll this control with LEFT arrow key or RIGHT arrow key. Serial communication is always 8 data bits, no parity.

Serial Flow Control


Determines whether software flow control or no flow control is used when transmitting and receiving data on the serial port.

Serial Mode

Select the serial data mode. The mode includes the number of bits, the parity and the number of stop bits.

Serial Protocol

Select the protocol used on the serial communications port.

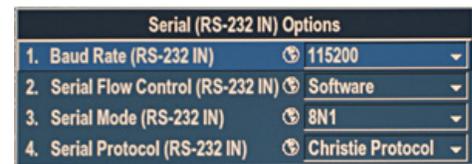

Projector Address

Enter a number up to 3 digits in length (such as “001”) to assign or change a number to the projector currently in use. If the current projector already has a number assigned, that number will appear here. Numerical identity for projectors enables you to communicate with a single projector within a multiple-projector application (see also PROJ key described in [3.1 Using the IR Remote, on page 3-1](#)). If you make a mistake in assigning or changing the projector number, press EXIT to cancel.

NOTE: When multiple projectors are being used and you want to adjust the color for individual projectors to create a seamless image, you must assign different numbers for each projector to allow switching back and forth between them while adjustments are being made.

Network Routing

NOTE: *Not applicable for stand-alone projectors or simple serial networks with only one type of controller and linking.*

1. Separate	= Networks do not communicate with one another
2. RS232 and RS422 Joined	= Serial networks are joined, but Ethernet is isolated
3. RS232 and Ethernet Joined	= RS-232 and Ethernet are joined but RS-422 is isolated
4. All Joined	= Network communications travel all networks

Figure 3-9 Network Routing List

Separate

Select “**Separate**” (factory default) to keep RS-232, RS-422 and Ethernet messages on their respective paths instead of being broadcast to the other types of ports.

RS-232 and RS-422 Joined

Messages originating from an RS-232 or RS-422 controller will be relayed to all RS-232 or RS-422 ports. Any Ethernet communication, however, will not.

RS-232 and Ethernet Joined

Messages to and from the RS-232 ports will also be relayed to the Ethernet port, and vice versa. Any RS-422 communications will be isolated. In the case of multiple Ethernet sessions over the single Ethernet connector, input on the RS-232 port will be relayed to all Ethernet sessions; however, input from any Ethernet session will only be relayed to the RS-232 ports.

All Joined

All messages reach all ports, regardless of type in the case of multiple Ethernet sessions, input on one Ethernet session will be relayed to all other Ethernet sessions as well as to the RS-232 and RS-422 ports.

Ethernet Settings

NOTE: *Recommended for network administrators only.*

IP Address

Enter a valid and unique IP address for use on the network to which the projector is currently connected. This address will overwrite any previous IP address such as the factory-defined projector default. It takes approximately 10 seconds for the projector to respond at its new address.

TCP Port

On some Ethernet networks, firewall restrictions may require that the port number of the projector be changed from its default of 3002. If so, enter a new valid port number here. It is highly recommended not to use a port number below 1000, as these ports are typically reserved for and used by common IP applications.

Subnet Mask

Subnet Mask determines the subnet for the IP address, and must be set manually.

Default Gateway

This is the IP address of the gateway used to reach any non-local IP addresses, and it must be set manually.

Host Name

Set the hostname for the device.

Domain Name

Set the domain for the device.

MAC Address

Displays the MAC address of the projector (read-only).

Broadcast Keys

Use Broadcast Keys to relay all key presses received by the projector to all other projectors on the network.




Front IR Enabled

Check this option to enable the front IR sensor.



Wired Keypad Enabled

Check this option to use the wired keypad.

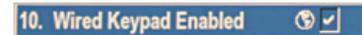

Geometry & Color

In the **Configuration** menu, select the **Geometry and Color** submenu when you need to modify overall color performance and/or image geometry for straightforward alignment of flat screens.


Test Pattern

Choose the desired internal test pattern, or select **OFF** to turn off a test pattern. Alternatively, use the TEST key to cycle through test patterns.

Geometry Correction

NOTE: *Geometry correction is not available when Tiling is enabled.*

Keystone is typically caused by tilting the projector in relation to the screen, so that the lens surface and screen are no longer parallel to each other. Use the projector menu options to make basic keystone adjustments appropriate for flat screens.

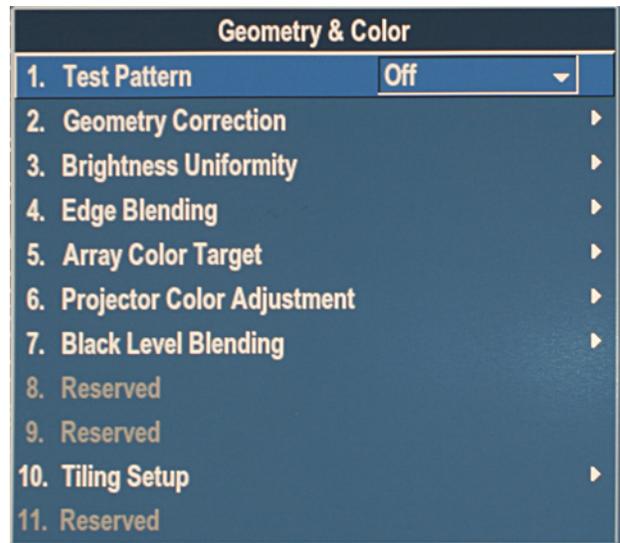

Settings to adjust keystone are in the **Geometry Correction** submenu. **Brightness Uniformity**, **Edge Blending** and **Black Level Blending** should be disabled before performing Keystone adjustments. Vertical keystone is used to correct a keystoned image shape in which the top and bottom borders of the image are unequal in length, and both sides of the image are inclined toward the top or bottom edge, see **Figure 3-10**.



Figure 3-10 Vertical Keystone

Horizontal keystone is used to correct a keystoned image shape in which the left and right borders of the image are unequal in length, and the top and bottom are slanted to one of the sides, see **Figure 3-11**.


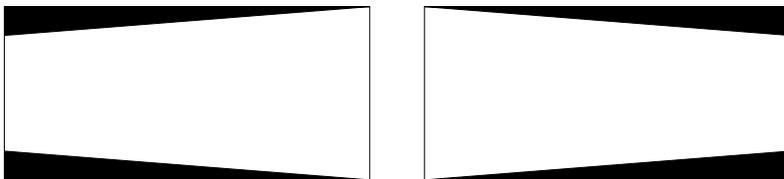


Figure 3-11 Horizontal Keystone

2D Keystone Cursor Offsets

Use **2D Keystone** settings to move the cursor in from the corner point when a projector is overshooting and the cursors for adjustment are not visible. Move the cursors in from the corners and make the keystone adjustments in the normal way.


All settings to adjust keystone are in the **Geometry Correction** submenu. **Brightness Uniformity**, **Edge Blending** and **Black Level Blending** should be disabled before performing keystone adjustments.

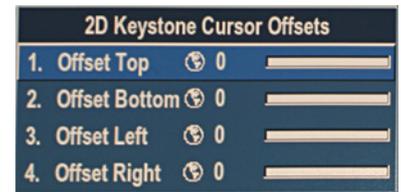

Adjusting an Image for Keystone Correction

1. Enable keystone adjustments by selecting **Keystone** from the **Geometry Correction** drop down list.
NOTE: This will enable the controls for performing 1D or 2D keystone adjustments.
2. Select a **Test Pattern**. The Grid test pattern is recommended.
3. Perform coarse keystone adjustment by using the **Adjust Horizontal Keystone** or **Adjust Vertical Keystone** setting. Use the left and right arrow keys to make the adjustment.


NOTE: Adjust Vertical Keystone and Adjust Horizontal Keystone settings are exclusive. For example, if you make a vertical keystone adjustment, and then make a horizontal keystone adjustment, the horizontal adjustment clears the vertical setting.

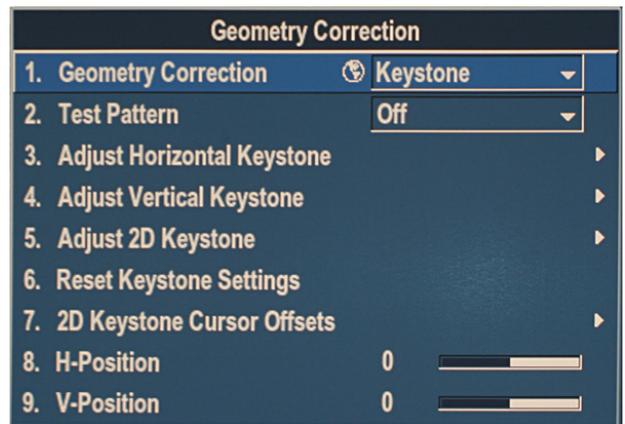


NOTE: The corner cursors are a guide as to how the image will be adjusted. The outside edge of a cursor will be the outside edge of the image. It may not be possible to exactly match the screen dimensions with the Horizontal and Vertical Keystone controls, but these settings can be refined when the 2D keystone settings are adjusted.

- When adjustment of the corners is complete, select **OK**.

NOTE: A message displays indicating that the projector is “Processing request”. The settings are applied to the displayed image, and will take approximately 10 seconds.

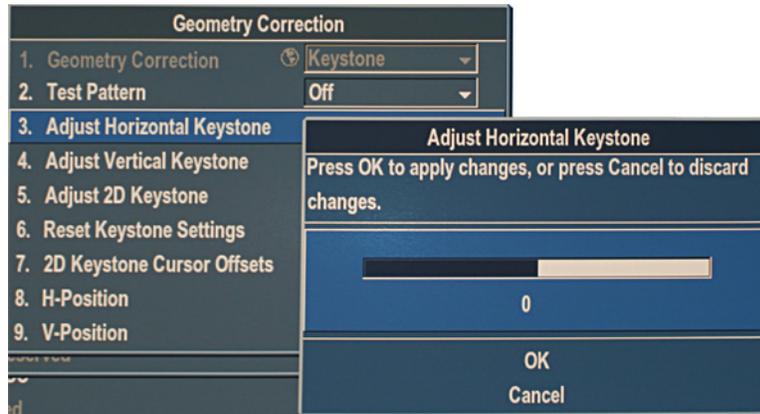


- After the Horizontal or Vertical adjustments have been made, selecting **Adjust 2D Keystone** will retain these settings. Fine adjustment can now be made by moving any single corner separately.

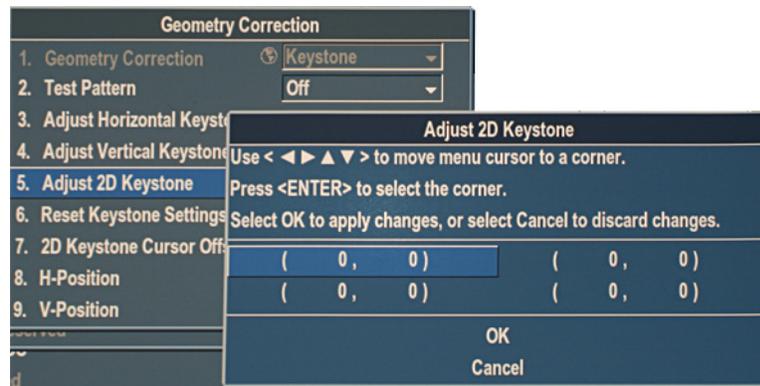

- Use the arrow keys to select the required corner. **NOTE:** The current corner is displayed in red.
- Press ENTER to activate the corner adjustment. **NOTE:** The current corner is displayed in green.
- Use the arrow keys to move the selected corner to match the screen.
- Press ENTER again, to save that position for the corner.
- Repeat Steps 6 to 9 to adjust all 4 corners until they match the screen.
- Select **OK** to apply the new corner positions to the image.
NOTE: A message displays for approximately 10 seconds indicating that the projector is “Processing request”.
- Under certain combinations of extreme keystone co-ordinates and specific signal frequency, a keystone image may result that is outside the bandwidth limitations of the projector. When attempting to apply the keystone settings, a message will pop up on the OSD, indicating that the bandwidth has been exceeded and

the keystone cannot be applied. The cursor co-ordinates for keystone adjustment will remain at the failed keystone position. This will allow the user to make minor changes and attempt to reapply the corner settings. Either the co-ordinates must be adjusted, or the free run frequency must be changed to fall within the allowed bandwidth.

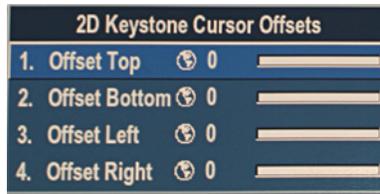


The **2D Keystone Cursor Offsets** menu allows the user to offset the 2D Keystone cursors from the edge of the image to allow manipulation of the keystone on overshot displays.

The FUNC+HELP key combination will immediately disable the **Keystone, Brightness Uniformity, Edge Blending and Black Level Blending** features. This is helpful when, in some extreme keystone configurations, some image corruption may appear and/or the menus may not be readable. Although FUNC+HELP disables these features, it will not overwrite their settings. If keystone is simply enabled again, the same image corruption may occur. After pressing FUNC+HELP, it is recommend to immediately “**Reset Keystone Settings**”, which will set all keystone co-ordinates to zero.

Brightness Uniformity

NOTE: *Brightness uniformity cannot be adjusted for images that have been warped using Main Menu>Configuration>Geometry and Color>Geometry Correction.*

Brightness Uniformity provides further refinement of displays already matched for their primary colors and overall light output. Use the **Brightness Uniformity** menu options for basic adjustments so that no area appears brighter than another. In the **Brightness Uniformity** menu, enable the **Brightness Uniformity Enable** check box to access a multitude of adjustments for light output control in specific areas throughout the image. Your settings apply as long as the **Brightness Uniformity Enable** check box is enabled. While making adjustments, enable the **Coarse Adjustment** check box to apply **Brightness Uniformity** settings with a large granularity. **Coarse Adjustment** helps to identify brightness changes and accelerates projector response time while adjusting settings. To disable the **Brightness Uniformity** function, delete the **Brightness Uniformity Enable** checkmark.

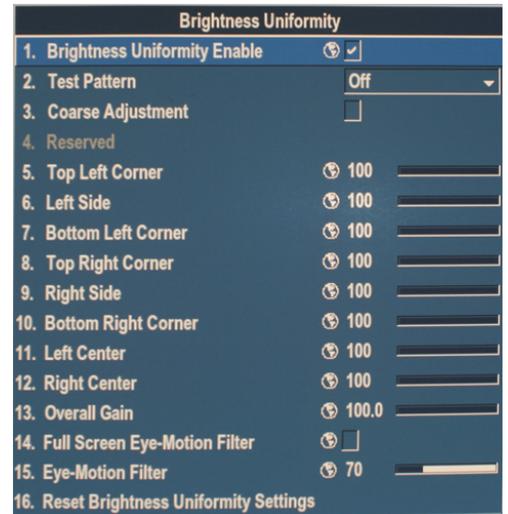

When used to refine screens already matched for their primary colors, and overall light output, proper adjustment of **Brightness Uniformity** can create an exceptionally smooth screen in which:

- No area of the screen appears brighter than another
- Light output from one screen closely matches adjacent screens

Although the **Brightness Uniformity** control can be used for a stand-alone projector, it is particularly useful for setting up and maintaining tiled images that form a cohesive display wall in which the color “cast” and light output appear uniform throughout each image as well as throughout the entire wall. The procedure provided here assumes a multiple-screen application.

IMPORTANT: Before You Begin

NOTE: *Brightness uniformity cannot be adjusted for images that have been warped using Main Menu>Configuration>Geometry and Color>Geometry Correction.*

Read through the entire procedure before attempting to adjust Brightness Uniformity controls, and keep in mind the following checklist of prerequisites and guidelines:

Adjust Brightness Uniformity

1. Before attempting to work with **Brightness Uniformity**, ensure that primary colors, color temperature, and brightness output are all well matched from one screen to another. These matches are needed before you can achieve good brightness uniformity results. See [Managing Colors with ArrayLOC, on page 3-55](#).

IMPORTANT: *Double-check that all WHITES and LIGHT OUTPUT are well-matched.*

2. Enable the **Brightness Uniformity** check box. This will enable access to the uniformity controls and will apply the settings to your image.
3. Select the 13-Point test pattern for Full White for display. The 13-Point test pattern provides nine screen “zones” with 13 targets, see **Figure 3-12**.
4. Determine by eye or meter which areas need to be adjusted.

FOR BEST RESULTS: Rather than examining the CENTER of each zone when assessing Brightness Uniformity adjustments focus on extreme EDGES as indicated in the illustration at right.

5. Enable **Coarse Adjustment** to quickly apply display changes without redrawing the whole image.
6. Use sliders to achieve relative uniformity in the necessary zone.
7. Disable **Coarse Adjustment** to accurately display changes as you make them.
8. Use sliders for fine adjustment as necessary in the required zones.
9. Adjust **Overall Gain** to ensure that overall light output remains well matched from one screen center to the next.

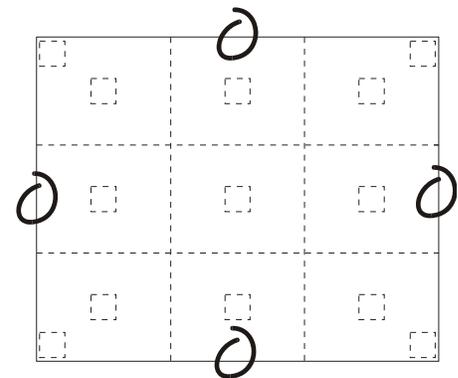


Figure 3-12 13-Point Test Pattern


For a description of the **Eye-Motion Filter** control, refer to [Noise Reduction Settings on page 3-28](#).

Cancelling Brightness Uniformity

If you do not want to use or apply Brightness Uniformity settings, delete the checkmark from the **Brightness Uniformity Enable** check box at the top of the **Brightness Uniformity** menu.

Edge Blending

The **Edge Blending** submenu provides a range of controls for smoothing together the overlapping bright edges of multiple adjacent projected images to create a single larger “seamless” image. These controls, which primarily affect white levels, are typically used in conjunction with mechanical lens blinders (optional), which are installed on the front of the projector and which primarily affect black levels. Brightness uniformity adjustment, if desired, should be performed first. The **Edge Blend** or **Grid** test pattern (available from the **Test Pattern** drop-down) is useful for the mechanical setup of the projectors. If necessary, adjust **Black Level Blending** first with the **Black** test pattern, then use the **White** test pattern to blend the white levels on the blend edges. The final step is to check the blended image with an external source. There is a centerline (both horizontal and vertical) in the Edge Blending test pattern. The intersection of these lines is the true center of the projector display area.

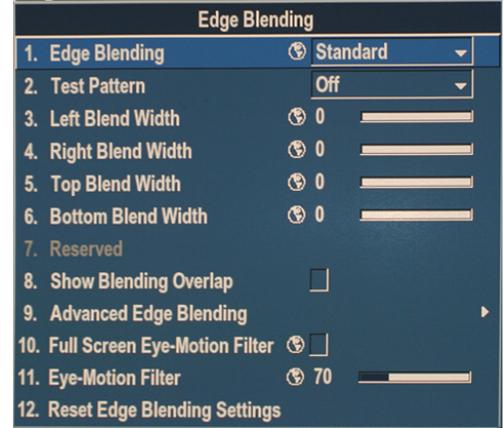

The **Show Blending Overlap** control enables or disables edge blending overlap. When enabled, this will make the size of the Edge Blending regions obvious. This control should only be used during setup.

For information about advanced blending of complex configurations, for example with spherical screens, see the *Twist User Manual (P/N: 020-100143-xx)* included in the user kit.

What is a Blend?

In simple terms, a blend appears as a gradient strip along an edge of a projected image. It is darkest along the extreme edge of the image, and lightens nearer to the rest of the image (**Figure 3-13**).

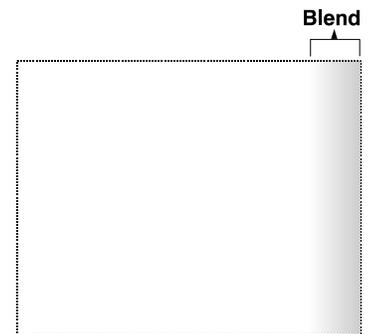


Figure 3-13 Edge Blending

• How Are Blends Used?

In multiple-projector walls, complementary blends between neighboring images can compensate for the extra “brightness” or intensity where these edges overlap. By controlling blend width and other properties, you can achieve uniformity across the group of images. Visible overlaps disappear (**Figure 3-14**). For best results, use the same projector model and type throughout your display wall. In addition, avoid high-gain screens whenever possible—the optical performance of such screens demands minimal image offset, thus projectors must be located very close to one another.

Edge blending software controls are located in the two-page **Edge Blending** submenu—access via the **Configuration** menu, then go to the **Geometry and Color** menu and select **Edge Blending**. The **Advanced Edge Blending** option opens the second page of the **Edge Blending** submenu.

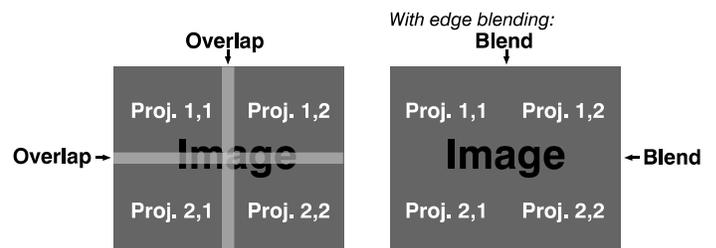


Figure 3-14 Edge Blending Concept

• Edge Blending Controls

Use **Edge Blending** controls to set the precise *width*, *shape* and *midpoint* you need to blend overlapping edges together smoothly.

NOTE: For information about advanced blending of complex configurations, for example with spherical screens, see the *Twist User Manual (P/N: 020-100143-xx)* included in the user kit.

Blend Width determines how much area is used for blending along an overlapping edge. Slide bar values represent the number of pixels used for the blend. For example:

- A setting of “eight” creates a blended edge 8 pixels wide.
- A setting of “0” signifies no blending.
- For best results in most applications, use a blend width of 12-25% (for example with a screen size of 1920 × 1200, 230-480 pixels).

WUXGA Ranges: 0-960 horizontal, 0-600 vertical

SXGA+ Ranges: 0-700 horizontal, 0-525 vertical


Show Blending Overlap turns your defined blend width area to solid grey so that, if needed, simply overlapping the grey bars can seamlessly align two adjacent images. Toggle the **Show Blending Overlap** off to reactivate the blend effect.

Other Functions - For convenience, the **Edge Blending** submenu also includes related options for enabling a test pattern. Such functions duplicate those provided elsewhere in the menu system.

Advanced Edge Blending Controls

IMPORTANT: For most display wall installations, see the *Entero Installation Guide* for information about matching edges in a display wall installation. Software edge blending should not be required for these installations.

- **Blend Shape** determines the rate of roll-off across the blend width, i.e. how quickly the white levels across the blend change from light and dark. Increasing the **Blend Shape** setting accelerates the rate of change at both extremes so that *less* of the region appears mid-grey. Decreasing the **Blend Shape** setting slows the rate of change so that *more* of the region appears mid-grey. For most applications, this subtle control is best left close to 50.
- **Blend Midpoint** determines the white level at the blend midpoint (the point equidistant between the beginning and end of the blend). Increasing the **Blend Midpoint** setting creates a blend that appears brighter than the rest of the image. Decreasing the **Blend Midpoint** setting creates a blend that is darker than the rest of the image. A setting of 50 means the midpoint is approximately 50% black—for best results in most applications, keep fairly close to this default.

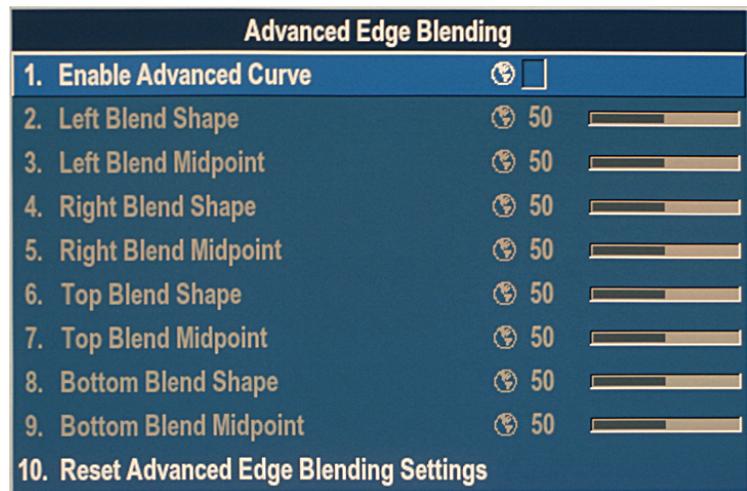

Edge Blending Procedure

NOTES: 1) Before attempting to work with edge blending software functions, align the projectors/images by correctly overlapping the displays from your intended external source. **2)** Match colors and the brightness uniformity.

IMPORTANT: For a shared edge, all blend procedures and settings should be identical on both projectors.

1. Start with 2 projectors. Display full white field test pattern from both.
 2. In the **Edge Blending** submenu, enable **Edge Blending** by choosing **Standard** from the drop-down.
 3. Check the **Show Blending** Overlap box on both projectors.
 4. Set starting points for adjustment:
 - a. Set all blend widths to 0.
 - b. Go to **Advanced Edge Blending** and set all options to 50.
 5. Set blend width:
 - a. On one projector, increase the **Blend Width** for an overlapping edge (for example, if the projector image is on the left, its right edge overlaps the adjacent image—adjust **Right Blend Width**).
 - b. Use the same setting on the second projector for this shared edge.
- NOTE:** Recommended overlap is 12.5%–25%.
In applications where you are projecting only white or light images, the Blend Width may be slightly higher—set according to how much overlap you have between images.
6. Increase blend width (both projectors) until the overly bright band at the midpoint of the overlapping blends is at 50% grey level. For the shared edge, use the same **Blend Width** setting on each projector.
NOTE: *If the best blend appears to be between two settings, choose the wider setting for both projectors.*
 7. Check the blend and adjust as required:
 - To lighten the overall blend, increase the **Blend Midpoint** in both projectors.
 - To darken the overall blend, decrease the **Blend Midpoint** in both projectors.
 - To fine-tune the amount of mid-grey intensity (as opposed to black/white) in the blend, adjust **Blend Shape** in both projectors.
 8. Repeat with remaining projectors / overlaps.
 9. Check completed display wall with the desired external signal.
 10. If necessary, adjust the mechanical alignment to maintain perfect pixel-on-pixel alignment over time.

Array Color Target

See [Array Color Target](#), on page 3-49.

Projector Color Adjustment

See [Projector Color Adjustment](#), on page 3-51.

Black Level Blending

This function brightens the center regions to match adjacent blend regions when edge blending multiple projectors. The **Black Level Blending** submenu provides controls that allow you to adjust the black level hues of multiple adjacent projected images to create one large seamless display.

NOTES: 1) Adjust edge blending before adjusting black levels. **2)** Blinders are recommended for fixed installations. **3)** Do not use black level blending if TWIST was used for the geometry.

Black Level Blending Procedure

NOTES: 1) Adjust edge blending before adjusting black levels. **2)** The zones in Black Level Blending (BLB) menu correspond to the Edge Blend zones. If a given Edge Blend zone width is set to 0 (i.e. no blend on that side), then the corresponding BLB zone is disabled. It only becomes accessible when that Edge Blend zone is active.


1. Start with 2 projectors. Select the black test pattern for both projectors from the **Geometry and Color** submenu.
2. In the **Black Level Blending** submenu, enable black blending.
3. Set the blend width.
4. Working with one projector at a time, use the center brightness sliderbar to adjust the center brightness (brightness of the non-blended region) so that the center intensity matches that of the brightest blended region (the center of all images when blending a 2 x 2 display is the target area).
5. You can choose which of the next four options, Top, Bottom, Left, Right, to use depending on which edge of the projector you are working with has been edge blended. The blend width can be adjusted to line up properly but by default it corresponds to the edge blending setting determined for that edge.
6. The brightness and black hues of the blended region can be adjusted in more detail in case fine-tuning is needed (may be necessary only for blending a 2 x 2 projector display because of blending differences for the sides and center).
7. Use **Reset Black Level Blending Settings** to undo the settings made in the previous steps.

NOTES: 1) The menu options vary depending on the edge blending parameters. **2)** You may need to re-adjust the black level brightnesses following the overlap adjustments on each blended edge. **3)** When adjusting 6 or more projectors, you need to ensure that the hue and brightness of each target area is matched as closely as possible.

Tiling Setup

Image tiling allows a single input image to be spread over multiple screens, with each screen displaying a fraction of the image. Entero projectors support up to a 3 x 3 tiled array (for example, 1 x 2, 3 x 1, and 2 x 3).

Projectors are numbered from left to right (left column = 1), and from top to bottom (Top row = 1).

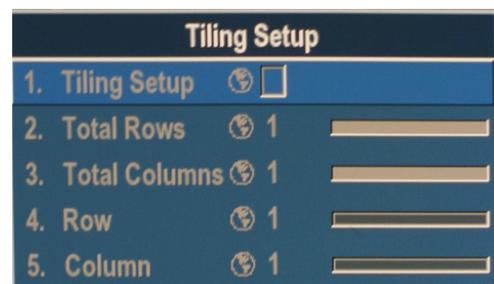

On each projector you must set the following:

- The tiling array size sets the total rows and total columns. This setting will be the same on all the projectors in the array.
- The relative location of the projector within the array sets the row number and column number for each projector
- Tiling can be enabled or disabled by selecting the **Tiling Setup** check box and you will not lose any of the above settings.

The features that act differently when Tiling is enabled are:

- The PIP border is disabled.
- Cascading menus are turned OFF.
- Menus show only 5 items, with a scroll bar to allow the rest of the menu items to be reached.
- Keystone and Warp are not supported with Tiling enabled.
- Projector source switching in the array is not synchronized. Therefore some latency can be seen from when the commands are issued to each projector, causing switching to not be as seamless when in a tiling configuration.

NOTE: When the FUNC+HELP key combination is pressed, the tiling settings will be cleared.

Tiling and Frame Lock Issues

If, while using tiling, you find that some screens are displaying black when they should be displaying content, you may need to turn the frame lock feature off or increase the frame delay settings.

To turn the frame lock off, go to the **Configuration > Output Options** menu and select **Free Run** from the **Frame Locking** drop-down list. You can also use the serial API command (FLE 0).

To increase the frame delay setting, navigate to the **Configuration > Output Options** menu, select **Frame Lock** from the **Frame Locking** drop-down list, and then drag the **Set Frame Delay** slider across to a value slightly higher than the minimum value shown in the **Actual Frame Delay** field. You can also use the serial API command (FRD+STAT?) to query for minimum frame lock setting and then use (FRD nnn) where nnn is slightly higher than the minimum value returned.


Diagnostics & Calibration

Test Pattern

Choose the desired internal test pattern to display, or select **Off** to turn off a test pattern. Alternatively, use the TEST key to cycle through test patterns.

Grey Level

Set the level of grey to display in the full grey field test pattern.

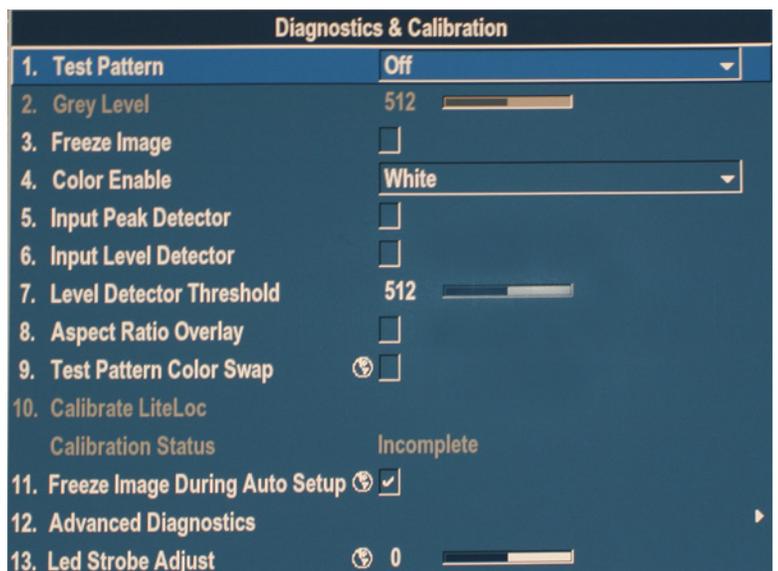

Freeze Image

Enter a check mark to freeze (stop) an image on a single frame. Use this diagnostic tool to examine in detail a still version of an incoming image that cannot be “frozen” at the source. For example, in moving images it is sometimes difficult to observe artifacts such as external de-interlacing/resizing and signal noise. Remove the checkmark to return to normal.

Color Enable

Select which color(s) you want to see. Use this while working with color temperature, input levels or other special setup parameters. Colors can be enabled/disabled by entering the corresponding function code listed on the back of the standard remote keypad.

Input Peak Detector

This is a fast method for defining individual input levels, and improving the accuracy of input levels set by the Auto Input Level function. Enabling the **Input Peak Detector** activates a special operating mode for detecting *only* pixels that are considered black or white—all other levels are displayed as a mid-level grey. When used with a 16-step greyscale pattern in which the two black and white bands are known to be at opposite edges of the image, you can watch these isolated areas while adjusting individual black levels and input drives until both bands are just visible. Images from this source will then display correct blacks and whites without crushing or washing out.

NOTE: *If using Input Peak Detector with PIP, both images must have the same color space.*

Input Level Detector

The **Input Level Detector** check box enables specific thresholds for blacks and whites. Input levels that fall below a specified level value (see below) are displayed as black, and all others are displayed as white. To use:

1. Enable **Input Level Detector** and display a continuous greyscale.
2. Set **Level Detector Threshold** to near black (such as 200).
3. Adjust **Offsets** to minimize area of black stripe.
4. Set **Level Detector Threshold** to near white (such as 800).
5. Adjust **Gains** to minimize area of white stripe.

Level Detector Threshold

The input level value defines the value to be used by the **Input Level Detector** in recognizing blacks and whites. See **Input Level Detector**, above.

Aspect Ratio Overlay

Check this box to display an overlay pattern on the image. The overlay shows the boxes corresponding to the size and shape of different aspect ratios.

Test Pattern Color Swap

This function swaps the green and red color when drawing the Grid test pattern, and may be helpful when adjusting convergence on the projector.

Freeze Image During Auto Setup

If selected, this will hide temporary image artifacts that may appear during the auto setup procedure.

Advanced Diagnostics

This function allows the setting of advanced controls which may cause image disruption, including the possible loss of the OSD menus. These disruptions are only temporary; pressing EXIT to exit the menu will restore the settings and allow normal operation.

Output Peak Detector

This is an aid for setting up the input levels. It causes the data to be processed so that very bright and very dark signals display as fully ON or OFF, and everything in-between is set to mid-level gray. The input levels should be adjusted so that bright and dark objects in the image are just visible.

Output Level Detector

This is an aid for setting up the input levels. It causes the data to be processed so that all levels below a specified value are set to black and all above (and including) it are set to white.

Level Detector Threshold

Specifies the value to be used by the level detector.

Light Engine Test Pattern

One of three light module test patterns may be displayed: black, white, or horizontal ramp.

LED Strobe Adjust


During power up the projector will automatically optimize LED strobe timing, the time between when a LED is told to turn on versus when it actually does turn on. If the strobe timing is not optimal, color banding may be seen on grey levels. Use this advanced option to correct color banding by adjusting the slider left or right as required.

Service

This option is accessed from the **Configuration** menu. It is passcode-protected and intended for use by accredited Christie service technicians only.

Option Card Settings

Accessed from the **Configuration** menu, this menu allows adjustment of any settings specific to each option card that is currently installed in the projector.

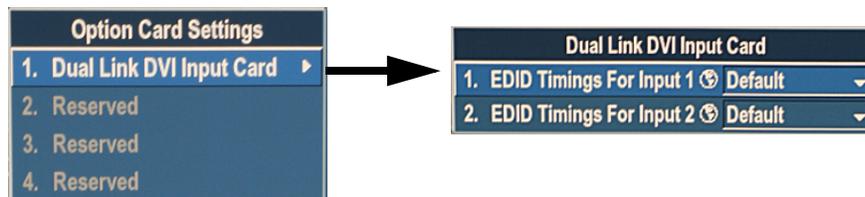


ArrayLOC Menu

Use this menu to set up your projector array color and brightness.

By default, ArrayLOC is enabled and configured to automatically display a moderately saturated gamut at the maximum brightness the array can support. If array colors must be adjusted or if an individual projector must be matched to the array, see [Managing Colors with ArrayLOC, on page 3-55](#).

NOTE: While working in the ArrayLOC menus and submenus, ArrayLOC displays a warning popup on the affected projector if adjusted settings fall outside the range the system can adjust for. Warnings include:

- Minimum brightness not met (BCLOC disabled)
- Minimum brightness not met (Warning)
- Min Gamut not met (BCLOC disabled)
- Min Gamut not met (Warning)

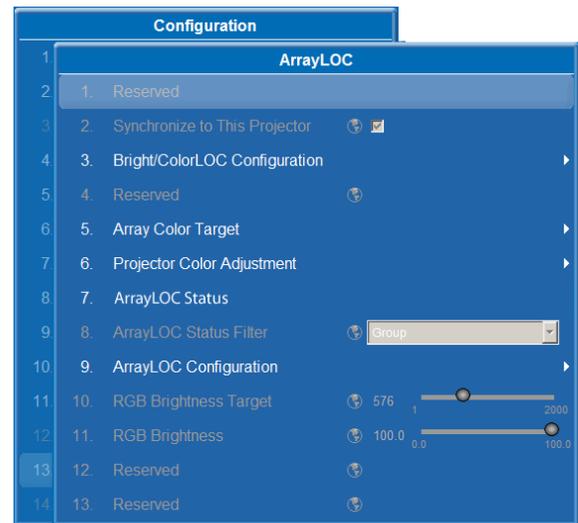

Synchronize to this Projector

To broadcast the **ArrayLOC** settings to the projectors in your array, you must define a projector as the “master” by checking the option **Main Menu > Configuration > ArrayLOC > Synchronize to This Projector**.

The master projector has access to most settings under the **Bright/ColorLOC Configuration** and **Array Color Target** submenus. These settings are greyed out on the other projectors in the array to prevent conflicting information from being sent to the array.

You can change which projector is the master at any time, by checking the Synchronize to This Projector option on another projector. The previous master projector automatically releases the setting.

Bright/ColorLOC Configuration

Use the **Bright/ColorLOC Configuration** menu to assess and work with the capabilities of the projectors in the group or array.


Minimum Brightness

Use this option to set the minimum brightness (as a percentage of the target brightness) that the array will target, and to set the threshold for alerts from projectors that cannot achieve the specified minimum. Projectors that fall below the minimum are excluded from the calculations of the common gamut and common brightness.

If the projector falls below the minimum, the projector operates at its current brightness and gamut. Changes will not be made.

Minimum Gamut

Use this option to set the minimum gamut (as a percentage of the target gamut) that the array will display, and to set the threshold for alerts from projectors that cannot achieve the specified minimum. Projectors

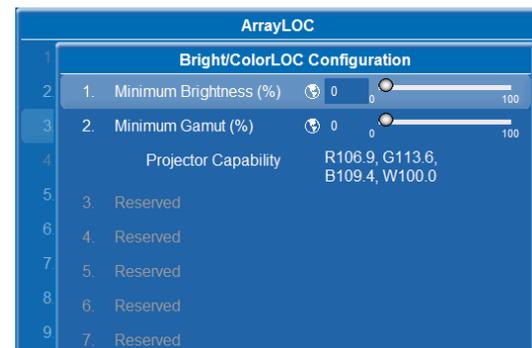


that fall below the minimum are excluded from the calculations of the common gamut and common brightness.

If the projector is unable to maintain the minimum gamut, the projector operates at the current brightness and color gamut. LED drive level changes and electronic color correction is not done.

NOTE: *The failure point for maintaining minimum gamut is calculated as:*

$$\frac{a}{b} < \text{minimum gamut}$$

For example, see the diagram at the right, where b is the length of the line from the target white point to the target color primary, and a is the length of the line from the target white point to the intersection of the projector capability gamut line and the line from the target white point to the target color primary.

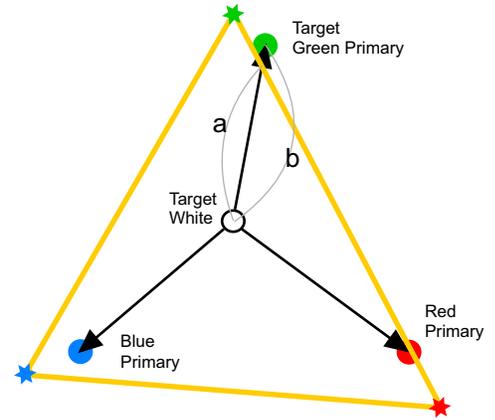

Projector Capability

Identifies the projector capability with respect to the array common color gamut as defined by Color Target and Brightness Target. 100% indicates that the projector meets the target. A greater number indicates that the projector can exceed the target. A smaller number indicates how much the projector falls short of meeting the target.

Array Color Target

Use this menu on the master projector to set the color target for the projector array. These settings are enabled on master projectors only. To make the current projector the master, check **Main > Configuration > ArrayLOC > Synchronize to This Projector**.

NOTE: *If you are setting up a single projector, create an array of one and make it the master to enable the color controls.*

Target Color Space

Sets the color space for the projector array. Changing this option displays the red/green/blue x/ y values associated with the selected option. Selecting one of the user-defined color spaces displays the last saved values.

Choose **Maximum** from **Target Color Space** to view the common color gamut values for the array.

NOTE: *Target Color Space set to Maximum reflects a color space larger than capable for the best array color saturation.*

Array Capability

Indicates the current projector’s capability with respect to the selected color target and the target white point. The information format is:

Array Color Target	
1. Target Color Space	User 1
Array Capability	Data Not Available
2. Target Red x	0.640
3. Target Red y	0.330
4. Target Green x	0.300
5. Target Green y	0.600
6. Target Blue x	0.150
7. Target Blue y	0.060
8. Target White x	0.312
9. Target White y	0.329
10. Copy Color Space From	Maximum
11. Select White Point	User White 1
12. Set White to Color Temperature	<input checked="" type="checkbox"/>
13. White Color Temperature	6500
14. Reserved	
15. Auto Color Enable	<input checked="" type="checkbox"/>
16. Test Pattern Enable	<input checked="" type="checkbox"/>
17. RGB Brightness Target	600
18. Reserved	

R 999.9 G 999.9 B 999.9 W 999.9

R/G/B - Indicates the percentage achieved of the red, green, and blue target gamut.

W - Indicates the percentage achieved of the product of the RGB brightness, and the target brightness.

Target Red x/y, Target Green x/y, Target Blue x/y

Displays the color values associated with the selected target color space.

Only values for user defined color spaces (User 1 through 4) can be changed. Changes to these values update the associated color space chromaticity.

When the **Target Color Space** is set to **Maximum**, the values reflect a color space larger than capable for the best array color saturation.

Target White x/y

Displays the white x/y values associated with the **Select White Point** option.

- Only values for user defined white points (User White 1 through 4) can be changed.
- When **Set White Color to Color Temperature** is checked, the values are calculated based on the specified **White Color Temperature**.

Copy Color Space From

Updates the **Target Red x/y, Green x/y, Blue x/y** values based on the color space selected from the list. This option is available only when the **Target Color Space** is set to one of the user-defined options, User 1 through 4.

Select White Point

This drop-down is not available on Entero projectors.

Set White to Color Temperature

Check this option to recalculate **Target White x/y** values based on the specified standard **White Color Temperature**. This option is available only when **Select White Point** is set to one of the user-defined options, User White 1 through 4.

This option is unchecked automatically when you change the **Select White Point** option.

White Color Temperature

Use this option to specify the white color temperature used to calculate and update the **Target White x/y** values. This option is available only when **Set White to Color Temperature** is checked.

Auto Color Enable

Check this option to enable system (background) color to change based on the cursor's position in the **Array Color Target** menu.

- **Target Red x/y** changes the system color to red.
- **Target Green x/y** changes the system color to green.
- **Target Blue x/y** changes the system color to blue.
- All other menu options change the system color to white.

The color resets automatically when you exit the menu.

Test Pattern Enable

Check this option to enable the automatic display of a flat white test pattern when you select the **Array Color Target** menu.

The test pattern is turned OFF automatically when you exit the menu.

RGB Brightness Target

Use this option to adjust the RGB brightness target for the array.

Projector Color Adjustment

Use this menu to make ArrayLOC projector-specific color adjustments. These controls are used to fine-tune the matching performed by ArrayLOC after the targets have been set through the **Target Color Space** menu.

These adjustments compensate for the projection system as a whole, including loss of brightness or color shift due to lens, mirror or screen. For example, the mirror might not reflect blue 100 percent, or the screen might absorb more blue. Measure the output at the screen with a color meter and use this option to adjust the blue until you get the array color target value at the screen.

Adjustments are specific to the target color space. If the color space is changed for the array, projector adjustments can be copied from the old target color space and fine-tuned again.



Target Color Space

Use this option to change the color space. Changing this option applies the red/green/blue x/y values associated with the selected option. It also updates the red/green/blue components of each color on this menu. Selecting one of the user-defined color spaces displays the last saved adjustment values.

The Target Color Space option is enabled only on the master projector. All other projector specific color adjustments on this menu are available on all projectors at all times.

Red Part/Green Part/Blue Part of Each Color

Use these options to make projector specific color adjustments to the selected **Target Color Space**.

Clear Adjustments

Use this option to reset the color values to the color adjustment default values: 0 or 100.

Reset Current Adjustments To Defaults

Use this option to reset the red part/green part/blue part of each color to the default values set at the factory during calibration.

Auto Color Enable

Check this option to enable system (background) color to change based on the cursor's position in the **Array Color Target** menu.

- Red/green/blue part of red changes the system color to red.
- Red/green/blue part of green changes the system color to green.

- Red/green/blue part of blue changes the system color to blue.
- All other menu options change the system color to white.

The color resets automatically when you exit the menu.

Test Pattern Enable

Check this option to enable the automatic display of a flat white test pattern when you select the **Array Color Target** menu.

The test pattern is turned off automatically when you exit the menu.

Copy Adjustments From

Copies the adjustment values from the selected color space to the current color space.

White Brightness Adjustment

Use this option to adjust the RGB brightness for the projector.

ArrayLOC Status

Use this option to review the capabilities of the specified group of projectors (see *ArrayLOC Status Filter*, on page 3-53).

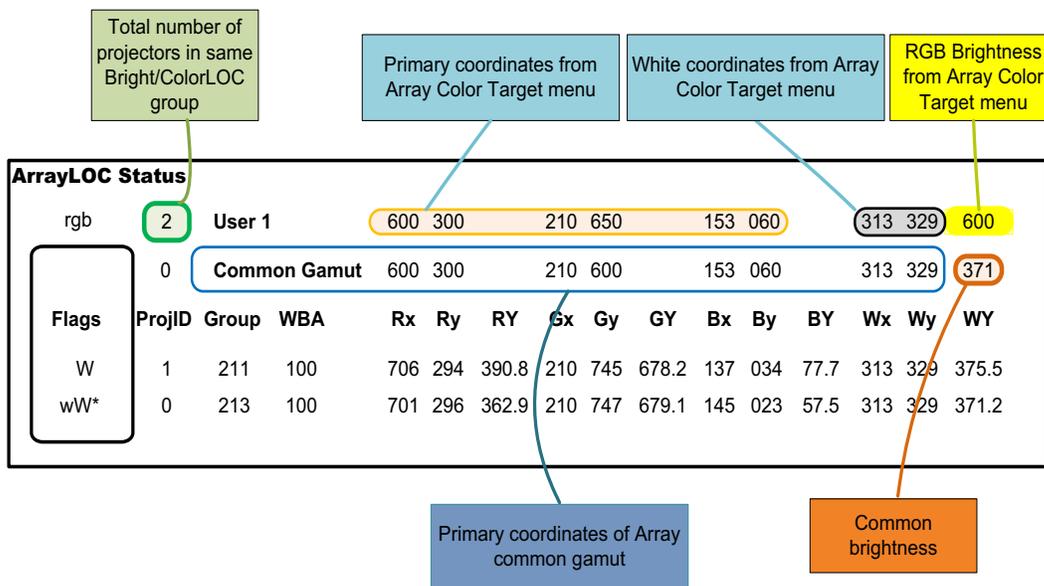


Figure 3-15 ArrayLOC Status

The ArrayLOC status window (Figure 3-15) includes the following information:

- The target gamut and calculated common gamut are shown in the same format as the projector data below. For the common gamut, if it is smaller than the target gamut this is indicated in the flags column with < **Target**.
- The **Flags** column uses several characters to identify projectors within the array:
 - The least red projector is identified with a lowercase **r**.
 - The least green projector is identified with a lowercase **g**.
 - The least blue projector is identified with a lowercase **b**.

- The dimmest projector is identified with a lowercase *w*.
- The projector with white brightness capability less than Target brightness is identified with an uppercase *W*.
- Any projector with broadcast mode enabled is identified with an asterisk * if broadcasting to its Bright/Color group.
 - The **Proj ID** column shows the projector array ID.
 - The **Group** column shows the projector Bright/Color group #.
 - The **WBA** column shows the projector white brightness adjustment.
 - The **Rx, Ry, and RY** columns show the red CIE 1931 x, CIE 1931 y and CIE 1931 Y capability of the projector. The Y capability is the product Y grossed-up intensity of the projector and its current red duty cycle on time.
 - The **Gx, Gy, GY, Bx, By, and BY** columns show the green and blue capability of the projector.
 - The **Wx, Wy and WY** show the white capability of the projector. The white capability of the projector is calculated as the sum of the red, green and blue capability, scaled by the current duty cycle of the projector.

ArrayLOC Status Filter


Use this option to specify which projectors are included in the ArrayLOC Status report.

- **Group, Min Capability** includes projectors in the array that meet targets.
- **Group** includes all projectors in the ArrayLOC group.
- **None** includes all the projectors detected in the ArrayLOC network.


ArrayLOC Configuration

ArrayLOC Network


Select the projector-to-projector communication network configuration for all Ethernet messages related to ArrayLOC functions, including ArrayLOC messages, and BCLOC messages.

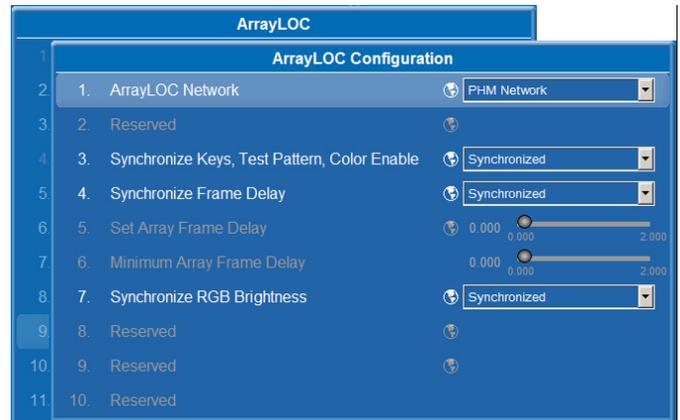

- **EM Network:** All Ethernet messages related to ArrayLOC flow through the EM Network port of the PHM.

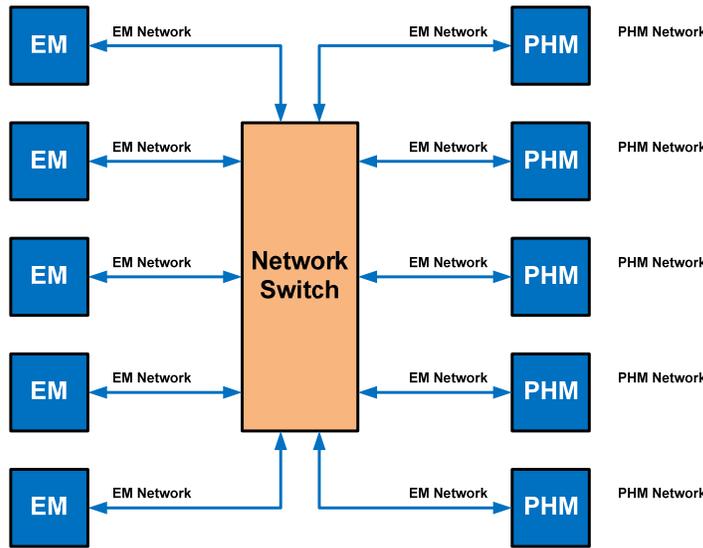

- **PHM Network:** All Ethernet messages related to ArrayLOC flow through the PHM Network port of the PHM.

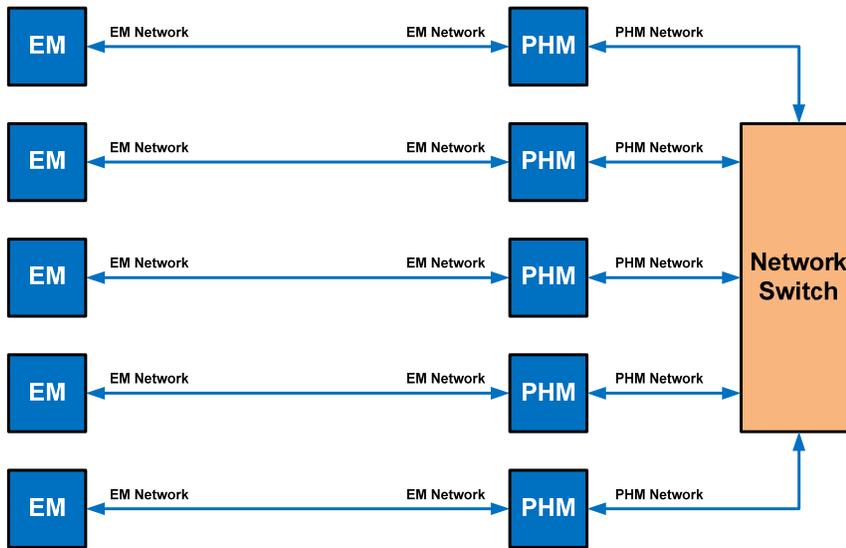

Synchronize Keys, Test Pattern, Color Enable

Use the **Synchronized** option to set the projector to listen for remote keystrokes through the ArrayLOC network and the master projector. All synchronized projectors respond to the same keystrokes. Double key strokes may not register correctly, use alternate key commands instead.

A synchronized projector automatically starts listening to its IR receiver if the master projector becomes unavailable, for example if it goes into standby mode.

You can override the key synchronization by using the Proj key and projector address to communicate with a specific projector, or you can use a wired remote with a specific projector.

Independent indicates that the projector listens to its own IR remote receiver. It is the default option. Change this setting for each projector individually.

NOTE: ArrayLOC network communication overrides RS-232 serial communication for keys.

Synchronize Frame Delay

Use the Synchronized option to synch the frame delay on all the synched projectors in the ArrayLOC group. Set the delay value in **Set Array Frame Delay**. **NOTE:** *To use this synchronization feature, set **FrameLocking** to **FrameLOCK**. See [Frame Locking](#), on page 3-30.*

Independent is the default option. Change this setting for each projector individually.

Set Array Frame Delay

This option indicates the current frame delay for all the synched projectors in the ArrayLOC group. Use this control on the master projector to adjust the frame delay for the synched projectors in the ArrayLOC group. Set the value equal to or higher than the reported **Minimum Array Frame Delay** value. Setting the value lower than the reported minimum may result in tearing artifacts.

Minimum Array Frame Delay

Indicates the largest minimum frame delay reported for the ArrayLOC group. The value is the largest of the reported minimum frame delay required to render the display without tearing artifacts on each projector in the ArrayLOC group.

Synchronize RGB Brightness

Use the Synchronized option to synch the RGB brightness for all the synched projectors in the ArrayLOC group.

Change this setting for each projector individually. **Synchronized** is the default option.

RGB Brightness Target

Use this option to adjust the target brightness for all projectors in this array.

RGB Brightness

Use this option to adjust the brightness of the projector array as a percentage of the target brightness.

Managing Colors with ArrayLOC

Entero projectors use ArrayLOC to display a reasonably saturated gamut at the maximum brightness that all the projectors in the array can support. ArrayLOC monitors the projector array and adjusts settings automatically.

To manage color using ArrayLOC:

- [Take Control of the Array](#), on page 3-56
- [Adjust Projected White and Primary Colors for the Array](#), on page 3-56
- [Fine-Tune Whites, White Brightness, or Primary Colors](#), on page 3-57
- [Fine-tune Projector Colors With a Color Meter](#), on page 3-58


NOTE: *ArrayLOC is enabled by default.*

Take Control of the Array

To make color adjustments across the array, you must make the you are working with the master projector.

1. On the projector you want to work with, access the ArrayLOC menu: **Main Menu > Configuration > ArrayLOC**.
2. Check **Synchronize to This Projector**.

The current projector becomes the master projector. Changes you make in the **Array Color Target** or **ArrayLOC Configuration** menus on the master projector are broadcast to the other projectors in the array.

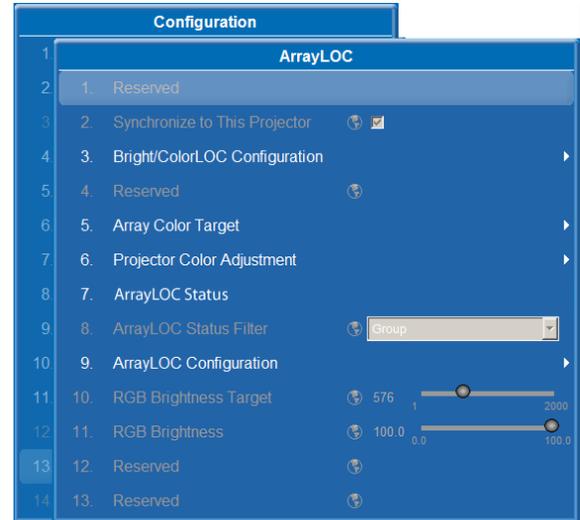

Adjust Projected White and Primary Colors for the Array

User-defined target color spaces allow color primaries and white points to be adjusted independently. For example, you can select the target color space User 1, copy the values from the target color space Factory, leave the color primaries, and adjust only the white point. All the settings for a user-defined color space are editable.

1. Navigate to **Main Menu > Configuration > ArrayLOC > Array Color Target**.
2. In **Target Color Space**, select one of the **User** settings to modify.

NOTE: To use another color space as a starting point, select a source color space from the Copy Color Space From dropdown list. When using Maximum as a starting point, the values reflect a color space larger than capable for the best array color saturation. The values may not reflect real-world colors.

3. Check both **Auto Color Enable** and **Test Pattern Enable**, the system (background) color changes to the target color being adjusted (for example, Target Red x invokes a red background). All other menu options change the system color to white as long as Test Pattern Enable is checked.
4. Adjust the color primaries (for example, Target Red x and Target Red y) for the color space.
5. To adjust white in the image, select a **User White** item (1 to 4).

- Adjust **Target White x** and **Target White y** values, or
- Check the **Set White to Color Temperature** box and set the **White Color Temperature** value to any value between 3200 and 9300°K.

6. To adjust the target brightness for the array, adjust **RGB Brightness Target** on the master projector. For maximum brightness, set the value to a large number, such as 1000.
7. If the array appears matched across all projectors for color and brightness, color setup is complete, otherwise see [Fine-Tune Whites, White Brightness, or Primary Colors, on page 3-57](#).

NOTE: Array Capability expresses the common gamut red, green, blue and white values of the current projector as a percentage of the array target color and brightness values (see Minimum Gamut description on page 3-48). If any of these values is less than 100, there is at least one projector in the array that cannot achieve target values. Reducing Target Color Space and RGB Brightness Target values in the master projector will bring the Array Capability values closer to 100.

Fine-Tune Whites, White Brightness, or Primary Colors

Projector Color Adjustment lets you fine-tune color or brightness for individual projectors that don't quite match the array. For more information, see *Projector Color Adjustment, on page 3-51*.

These steps outline color adjustments using projector color settings until the colors appear to match the rest of the projectors in the array. Color adjustments are evaluated by eye. A color meter can help determine the change required, but the results are still evaluated by eye. For information about using the color meter with this procedure, see *Fine-tune Projector Colors With a Color Meter, on page 3-58*.



1. Navigate to **Main Menu > Configuration > ArrayLOC > Projector Color Adjustment**.
2. Projector Color Adjustment settings are specific to each color space. To use existing fine-tuning adjustments as a starting point, select a tuned color space from **Copy Adjustments From**.
3. Check both **Auto Color Enable** and **Test Pattern Enable**, the system (background) color changes to the target color being adjusted (for example, Target Red x invokes a red background). All other menu options change the system color to white as long as Test Pattern Enable is checked.
4. Navigate to **Main Menu > Configuration > Communication**. Note the IDs of the projectors you want to fine-tune.
5. To adjust white color and brightness settings (repeat for each projector that needs adjustment):
 - a. Press PROJ, <PROJECTOR ID > on the remote. The remote directs commands to the specified projector only.
 - b. Use the **White Brightness Adjustment** to roughly match the white brightness of the array. A higher value makes the projector image brighter.
 - c. Adjust the **Red Part of White**, **Green Part of White**, and **Blue Part of White** to match the white color to other projectors in the array.
 - d. Readjust the **White Brightness Adjustment** control if matching white colors revealed mismatched white brightness.
6. Navigate to **Main Menu > Configuration > Communication**. Note the IDs of the projectors you want to fine-tune.
7. To adjust color primary settings (repeat for each projector that needs adjusting):
 - a. Press PROJ, <PROJECTOR ID > on the remote. The remote directs commands to the specified projector.
 - b. Adjust the **XXX Part of YYY** controls where YYY is the color being adjusted, and XXX and YYY are not the same color (ie. non-dominant colors). Negative values for the non-dominant colors are permitted. Adjusting **XXX Part of XXX** adjusts the color's brightness and affects the color of white.
 Example: If the blue primary color does not match. Use the **Red Part of Blue** and **Green Part of Blue** controls. Negative values will increase the saturation of the blue. Values between -15 and +3 work well.

NOTE: For information about using a color meter with this procedure, see *Fine-tune Projector Colors With a Color Meter*, on page 3-58.

8. Repeat steps 6 and 7. until all the primary colors are matched.
9. After adjusting the primary colors, verify that the white color and brightness still match. Repeat the process if necessary.

Fine-tune Projector Colors With a Color Meter

To use a color meter for projector color adjustments, follow the instructions in *Fine-Tune Whites, White Brightness, or Primary Colors*, on page 3-57, but use a color meter for the XXX Part of YYY adjustments.

1. To note the xy color values reported for the common gamut, navigate to **Main Menu > Configuration > ArrayLOC > ArrayLOC Status**. For example, see **Figure 3-15**.
2. Measure the projected primary color with the meter and compare the metered values to the common gamut values.
3. Use the adjustment guide to determine how to adjust the Projector Color Adjustment values to correct the differences. The adjustment guides are color coded. The suggested corrections are also color coded, and reflect the direction of the change, + or -. For example, if the measured red is 660, 325 and the Common Gamut value is 640, 330 then the measured x is high (High X) while the measured y is low (Low Y). The corresponding quadrant of the RED guide indicates +G (increase green) to correct the mismatch with other projectors.

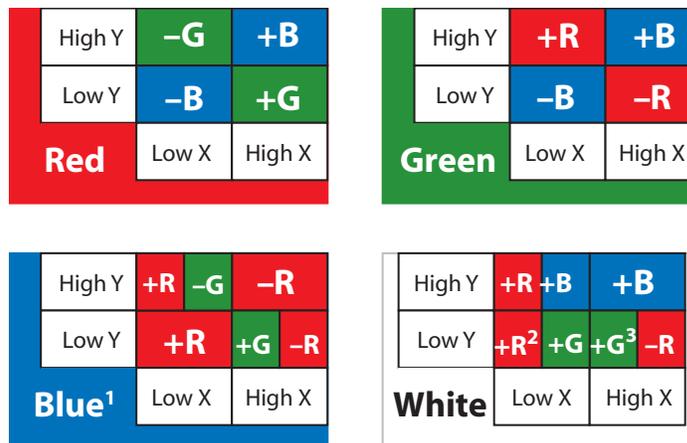


Figure 3-16 Red, Green, Blue, and White Color Adjustment Guides

^aSome corrections require both red and green adjustments.

^bAlternative: decrease blue (-B) instead of increasing red and green.

^cAlternative: increase blue (+B) and increase green (+G) instead of decreasing red, and increasing green.

3.4.5 Status

The read-only **Status** menu lists a variety of details about the standard and optional components detected in the projector. Refer to the **Status** menu for versions of hardware and software installed, the hours logged in total and for a specific period (such as a rental period), and for your projector model name and serial number. In addition, the **Status** menu identifies the current channel, its location, its frequencies and other details.

3.4.6 Secondary Input & Switching

Use the **Secondary Input & Switching** menu to enable and define how you want to use either the Picture-in-Picture (PIP) or Picture-by-Picture (PBP) image. Most of the functionality applies the same way when you are making adjustments to the primary image.


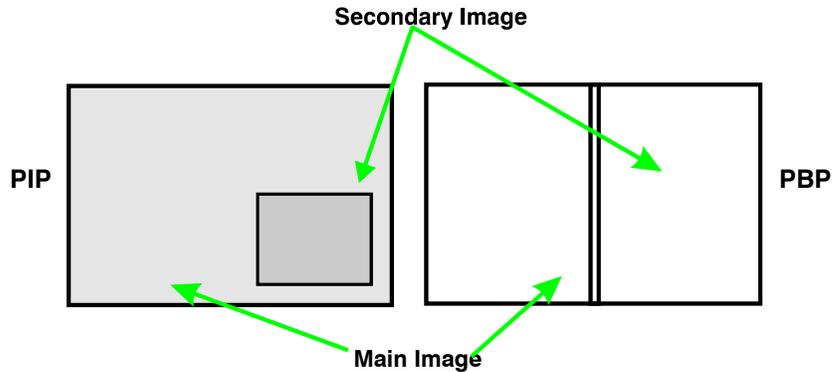


Figure 3-17 PIP & PBP Example

The default is **Off** until the secondary input source is enabled.

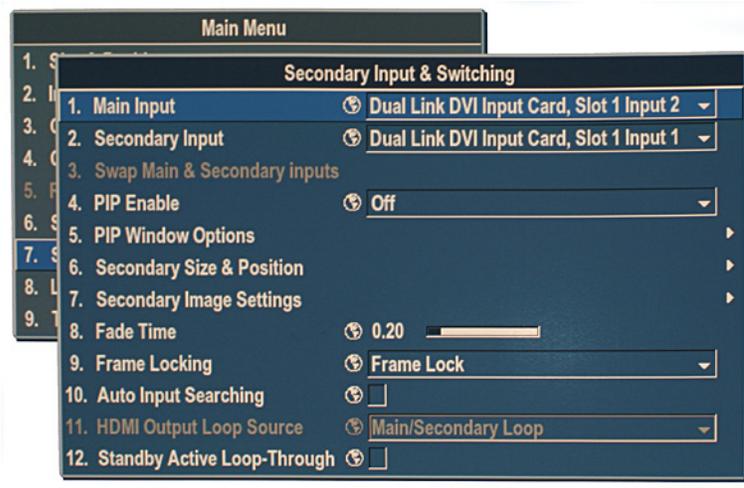

NOTE: To control the primary image, access all picture controls through the Main menu. To control the secondary image, access picture controls through the Secondary Input & Switching menu.

From the **Secondary Input & Switching** menu, if you choose either PIP or PBP, you are limited to a maximum of 60 Hz each.

Main Input

From the list of active Inputs, select one to be used as the Primary or Main image.

Secondary Input

From the list of active inputs, select one to be used as the secondary or PIP.

Swap Main & Secondary inputs

Toggle the current secondary input's relationship so that the primary (Main) input becomes the secondary, and the secondary input becomes the primary. Swapping is available only when PIP or PBP is enabled.

NOTE: *There may be a slight delay when swapping the Primary and Secondary images.*

PIP Enable

Use this option to enable a secondary image.

OFF displays the main input source only.

PICTURE-IN-PICTURE displays the 2 inputs at once, one image in a window in the other image.

PICTURE-BY-PICTURE displays 2 inputs at once, side by side.



Figure 3-18 Picture-In-Picture

Short cut: Press **PIP** on the IR remote to toggle

between displaying 2 input sources at once (main and secondary images) or the primary or main input source only.

PIP Window Options

Set the location of the PIP (secondary) image in the display. You can adjust the following:

PIP Position Presets

Set the location of the PIP (secondary) image in the display.

PIP Window Size

Controls both the image *width* and *height* in tandem, maintaining the current aspect ratio of the displayed signal data.

PIP H-Position

Moves the image right or left within the area of available pixels.

NOTE: *The value shown represents where the approximate center of the image lies in relation to the total number of pixels available horizontally. This varies widely according to the signal; watch the image while adjusting.*

PIP V-Position

Moves the image up or down within the area of available pixels.


NOTE: *The value shown represents where the approximate center of the image lies in relation to the total number of pixels available Vertically. This varies widely according to the signal; watch the image while adjusting.*

PIP Border Width

Enables the optional border around the PIP image. When enabled, a one pixel-wide border will surround the PIP image. When disabled, no border will be displayed.

PIP Border Color

This control allows you to choose the color of the optional border around the picture-in-picture image. The border can be disabled by setting the width to zero.

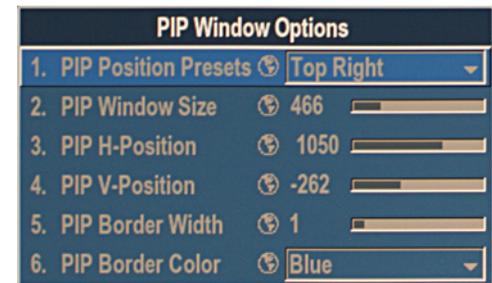


Secondary Size & Position

Most controls in the **Secondary Size and Position** menu adjust the PIP (secondary) image in the same fashion as their counterparts in the main **Size and Position** menu.

Keep Aspect On Auto Setup

Ensures that Auto Setup for any source will maintain the input aspect ratio when the default size is calculated. If disabled, and the source is not a special case, the video source where a default stretch is defined, the source is scaled to fit the platform.

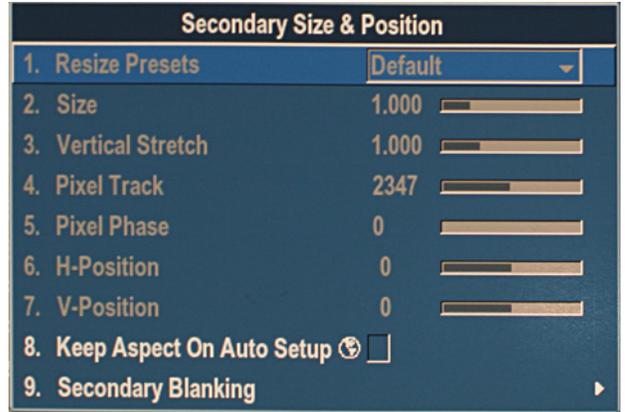

Secondary Blanking


Refer to *Blanking, on page 3-20*.

Secondary Image Settings

The controls adjust the secondary image in the same fashion as their counter parts in the **Main > Image Settings** menu. See *3.4.2 Size and Position Menu, on page 3-17*.

Secondary Video Options

The controls adjust the secondary image in the same fashion as their counter parts in the **Main > Image Settings > Video Options** menu. See *Video Options, on page 3-22*.

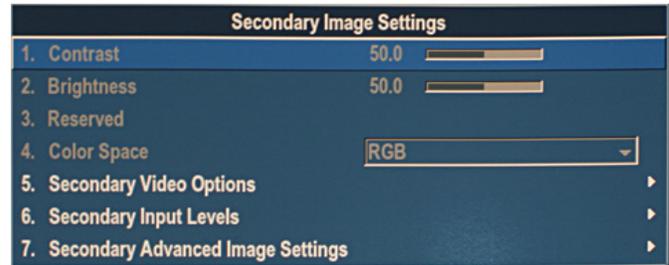

Secondary Input Levels

The controls adjust the secondary input levels in the same fashion as their counter parts in the **Main > Image Settings > Input Levels** menu. See *Input Levels, on page 3-24*.

Secondary Advanced Image Settings

The controls allow adjustment of Secondary Gamma Settings, Secondary Detail Settings, Secondary Noise reduction Settings and Secondary Color Settings. These menus and controls function in the same fashion as their counterparts in the **Main > Image Settings > > Advanced Image Settings** menus. See *Advanced Image Settings, on page 3-26*.

IMPORTANT: Use the *Secondary Color Settings* menu to set up color manually only if you override *ArrayLOC*. Otherwise use *ArrayLOC* to manage projector color. See *Managing Colors with ArrayLOC, on page 3-55*.

Fade Time

Control the amount of time (in seconds) it takes to fade between images on a source switch. It also fades in the PIP and OSD if possible.

Frame Locking

Enable or disable Frame Lock. When set to Frame Lock, output image frames are locked to the input if possible. When Locked, the output is always locked to the primary input, never the PIP image. Free Run sets the output to close to 60Hz for all sources.

Auto Input Searching

When enabled, the system will continually search for the next valid signal when no signal is present or when loss of sync occurs on the current user selected input. In the case of multiple signals to choose from, the order is based on slot, followed by inputs on that slot.

HDMI Output Loop Source


This control is used to configure the HDMI output options. Selecting Direct Loop will directly pass-through the HDMI Input signals: on the same Twin HDMI Input Card, the Input1 signal is looped to Output1 and the Input2 signal is looped to Output2. Selecting **Main/Secondary Loop** will loop the Main & PIP video to the outputs, regardless from which card these signals originate. The Main video signal is looped to Output1, and the PIP video signal is looped to Output2. Selecting **Disable** will shut OFF the HDMI outputs completely.

Standby Active Loop-Through


Select the check box to allow an incoming signal to be passed to the Output ports of the HDMI Input module when the unit is in STANDBY mode.

4 Menu Tree


4.1 MENU TREE

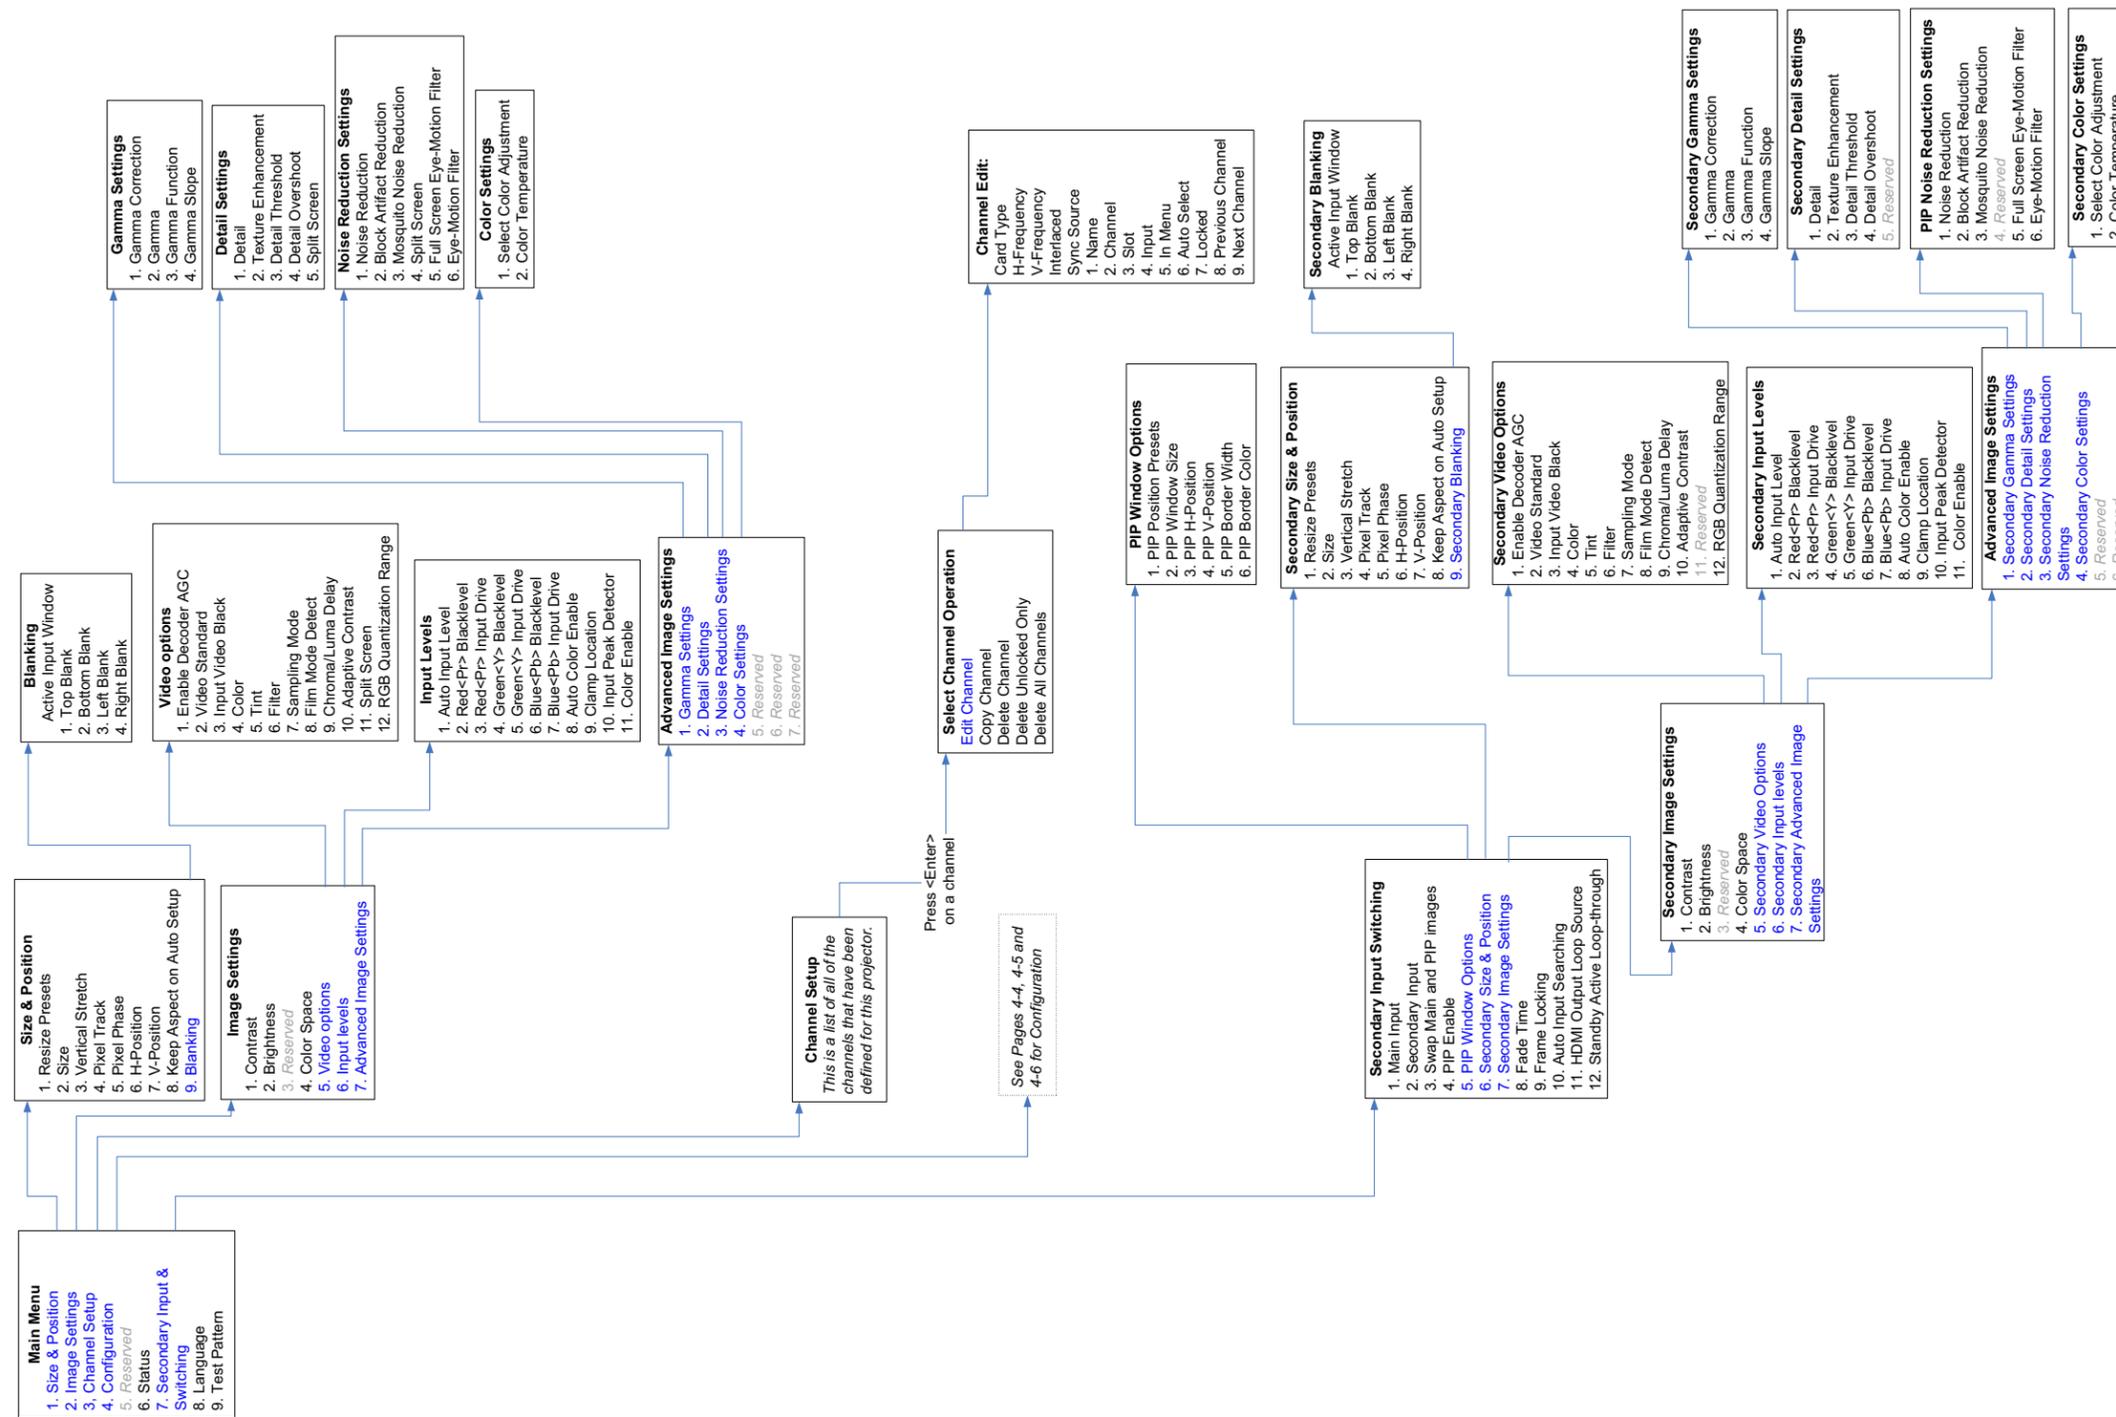


4.1.1 MENU TREE CONTINUED - CONFIGURATION

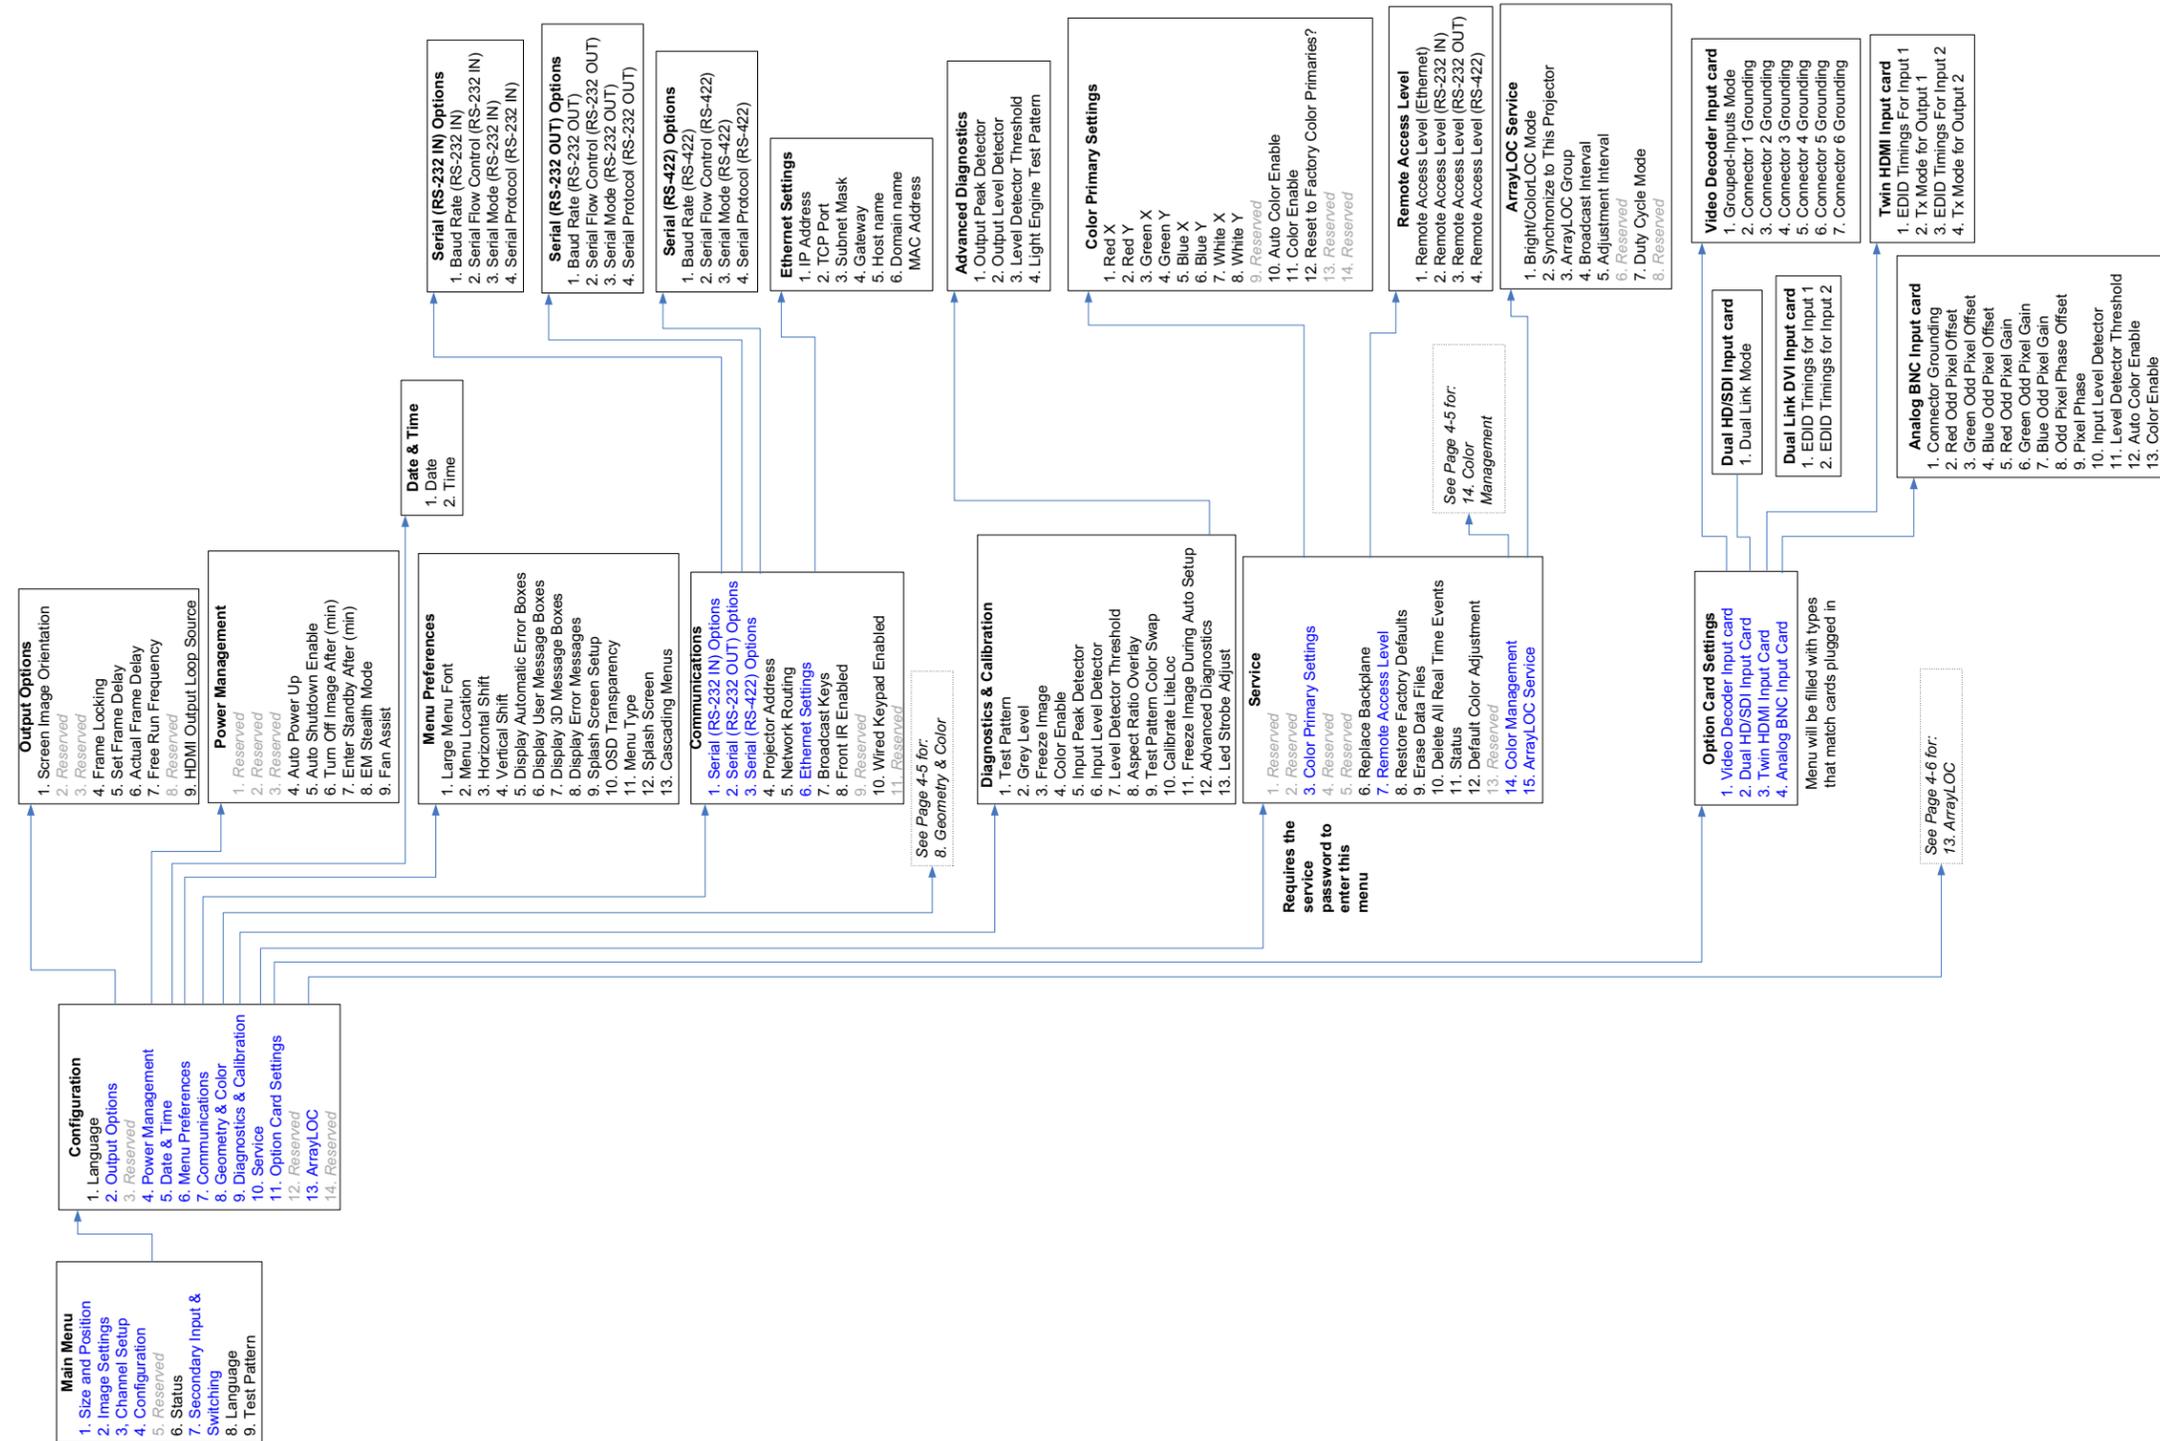

4.1.2 MENU TREE CONTINUED - GEOMETRY AND COLOR

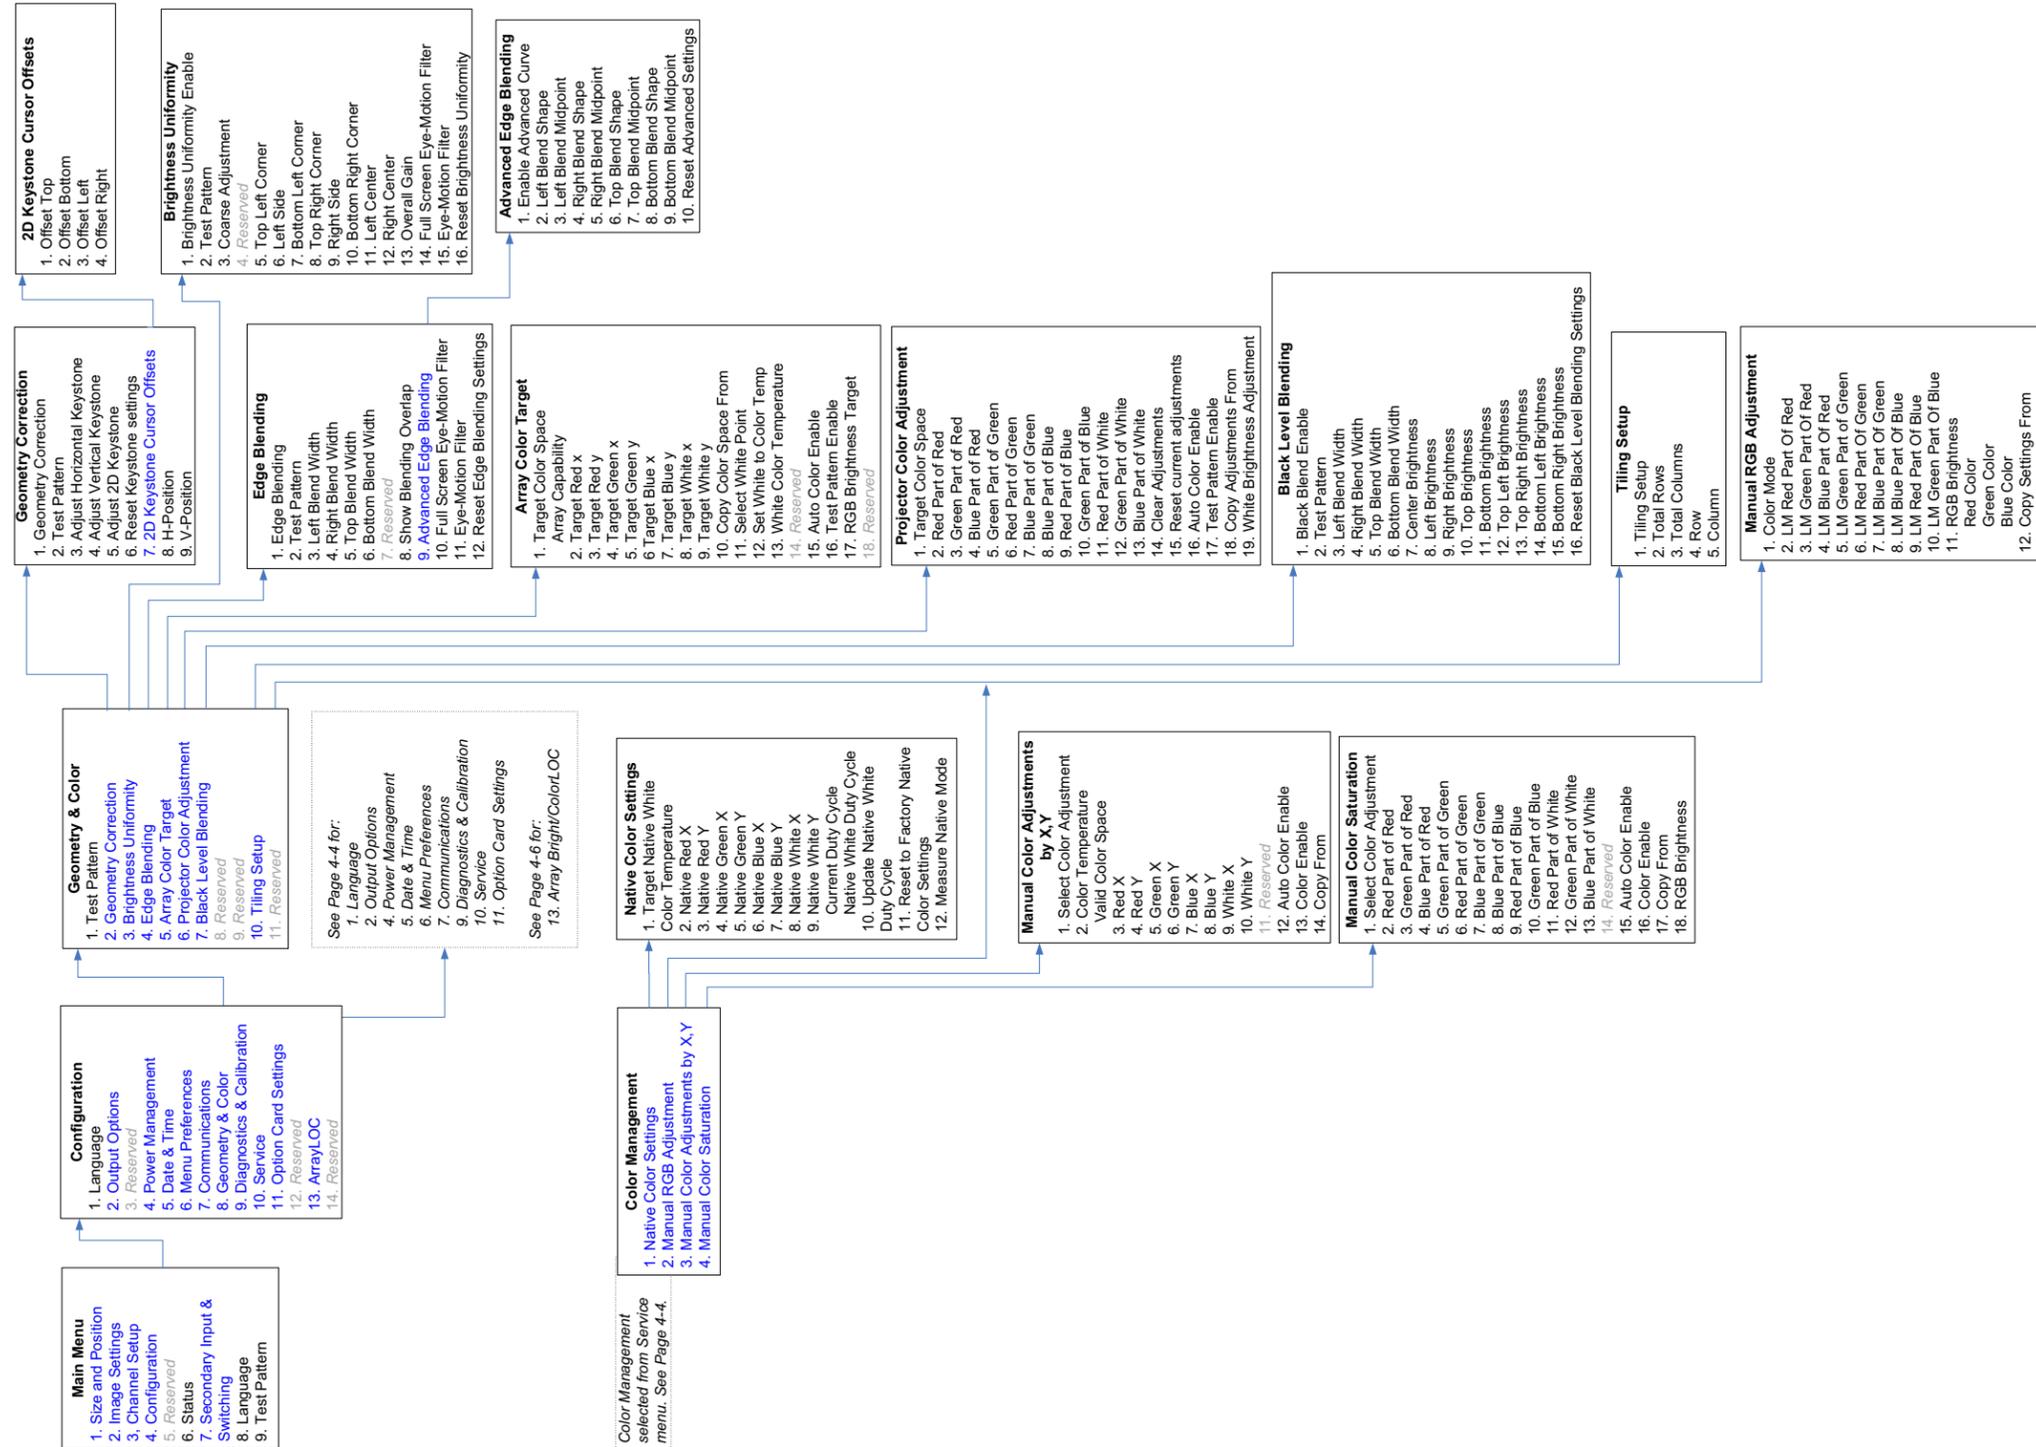

4.1.3 MENU TREE CONTINUED - ARRAYLOC

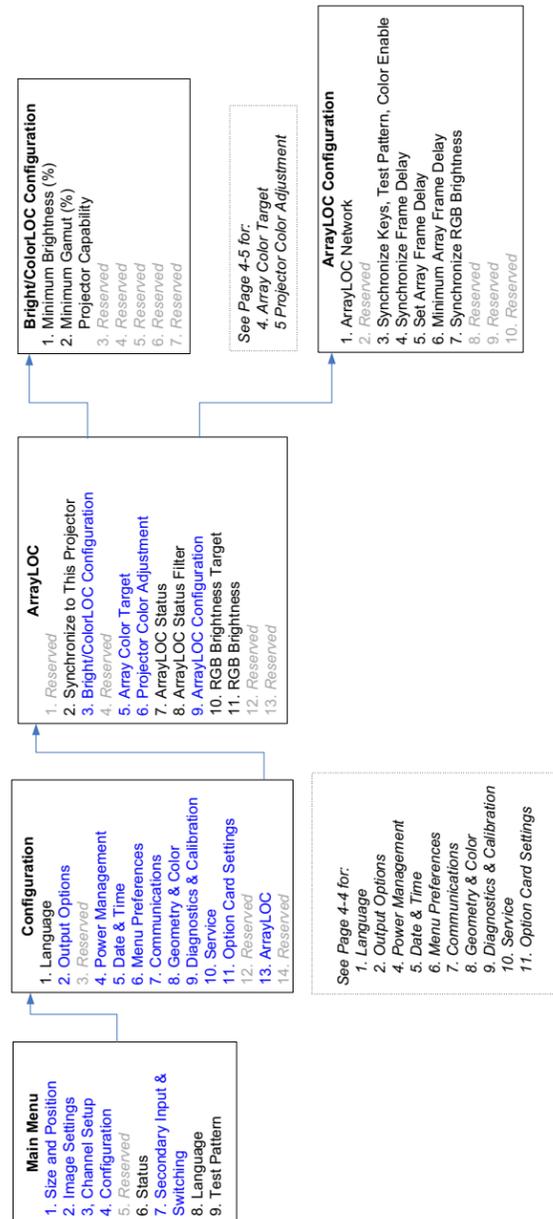

5 Maintenance

5.1 Maintaining Proper Cooling

Air vents are located around the projector to keep it at a consistent operating temperature. Make sure that the empty space around these vents (“stay out zone”) is within the limits specified in *Section 7 Specifications*. This will prevent the blockage of air flow and prevent overheating. The projector is equipped with active thermal monitoring. The speed of the cooling fans adjust to the projector temperature.

- Do not put the projector on a radiator or heat register.
- Do not put the projector in an enclosure without correct ventilation.
- Do not put objects into the ventilation openings of the projector. They can touch dangerous voltages or short-circuit components resulting in a fire or shock hazard.
- Do not spill liquids into the projector. If a spill occurs, immediately disconnect the projector and have it serviced by a Christie accredited service technician.

5.2 Maintenance and Cleaning

The projector is an international regulatory agency-approved product designed for safe and reliable operation. It is important to acknowledge the following precautions while operating the projector to assure complete safety at all times.


5.2.1 Warnings and Safety Guidelines

⚠ CAUTION Always power down and disconnect/disengage all power sources to the projector before servicing or cleaning.

⚠ DANGER Do not look directly into the projector lens. The high brightness of this projector could cause permanent eye damage. For protection, keep all projector shielding intact during operation.

5.2.2 Labels and Markings

Observe and follow all warnings and instructions marked on the projector.

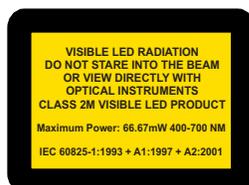

The projector is a class 2M source of visible LED radiation. Directly viewing the LED output with certain optical instruments (for example, eye loupes, magnifiers and microscopes) within a distance of 100 mm (3.94”) may pose an eye hazard.

5.2.3 Instructions

Read all operating instructions prior to using the projector.

5.2.4 Projector Location

Operate the projector in an environment that meets the operating range, specified in *Section 7 Specifications*.

- Do not operate the projector close to water, such as near a swimming pool.
- Do not operate in extremely humid environments.
- Do not place the projector on an unstable cart, stand or table. A projector and cart combination must be used with care. Sudden stops, excessive force and uneven surfaces may cause the projector and cart combination to overturn.

5.2.5 Servicing

⚠ DANGER All servicing must be performed by CHRISTIE accredited service technicians. Use replacement parts that are manufacturer-approved only. Use of any other part other than the ones specified by the manufacturer can result in fire, electric shock or risk of personal injury and irreparable equipment damage.

⚠ DANGER Do not service the projector while it is still connected. There are exposed voltages that could cause severe physical injuries and possibly death. Always disconnect the projector and wait two minutes to allow the power supply capacitors to electrically discharge before removing the projector covers.

If any of the following conditions exist, immediately disconnect the projector from the power outlet and consult a CHRISTIE accredited service technician.

- The power cord is damaged.
- The internal cooling fans do not turn ON when the projector is first powered up.
- Liquid is spilled into the projector.
- The projector is exposed to excessive moisture.
- The projector is not operating normally or performance has significantly deteriorated in a short period of time.
- The projector has been dropped or the shipping case (if applicable) is badly damaged.

5.2.6 Preventative Maintenance

⚠ CAUTION The projector is a class 2M source of visible LED radiation. Directly viewing the LED output with certain optical instruments (for example, eye loupes, magnifiers and microscopes) within a distance of 100 mm may pose an eye hazard.

Table 5.1 Preventative Maintenance

Part Description	Frequency	Action
Projection Lens	As required	<p>Clean: A small amount of dust on the lens has very little effect on picture quality. Clean only if absolutely necessary.</p> <p>Dust: Brush most of the dust from the lens with a camel-hair brush or blow dust away with a dust-free blower.</p> <ol style="list-style-type: none"> 1. Fold a microfibre cloth smooth and gently wipe remaining dust particles from the lens. Wipe evenly with the smooth portion of the cloth that has no folds or creases. DO NOT apply pressure with your fingers - use the tension in the folded cloth itself to collect dust. 2. If significant dust is still bound to the surface, dampen a clean microfibre cloth with coated optics cleaning solution (damp, not dripping). Wipe gently until clean.
Projection Lens	As required	<p>Fingerprints, smudges or oil:</p> <ol style="list-style-type: none"> 1. Brush away most of the dust with a camel-hair brush and/or blow away using a dust-free blower. 2. Roll a lens tissue around a swab and soak it in coated optics cleaning solution. Tissue should be damp, but not dripping. 3. Gently wipe the surface using a figure-8 motion. Repeat this motion until the blemish is removed. <p>Do not use a cleaning solvent that contains ammonia. Avoid lens contact with Xylene and Ether.</p>
External Projector Covers	As required	<p>Clean: Clean dust from external covers using a clean, lint-free cotton cloth as required.</p> <p>NOTE: Before cleaning the modules, it is recommended that you install the lens cap. This will keep dust particles from settling on the glass surface of the lens.</p>
ASSY Dual Fan Pack EM (P/N: 003-002138-xx) ASSY Dual Fan Pack PHM (P/N: 003-002676-xx)	Every 5 years or 45,000 hours, which- ever comes first	Remove and replace. Refer to the <i>Entero RPMWU/RPMSP/RPMHD-LED01 Service Manual (P/N 020-100368-04)</i> for complete replacement instructions.

5.3 Light Module Replacement

⚠ DANGER Do not service the projector while it is still connected. There are exposed voltages that could cause severe physical injuries and possibly death. Always disconnect the projector and wait two minutes to allow the power supply capacitors to electrically discharge before removing the projector covers.

⚠ CAUTION Power should always be disconnected from the illumination module before servicing, to avoid the possibility of inadvertent exposure to visible LED radiation. Directly viewing the illumination module optical output through certain optical instruments (for example, eye loupes, magnifiers and microscopes) within a distance of 100 mm (3.94") may pose an eye hazard.

The Light Module is a non-serviceable part of the projector and must be replaced. Contact customer support to arrange a replacement.

5.4 Lens Replacement

⚠ WARNING The lens is factory aligned. Do not loosen the yellow lens lock knob. Refer to the Entero Service Manual (P/N: 020-100368-xx) if lens replacement is required.

⚠ CAUTION The projector is a class 2M source of visible LED radiation. Directly viewing the LED output with certain optical instruments (for example, eye loupes, magnifiers and microscopes) within a distance of 100 (3.94") mm may pose an eye hazard.

5.4.1 Remove Lens

1. Place the front lens cap onto the lens.
2. Remove and retain the (2) security screws from the lens mount, see **Figure 5-1**.
3. Loosen the lens lock knob.
4. Carefully remove the lens.
5. Place the rear lens cap back onto the lens.

5.4.2 Install Lens

1. Remove the rear lens cap from the lens. Keep the front lens cap on the lens.
2. Align the lens interface plate with the lens mount. Fully insert the assembly straight into the lens mount opening without turning. Press using your hand to engage the magnetic lock. **NOTICE:** *Ensure the lens IS NOT inserted at an angle as this can cause damage.*
3. Tighten the yellow lens lock knob **before** fastening the security screws.
4. Fasten the security screws (*Figure 5-1*). **NOTICE:** *Security screws MUST be installed.*
5. Remove the front lens cap.

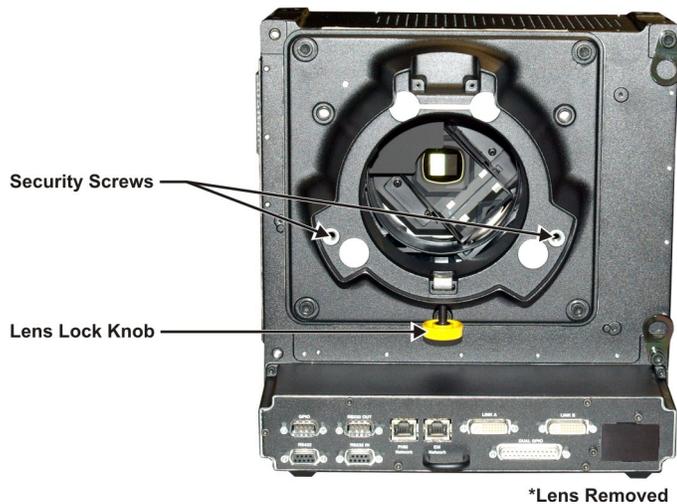


Figure 5-1 Lens Mount

6 Troubleshooting

If the projector is not operating properly, record the symptoms and use this section as a guide. If a solution to the problem cannot be found, contact your dealer for assistance. **NOTE:** *A Christie accredited service technician is required when opening an enclosure to diagnose any “probable cause”.*

6.1 Troubleshooting Guidelines

Read, understand and observe all warnings and precautions when diagnosing and servicing the projector.

- Ensure that the projector is plugged in.
- Ensure that cables are connected and not damaged.
- Power OFF the projector, wait 90 seconds to allow for cooling, and Power ON the projector. Check for a normal power up sequence.
- Check the projector status for error conditions and correct any issues if possible. See [6.2 System Warnings / Errors, on page 6-1](#).
- Check source reliability. Switch sources if possible.
- Use RS-232 serial communications to communicate with the projector during diagnosis.

6.2 System Warnings / Errors

When the projector finds a system malfunction, it displays a *System Warning* or a *System Error* message. Status and error information is available through:

- LEDs on the input panel of the projector. See 6.2.1 LED Status Display on the Projector.
- Status page in the menu system: access **Main menu > Status**.
- Status page on the web UI: access **Main tab > Status** page and click on any category with a yellow or red indicator. For more information see Appendix B: Web User Interface.
- On screen error messages: access **Main > Configuration > Menu Preferences > Display Error Messages (All)**. **NOTE:** *Display Error Messages must be set to “Screen” or “All” for System messages to appear on-screen.*

The status pages in the OSD menu system and the web UI update automatically when the error condition is corrected. The error code displayed on the status panel on the projector must be cleared manually with  from presentation level (no OSD on screen).

If an error code recurs, try resetting the projector by turning the projector OFF and ON.

A persistent error code may indicate that you need a Christie accredited service technician.

System Warnings

Shows that a system malfunction exists. A system warning message replaces the input signal message and disappears when the input signal status changes. The projector will remain operational, but the message show a possibly serious problem that must be reported to the manufacturer. Reset the projector by powering it off and on again, cooling when necessary.

System Errors

Shows that a serious malfunction exists and must be reported to the manufacturer as soon as possible. The projector will no longer operate. Reset the projector by powering it off and on again, cooling when necessary.

6.2.1 LED Status Display on the Projector

Projector status is indicated by a single three-color LED adjacent to a 2-digit status display. Refer to Table 6.1 for a description of LED variations that indicate operation status. A solid red LED indicates a system error and the corresponding error code indicates what the error is. Refer to **Table 6.2** for a list of error codes. Press

  to acknowledge and clear the error code.

Table 6.1 LED Operational Status Codes

LED Status	2-Character Display	Description
 Solid yellow	Rotating	Warming up
	PR (Programming TI)	
	FS (Failsafe mode)	EM in fail safe mode, refer to the Visual Environments Projector Software Upgrade instruction sheet (020-100443-xx)
	— —, static	STANDBY mode
	— —, moving up and down	Brief cool down period
 Solid green	<ul style="list-style-type: none"> BO (Booting) when power first applied B1 (Boot phase 1) starting main script B2 (Boot phase 2) starting projector code B3 (Boot phase 3) about to initialize connections 	<ul style="list-style-type: none"> When powering ON (booting) the projector, the LED will go through phases. Powered ON Normal operations EM ON
	<ul style="list-style-type: none"> SH (Shutter Mode) active EM 	
 Flashing green		Keypad command sent - Command received
 Solid Red	System error – see 6.2.2 Error Codes	
 Flashing red		<ul style="list-style-type: none"> Key press error Wrong protocol sent
blank	— —	Waiting to establish a connection with PHM
blank	Rotating	Initializing hardware and connecting to PHM

6.2.2 Error Codes

If the status display window shows one of the codes in the Error Codes table you may need a Christie accredited service technician to repair the component identified by the error code.

Error codes are displayed in a three phase format:

- First two digits represent the component or error category
- Second two digits represent the specific problem
- Display off

This cycle repeats. The LED will be red while the error code is displayed.

Acknowledge and clear the error by pressing EXIT twice when at the presentation level (no OSD on the screen). If the error recurs then try resetting the projector by powering OFF and ON again. Contact the dealer if the problem persists or if you see a code not listed in **Table 6.2**.

Table 6.2 Error Codes

Error Code	Item	Description
Light Engine		
LE	00	Light engine Boot Failure
	01	Light engine link error
	02	Light engine initialization error
	03	Red LED Feedback Failure
	04	Green LED Feedback Failure
	05	Blue LED Feedback Failure
Link		
LI	01	Error on EM network
	02	Error on PHM network
	03	Error on ArrayLOC link
Projector Head Module (PHM) Fan		
FP	01	PHM FD Fan 1 stalled
	02	PHM FD Fan 2 stalled
	03	PHM LMC Fan 1 stalled
	04	PHM LMC Fan 2 stalled
Electronic Module (EM) Fan		
FE	01	EM Fan 1 stalled
	02	EM Fan 2 stalled

Table 6.2 Error Codes (Continued)

Projector Head Module (PHM) Sensors		
SP	01	PHM FD sensor 1 overtemp (not connected)
	02	PHM FD Air inlet overtemp or sensor not functioning
	03	PHM QDPC board overtemp or sensor not functioning
	04	PHM FD DMD overtemp or sensor not functioning
	05	PHM QDPC board overtemp or sensor not functioning
	06	LM Air inlet overtemp or sensor not functioning
	07	LM Air exhaust overtemp or sensor not functioning
	08	LM Power supply overtemp or sensor not functioning
	09	LM LED Driver overtemp or sensor not functioning
	10	LM ambient overtemp or sensor not functioning
	11	LM Red thermistor overtemp or sensor not functioning
	12	LM Green thermistor overtemp or sensor not functioning
	13	LM Blue thermistor overtemp or sensor not functioning
Electronics Module (EM) Sensors		
SE	01	EM Inlet
	02	Panel Driver Temperature
	03	Image Processor Temperature
	04	Option Card 1 Temperature
	05	Option Card 2 Temperature
	06	Option Card 3 Temperature
	07	Option Card 4 Temperature
Miscellaneous		
PR	01	EM/PHM Firmware mismatch; upgrade required
	02	Image processor card is missing or not seated correctly

6.3 Power

6.3.1 Projector Does Not Power ON

1. Ensure that the projector is plugged in.
2. Ensure that cables are connected and not damaged.

6.4 Light Module

6.4.1 Light Module Suddenly Goes OFF

1. Check the shutter setting - if status display shows **SH** then the shutter may be active. Toggle through shutter modes. In **gray** shutter mode it should be possible to display menus.
2. Verify that the **RGB Brightness** is set sufficiently higher than 0 to ensure a visible image.
3. The DMDs may be overheated. Check for an alarm condition.

6.5 Displays

6.5.1 The Projector Is ON, but There Is No Display

1. Make sure the lens cover is removed from the lens.
2. Make sure the correct display button is selected in the channel setups.
3. Make sure AC power is connected.
4. Is an active source connected properly? Check the cable connections and make sure that the alternative source is selected.
5. Make sure that the DVI cable from the PHM to the EM is connected.
6. Are the test patterns accessible? If so, check source connections again.

6.5.2 The Display Is Jittery or Unstable

1. If the non-cinema display is jittery or blinking erratically, make sure that the source is properly connected and of adequate quality for detection. With a poor quality or improperly connected source, the projector repeatedly tries to display an image, however briefly.
2. The horizontal or vertical scan frequency of the input signal may be out of range for the projector.
3. The sync signal may be inadequate. Correct the source problem.

6.5.3 The Display Is Faint

1. The source may be double-terminated. Make sure that the source is terminated only once.
2. The source (if non-video) may need sync tip clamping.
3. Check **RGB Brightness** setting and **Brightness Uniformity** control.
4. If the Twist software was used, test by disabling the blend.

6.5.4 The Upper Portion of the Display Is Waving, Tearing or Jittering

1. This can occur with video or VCR sources. Check your source.
2. Check that the RGB Brightness setting is not unexpectedly low.

6.5.5 Portions of the Display Are Cut OFF or Warped to the Opposite Edge

Resizing may need adjustment. Adjust until the entire image is visible and centered.

6.5.6 Display Appears Compressed (Vertically Stretched)

1. The frequency of the pixel sampling clock is incorrect for the current source.
2. Sizing and positioning options may be adjusted poorly for the incoming source signal.
3. Check the geometry correction for warp or keystone correction.

6.5.7 Data is Cropped from Edges

1. To display the missing material, reduce image size to fill the display area available in the projector, then stretch vertically to fill the screen from top to bottom. Add the anamorphic lens to regain image width.
2. Check blend settings and masking.

6.5.8 Display Quality Appears to Drift from Good to Bad, Bad to Good

1. The source input signal may be of low quality.
2. The H or V frequency of the input may have changed at the source end.

6.5.9 Display Has Suddenly Frozen

If the screen blacks out inexplicably, it is possible that excessive voltage noise on the AC or ground input has interrupted the projector's ability to lock on to a signal. Power the projector down and up again.

6.5.10 Colors in the Display Are Inaccurate

The color, tint, color space and/or color temperature settings may require adjustment at your input source, or on the web user interface **Channel > Page2** menu. Make Sure the correct PCF, TCGD and/or Color Space file for the source is used.

6.5.11 Display Is Not Rectangular

1. Check leveling of the projector. Make sure the lens surface and screen are parallel to one another.
2. Is the vertical offset correct? Make the necessary adjustments to the vertical offset on the lens mount.
3. Check geometry corrections settings, for example keystone adjustment.

6.5.12 Display Is "Noisy"

1. Display adjustment at the input source may be required. Adjust pixel tracking, phase and filter. Noise is very common on YPbPr signals from a DVD player.
2. Make Sure the video input is terminated (75 ohms). If it is the last connection in a loop-through chain, the video input must be terminated at the last source input only.
3. The input signal and/or signal cables carrying the input signal may be of poor quality.
4. If the distance between the input source device and the projector is greater than 25 feet, signal amplification/conditioning may be required.
5. If the source is a VCR or off-air broadcast, detail may be set too high.

6.6 ArrayLOC

6.6.1 Cannot Find Color Adjustment Controls

Use the color adjustment options under the ArrayLOC menu: access **Main menu > Configuration > ArrayLOC**. Color Adjustments by X,Y and Color Saturation options are not available for general use. They are part of the passcode protected Service menu.

6.6.2 Color/Image Settings Are Greyed Out

To enable ArrayLOC: access **Main menu > Configuration > ArrayLOC > Bright/ColorLOC Mode** and set to *Fixed, Cool, or Bright*.

If ArrayLOC is enabled:

- ArrayLOC handles brightness and color settings, and overrides other color settings, for example **Advanced Image Settings > Color Settings**.
- **Main menu > Configuration > ArrayLOC > Array Color Target** color settings are available for the master projector and are greyed out for all other projectors. To make your projector the master: access **Main menu > Configuration > ArrayLOC > Synchronize to This Projector**. Any projector in the array or BC group can be the master. The last projector to be set as the master is the master for the array (All) or BC group (Group). This setting is not saved between session.

6.6.3 Sensor Isn't Calibrated (Yellow Alert)

Sensor calibration must be performed by Christie accredited service technicians. Contact Customer Support.

6.6.4 Invalid Target Gamut (Yellow Alert)

A color setting is not valid for the current color space, for example a white point is outside of the gamut.


1. Access the Array Color Target menu: **Main > Configuration > ArrayLOC > Array Color Target**.
2. Check XY settings for the colors.

6.6.5 Unable to Achieve Target Brightness/Gamut (Yellow Alert)



A projector in an array that cannot achieve minimum brightness or target color space will disable BCLOC and cease contributing data to performance calculations.

- Try lowering the target brightness or target color gamut settings until all the projectors can achieve the same performance.
- If the discrepancy is too big, the light module may need to be replaced. Call Customer Support.

6.6.6 ArrayLOC Troubleshooting Tree - Matching Projectors for Color and Brightness

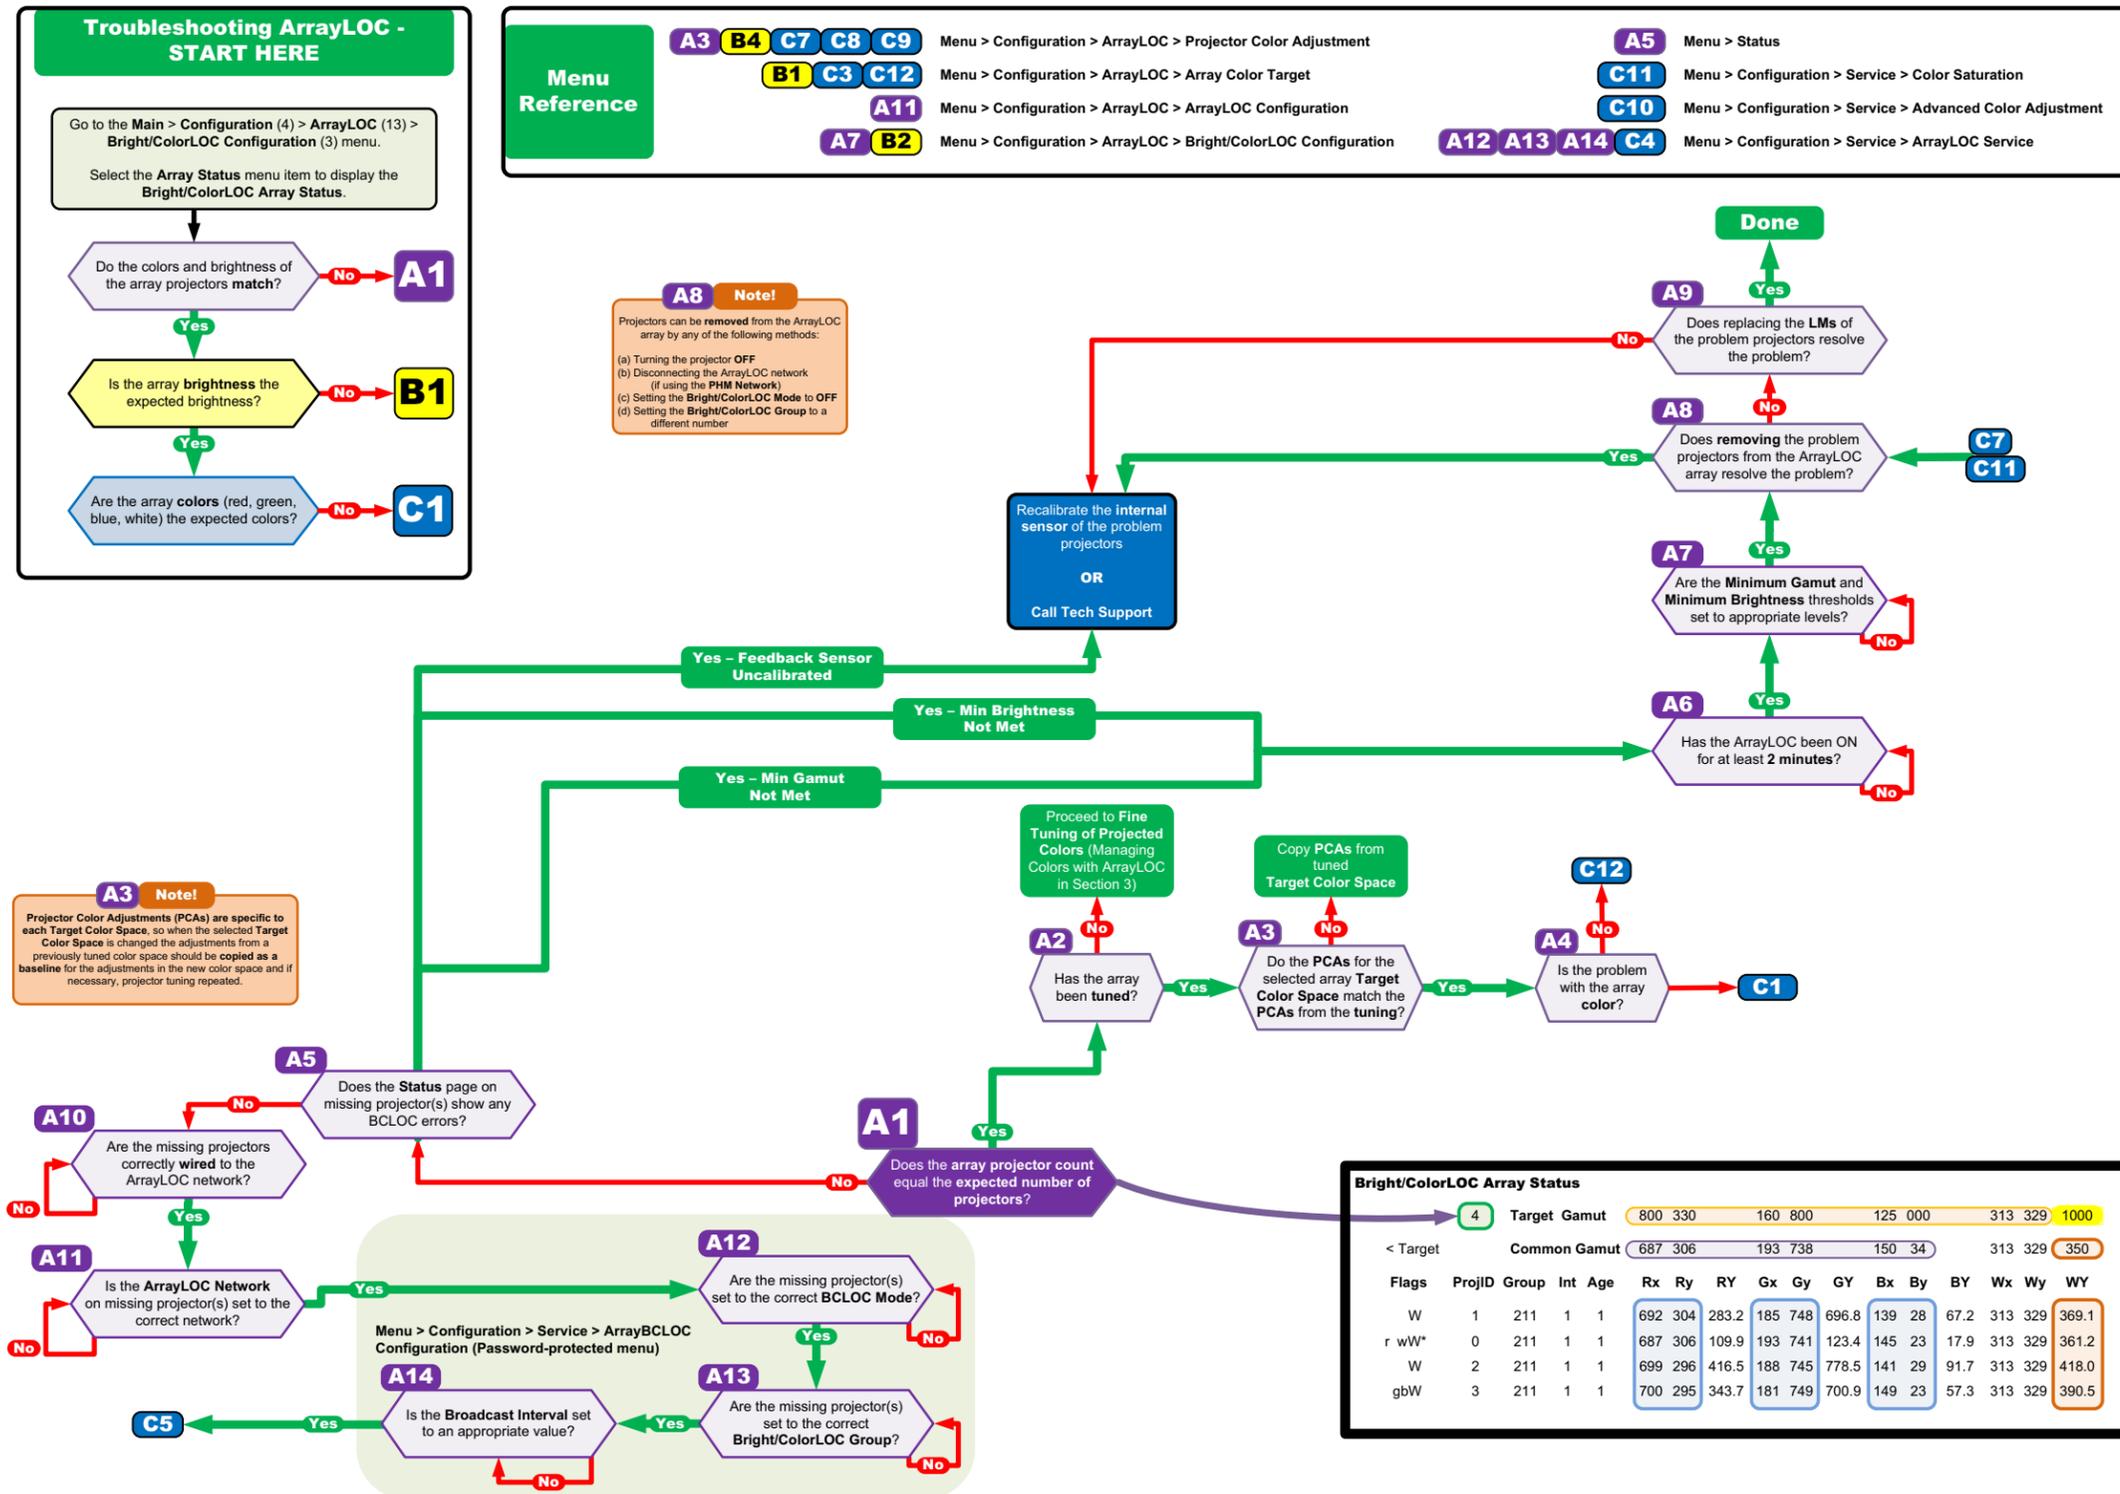

6.6.7 ArrayLOC Troubleshooting Tree Continued - Array Brightness Setup

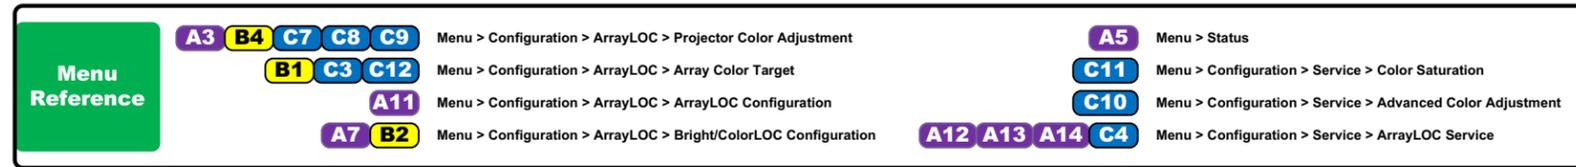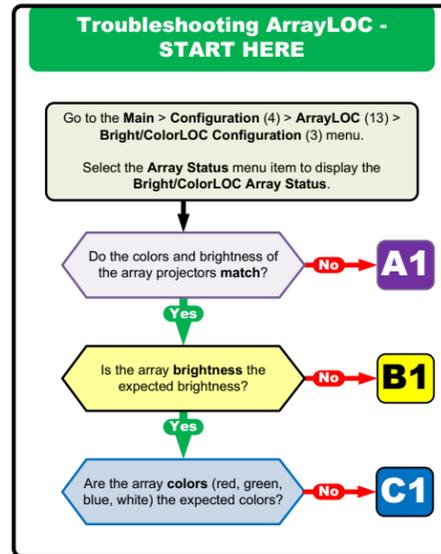


Bright/ColorLOC Array Status




4 Target Gamut 800 330 160 800 125 000 313 329 1000

< Target Common Gamut 687 306 193 738 150 34 313 329 350

Flags	ProjID	Group	Int	Age	Rx	Ry	RY	Gx	Gy	GY	Bx	By	BY	Wx	Wy	WY
W	1	211	1	1	692	304	283.2	185	748	696.8	139	28	67.2	313	329	369.1
r wW*	0	211	1	1	687	306	109.9	193	741	123.4	145	23	17.9	313	329	361.2
W	2	211	1	1	699	296	416.5	188	745	778.5	141	29	91.7	313	329	418.0
gbW	3	211	1	1	700	295	343.7	181	749	700.9	149	23	57.3	313	329	390.5

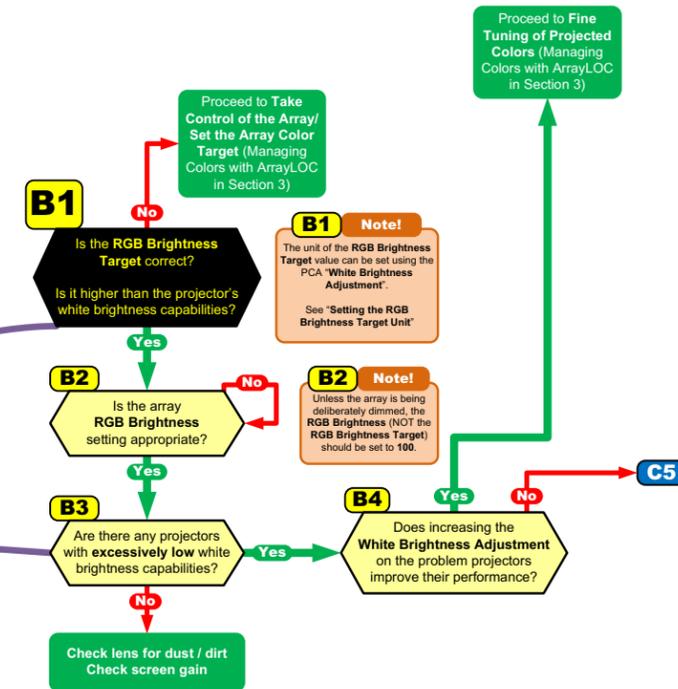

6.6.8 ArrayLOC Troubleshooting Tree Continued - Array Color Setup

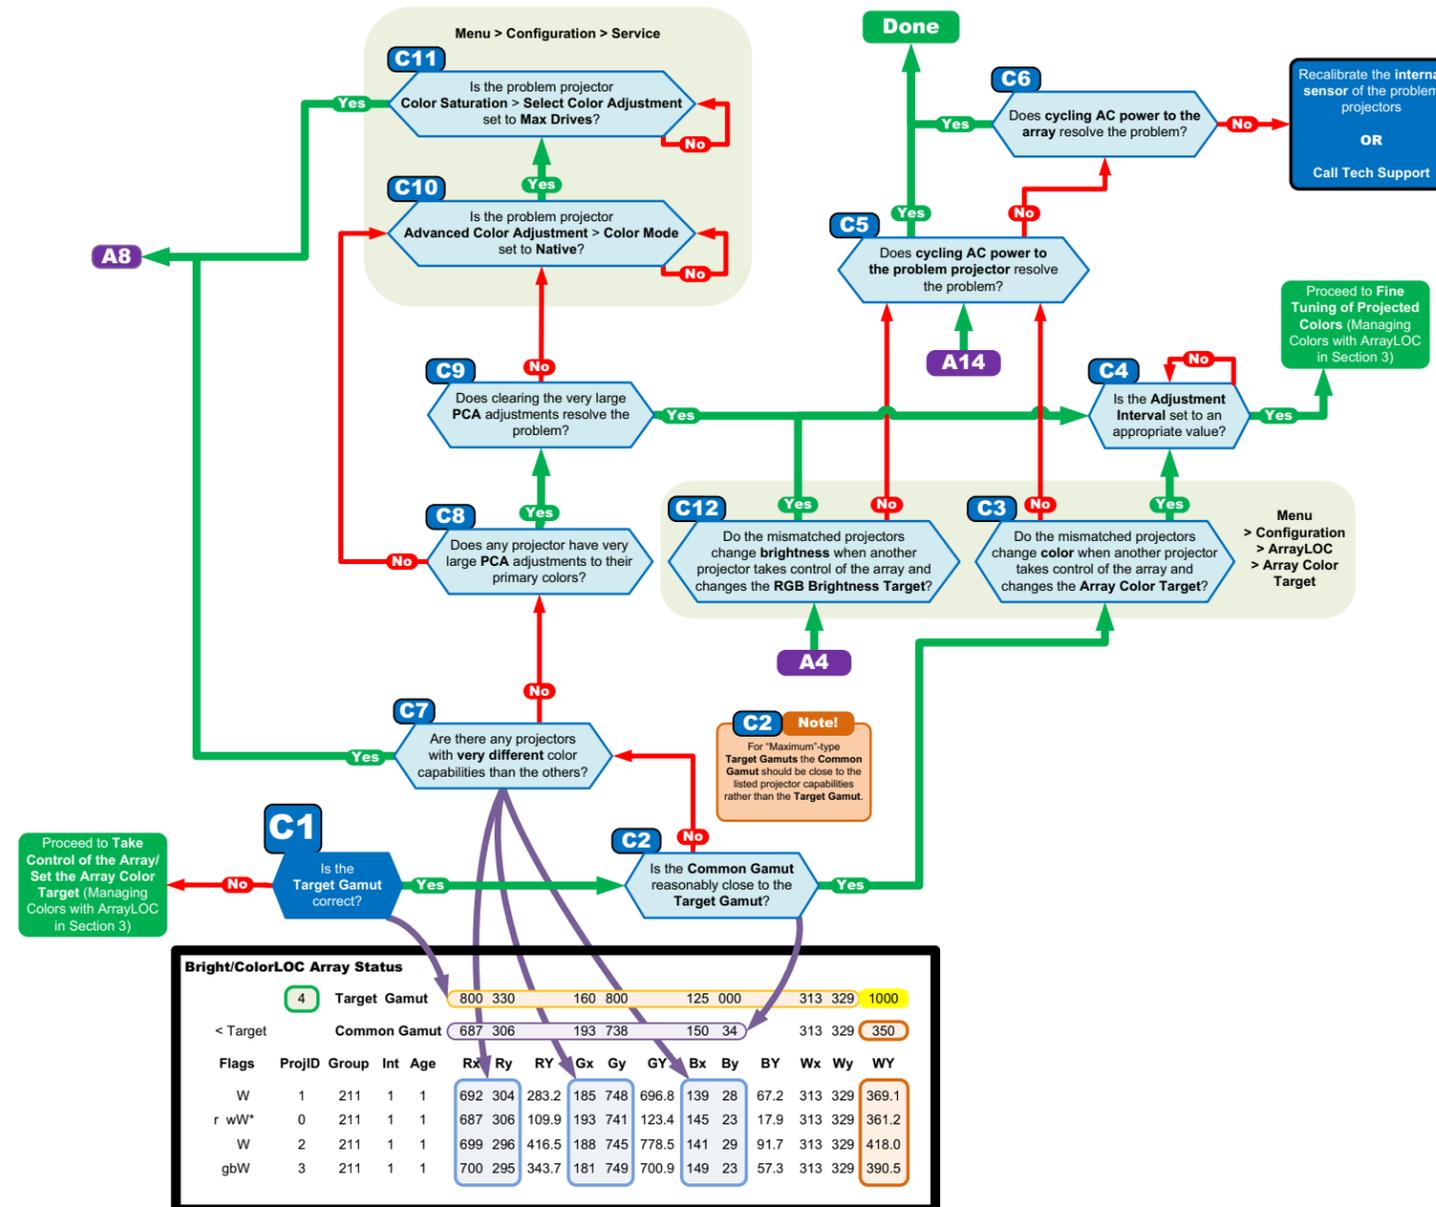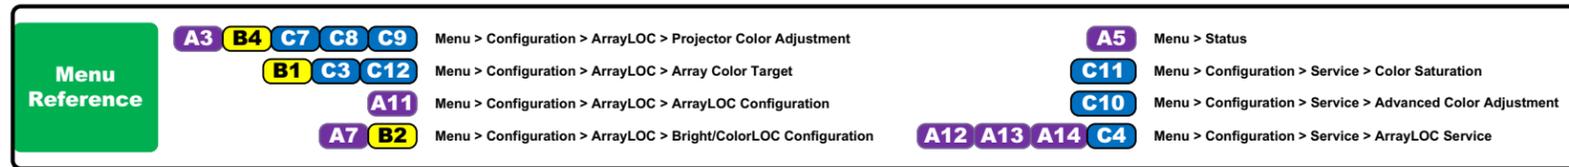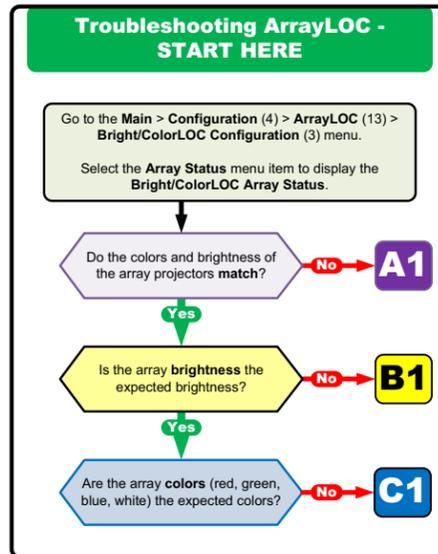

7 Specifications


		RPMSP-LED01	RPMWU-LED01	RPMHD-LED01
Imaging technologies	imaging	• 1-chip DLP	• 1-chip DLP	• 1-chip DLP
	native resolution	• SXGA+ (1400 x 1050)	• WUXGA (1920 x 1200 - HD compatible)	• HD (1920 x 1080)
	illumination	• Light Emitting Diodes (red, green, blue)	• Light Emitting Diodes (red, green, blue)	• Light Emitting Diodes (red, green, blue)
Standard cube options		• 50" (24" depth) • 67" (31" depth) • Other sizes available built to order	• 72" (33" depth) • Other sizes available built to order	• 70" (35" depth) • Other sizes available built to order
Inputs	standard	• Digital DVI-I with analog VGA		
	scan rates	• Horizontal: 15-120Hz • Vertical: 23.97-150Hz • Pixel clock: 165 MHz		
	expansion	• 3 input module slots available		
	optional modules	• VGA, Digital (DVI), Analog (RGB), dual SDI/HDSI, twin HDMI		
	compatibility	• Compatible with Christie TVC series display wall controllers or other input sources from VGA to QXGA, as well as standard HD formats.		
Illumination	technology	• LED (RGB)		
	LED life rating ¹	• >60,000 hrs		
	brightness ²	• 600 ANSI lumens		
Color	temperature range	• 3200 – 9300 K		
	gamut	• Beyond 100% EBU		
	adjustment and control	• Screen to screen: ArrayLOC automatic brightness and color management • Individual: Comprehensive Color Adjustment (CCA™)		
Optical	lens type	• Low distortion zero offset short throw fixed lens with field curvature correction (0.69:1 throw for SXGA+, 0.64:1 throw for WUXGA)		
	screen size range	• 40 – 100" diagonal		
	brightness uniformity	• Brightness uniformity control provides up to 100% uniformity capability for critical applications.		
	contrast ratio ³	• >100,000:1 (full field using shutter mode) • 1400:1 (full field); up to 450:1 ANSI		
Control/networking	ports/controls	• 2 RS232 ports and 1 RS422 port • Field upgradable software via RS232 network or Ethernet • IR remote control • GPIO port • On-board ChristieNET™ connectivity (RJ45)		
Upgradability	software	• Christie KoRE 10-bit librarian communication software for field upgrade of firmware		
Optional accessories	inputs	• See input option modules above		
	other	• Wired remote control		
Physical characteristics	dimensions	See Service Manual (P/N: 020-100368-xx)		
	weight (approx.)	• 60 lbs (27 kg)		
	shipping weight (approx.)	• 68 lbs (31 kg)		
Environment	operating temperature ⁴	• 40 - 95° F (5-35° C)		
	non-operating temperature	• -4 – 122° F (-20 – 50° C)		
	humidity	• 20-80% non-condensing		
	altitude	0 – 300 m (0 – 10,000 ft)		

		RPMSP-LED01	RPMWU-LED01	RPMHD-LED01
Power rating (projection engine)	voltage	• 100 – 240 VAC 50/60Hz		
	current	• 4.5A		
	consumption	• Rating: 370W		
	dissipation (maximum)	• 1263 BTU/hr		
Reliability and serviceability	MTBF	• > 50,000 hrs MTBF for all major modules		
	MTTR	• < 15 minutes with modular design • > 5 minutes for lamp		
Regulatory approvals		<ul style="list-style-type: none"> • Directives: (EC) 2002/95/EC (RoHS) • Regulation (EC) No. 1907/2006 (REACH) • CAN/CSA C22.2 No. 60950-1 • UL 60950-1 • IEC 60950-1 • FCC, Part 15, Subpart B, Class A • EN55024/CISPR24 • Certifications marks (check with Christie for latest update) <ul style="list-style-type: none"> • cULus (Canada & US) • CE (EU) • CCC (China) • GoST-R (Russia) • KC (Korea) • PSE (Japan) • C-Tick (Australia & New Zealand) 		
Calibration		• All projection units are factory calibrated for best color performance		
Limited warranty		<ul style="list-style-type: none"> • 2 years parts and labor • Contact an authorized Christie representative for full details of our limited warranty 		
Additional features and benefits		<ul style="list-style-type: none"> • Integrated 6-axis adjustment system for precise geometry alignment • Full-function remote keypad with easy-to-use menu system • Multiple set-up memories to manage multiple input sources • Extensive scaling capability • Window/screen processing — external inputs can be displayed across an array of screens up to 3 x 3 without an external processor (a single input must be distributed to all cubes or it can be daisy-chained through the cube's optional Twin HDMI module) • 3x redundant cooling fans • Innovative water-filled, sealed heat pipe cooling system (maintenance free, no motorized pumps, hazardous chemicals or concern of leakage) 		

¹LED lifetime is based on expected useful life (50% of original brightness). ²Brightness specifications are at reduced color space settings. ³The contrast ratio specified is the “natural” contrast ratio measured by both full field and ANSI methods. Such values are critical for proper contrast performance assessment – especially for video walls. ⁴For best long-term performance and reliability, Christie recommends that all electronic equipment, such as projection systems, are regularly operated at temperatures below 77° F (25° C).

Appendix A: Interconnect Drawing

A.1 INTERCONNECT DRAWING

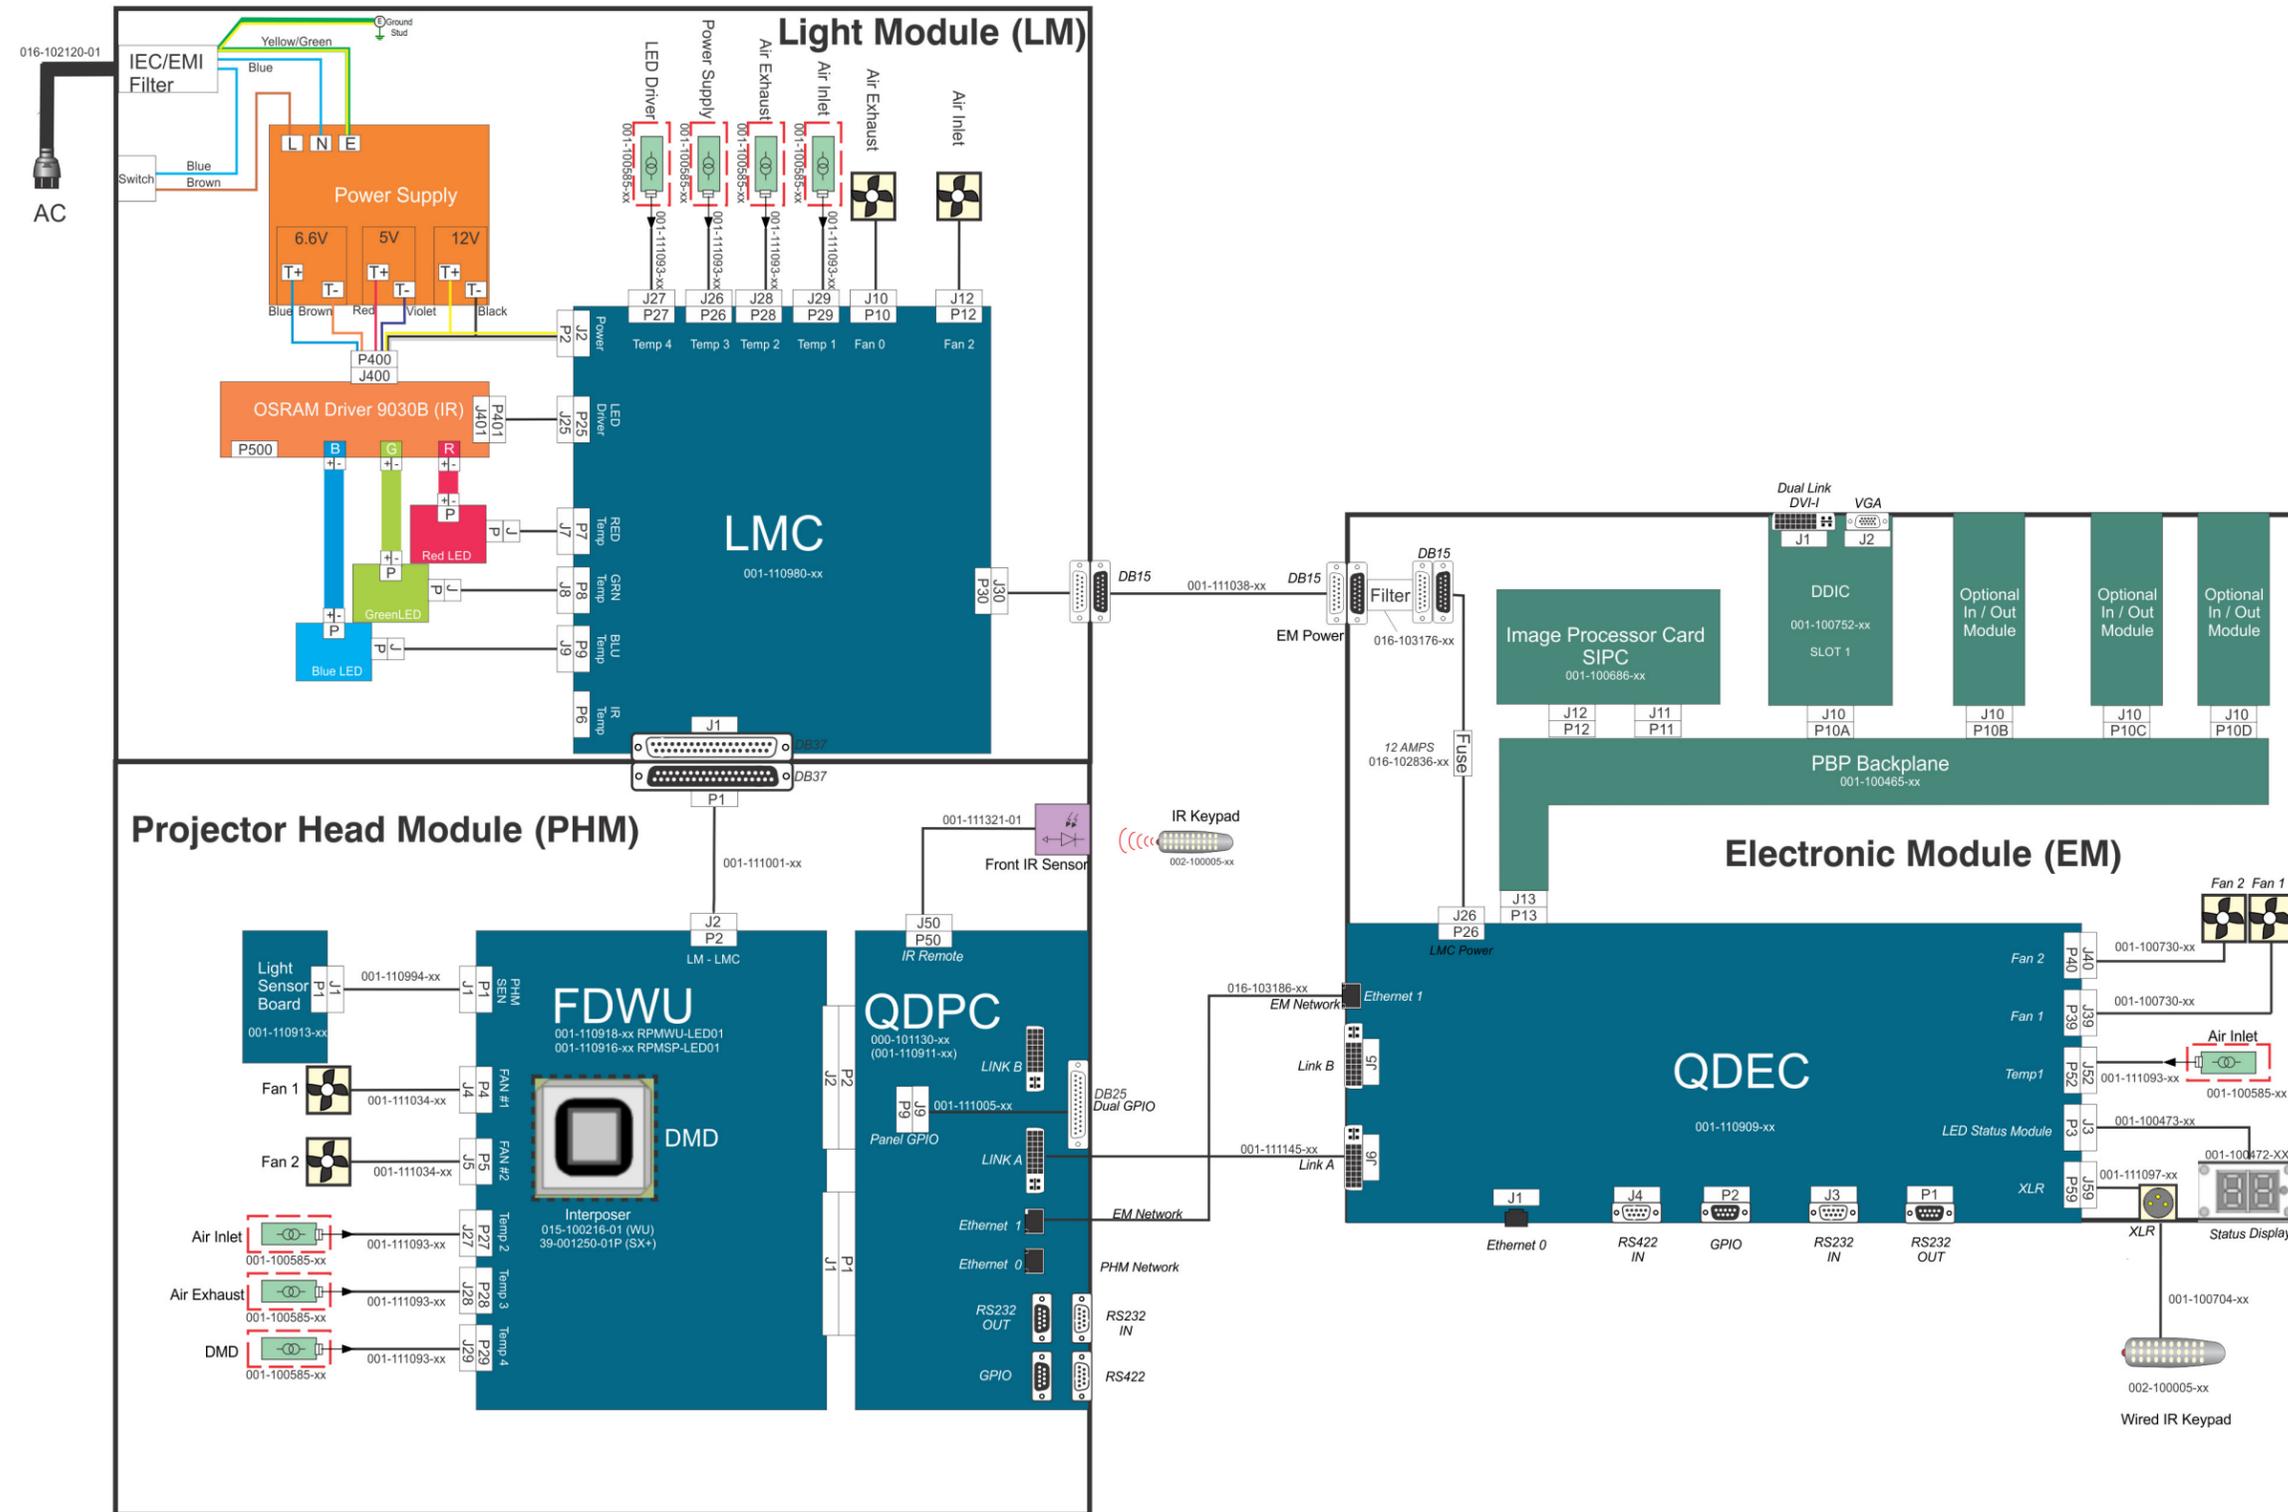

Appendix B: Web User Interface

B.1 Logging On

IMPORTANT! Before logging on to the system, ensure that you select the appropriate language required. Your language selection only affects the web user interface. The language used by the projector's on-screen display (OSD) is not affected. See **Figure B-1**.

Open your web browser and type the IP address (in the address bar) assigned to your projector.

1. Select the appropriate language from the **Language** drop-down list, located in the upper left-hand corner. See **Figure B-1**.
2. Type your user name and password in the **User Name** and **Password** (see **Figure B-2**) fields respectively. Both entries are case-sensitive.



Figure B-1 Language drop-down list



Figure B-2 Login

3. Click the **Login** button. The **Main** window (see **Figure B-3**) appears.

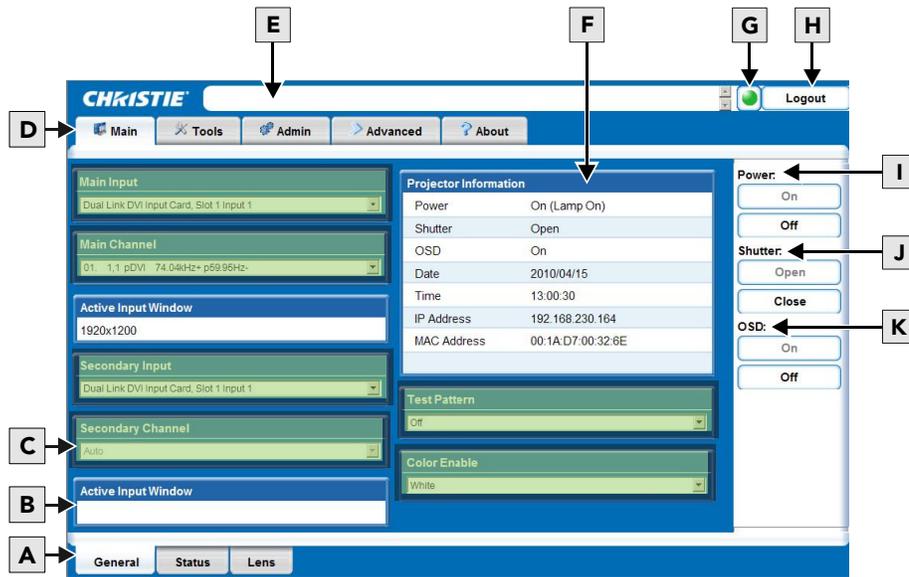


Figure B-3 Main window

The following table describes each area found in the Main window. See **Figure B-3**.

A	Secondary Tabs (specific to a primary tab) located along the bottom of the Main window.	B	PIP Active Input Window and Main Active Input Window sections are read-only.	C	These sections provide drop-down list selections (refer to Section 3, Operation for more details).
D	Primary Tabs located along the top of the Main window.	E	Current Status Bar provides information messages according to the current status of the projector.	F	Projector Information section is read-only.
G	Status Indicator displays the overall status of the projector, based on the 12 categories of information available. NOTE: Click the Status Indicator LED to display the Status window and obtain more information about any current errors and warnings. See Section B.3.2 Main Tab - Status.	H	Logout button (located at the top right corner of the web browser) is used to logout you off of the web user interface and the projector.	I	Power section contains an On and Off button. Only one is enabled depending on the current powered state of the projector.
J	Shutter section contains an Open and Close button. Only one is enabled depending on the current state of the projector's shutter.	K	OSD (On Screen Display) section contains an On and Off button. Only one is enabled depending on the current state of the projector's on-screen display.		

B.2 Navigating the Web User Interface

It is not recommended that you use the web browser’s navigation functionality (i.e. the **Back** and **Forward** functions) as this will cause you to lose your web connection. It is recommended that you navigate using the application interface and related functionality detailed in this section.

IMPORTANT: *Internet Explorer V6.0 and V9.0 has known performance issues and is not recommended to be used as the primary web browser for the web user interface. It is recommended that you use Internet Explorer V7.0 or Firefox.*

B.2.1 Help Text

You can move your mouse pointer over most buttons or fields to display related help information. See **Figure B-4**. To disable this feature, click **Admin > System > Tooltip: Hide**. **NOTE:** *Help text is not available for a disabled buttons.*

When working with the projector menu system on the Tools tab, highlight the menu option and press “h”.

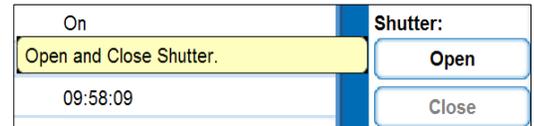


Figure B-4 Help Mouse Over Example

B.3 Basic Operation

This section discusses the primary tabs located along the top of the application window. Each primary tab also has related secondary tabs which are located along the bottom of each tab as follows:

Main <ul style="list-style-type: none"> • General • Status • Lens 	Tools <ul style="list-style-type: none"> • Virtual OSD 	Admin <ul style="list-style-type: none"> • System • Users 	Advanced <ul style="list-style-type: none"> • RTE 	About <ul style="list-style-type: none"> • Version • License
---	--	--	---	---

Main <ul style="list-style-type: none"> • General • Status 	Tools <ul style="list-style-type: none"> • Virtual OSD 	Admin <ul style="list-style-type: none"> • System • Users 	About <ul style="list-style-type: none"> • Version • License
---	--	--	---

B.3.1 Main Tab - General

Under the **Main** tab, select the **General** secondary tab to view general information about Inputs, Channels, Projector Information, Test Pattern, and Color Enable (see **Figure B-3**). For detailed information refer to [Section 3 Operation](#).

B.3.2 Main Tab - Status

Under the Main tab, select the Status secondary tab to view the 12 Category LED status lights which indicate the projector’s highest critical state. The LED color of the category indicates that it is in one of the following states:

- Green = Good
- Yellow = Warning
- Red = Error

For more information about each LED, click an LED button for details.

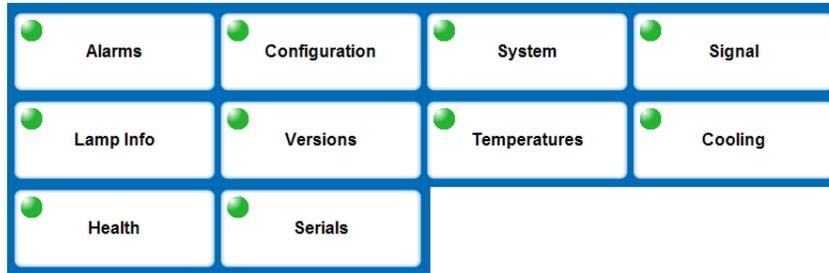


Figure B-5 Category Status Example

B.3.3 Tools Tab - Virtual OSD

The Tools tab defaults to the Virtual OSD secondary tab.

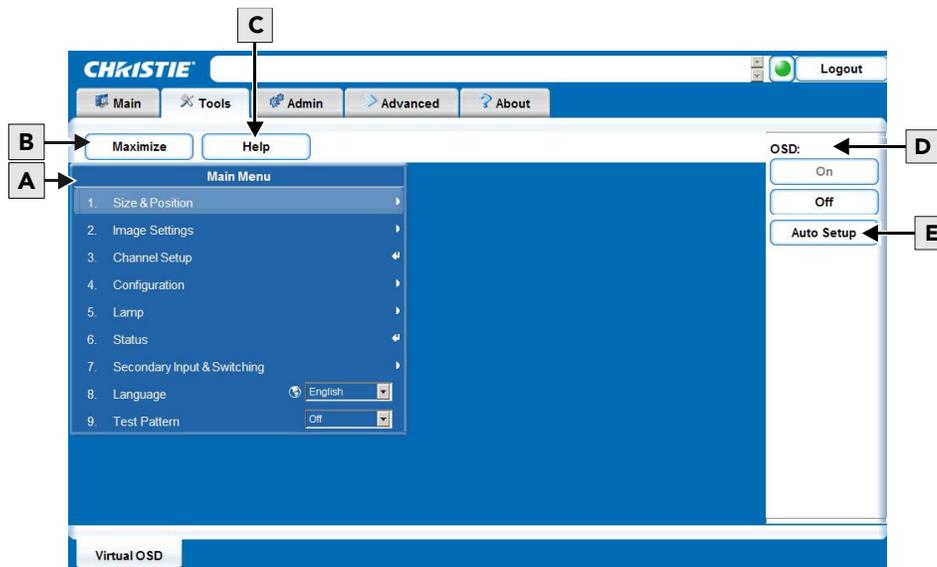


Figure B-6 Tools window

The following table describes each area found in the **Tools** window. See *Figure B-6*.

A	<p>Virtual OSD tab presents the Main Menu (refer to Appendix A, Menu Tree for more details).</p>	B	<p>The Maximize/Minimize button toggles depending on the current state of the projector. When maximized, the Virtual OSD displays over the entire page so that subsequent menus can be viewed without scrolling. No access to tabs when maximized.</p>	C	<p>Help button presents a pop-up window which provides information to help you navigate within the current menu.</p>
D	<p>OSD section contains an On and Off button. Only one is enabled depending on the current state of the OSD. Control of the OSD is always available through the remote.</p>	E	<p>Auto Setup button uses the manufacture’s default settings (refer to Section 3, Operation for more details).</p>		

Virtual OSD Menu

Selecting an option from a menu displays its associated window, showing related information and input fields. To return to the previous menu, click the menu title bar (see **Figure B-7**).

To return to a previous menu, click on the current menu’s title bar or press **ESC**. **NOTE:** *Click the **Maximize** button to view the full screen size.*

Various types of menu elements (*Figure B-8* and *Figure B-9*) allow you to define projector settings.

These include:

- Field entries
- Drop-down lists
- Check boxes
- Sliders

IMPORTANT: When a menu option is modified through the Virtual OSD menu, the projector setting takes effect immediately.

Entering a number in a numeric field

1. Position your mouse pointer within the numeric field that you wish to edit.
2. Click to highlight the field entry. **NOTE:** *If you click the menu option, the field cannot be edited.*
3. Edit the field entry.



Figure B-7 View Previous Menu

4. Press **Enter** to save your changes.

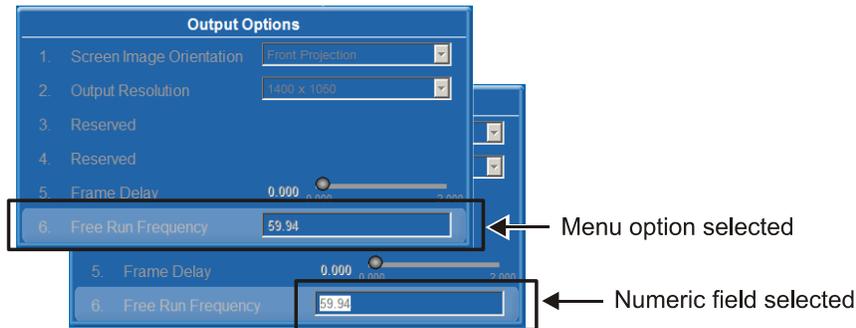


Figure B-8 Select Numeric Field

Selecting an option from a drop-down list

1. Click the option drop-down arrow to open the drop-down list.
2. Locate and select the desired option.

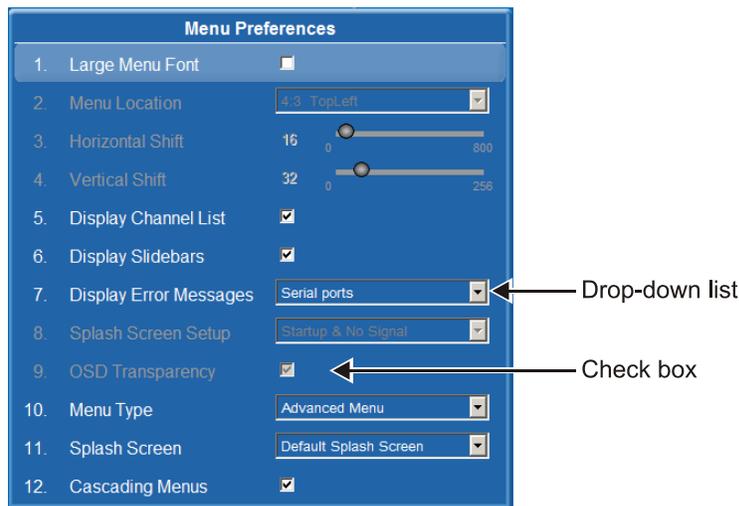



Figure B-9 Types of Menu Elements

Selecting or clearing a check box

To select or clear a check box, click the check box with your mouse pointer. This enables or clears the option respectively.

Clock setting

1. Click within the field (i.e. **Lamp Regeneration Start Time** option) to allow access.
2. Change the **Hour**, **Minute**, and **Seconds** fields (double-digit field entry) as required.

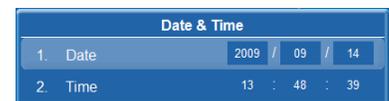

B.3.4 Admin Tab - System

Under the **Admin** tab, select the **System** secondary tab to upgrade, upload, backup and restore specific files, change the Logo position, background color, gamma properties, and interrogate the projector (creating a zip file of information).

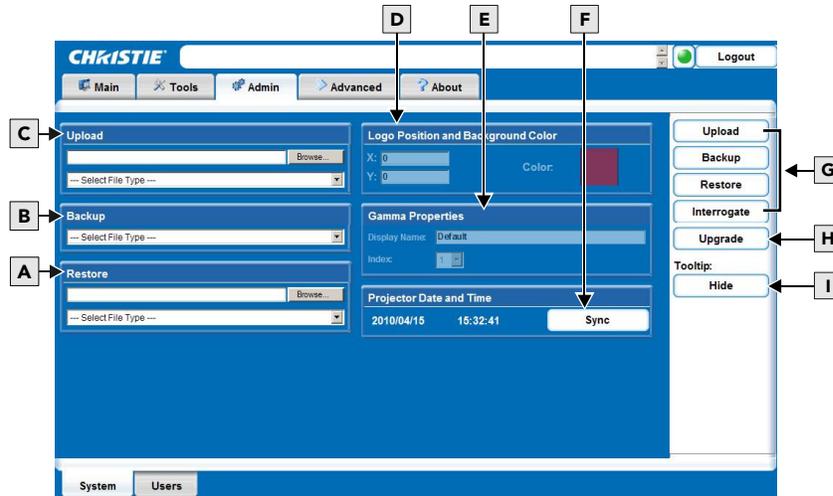


Figure B-10 Admin window

<p>A Restore section allows you to select the file and file type that you wish to restore.</p>	<p>B Backup section allows you to select the file and file type that you wish to backup.</p>	<p>C Upload section allows you to select the file and file type that you wish to upload.</p>
<p>D Logo Position and Background Color section is enabled when you select a Logo file type from the Upload section.</p>	<p>E Gamma Properties section is enabled when you select a Gamma file type from the Upload section.</p>	<p>F Sync button is used to set the projector date and time to match that on your computer.</p>
<p>G Upload, Backup, Restore, and Interrogator buttons perform their respective functions, after the setting for the function have first been selected from the drop-down lists, and other fields on the left.</p>	<p>H Upgrade button, refer to the <i>Visual Environments Projector Software Upgrade</i> instruction sheet, P/N 020-100443-xx. This button is disabled if the projector is not in Standby mode.</p>	<p>I Hide button allows you to disable the display of the help text.</p>

Uploading a Logo File or Gamma File

Important: *The projector must be powered on to enable the Upload drop-down list.*

1. Select the file type (**Logo** or **Gamma**) from the **Upload** drop-down list.

NOTE: *If you select a Logo file type, it MUST be a 24-bit, bitmap file. This enables the Logo Position and Background Color section. Proceed to Step 3a.*

2. If you select a Gamma file type, it MUST be a .csv file with 1024 values (all colors same) or 1024 x 3 for individual colors. This enables the Gamma Properties section. Proceed to Step 4a.
 - a. Enter the Logo position for the **X** and **Y** fields.
 - b. Click the **Color** square to open the **Choose Background Color** window, choose the desired background color from the color palette, and click **OK**. The color square changes to the selected color.
 - c. Click the **Upload** button to display the **Logo Upload** window. Click **Yes** or **No** to confirm or cancel the upload.

An **Upload in Progress** window appears.

3. Click the Upload **Browse** button to open the **Choose file** window.
4. Locate and select the file you wish to upload from a Network drive location or from your hard drive.
5. Click the **Upload** button to display the **Logo Upload** window.
 - a. Enter a descriptive name in the **Display Name** field.
 - b. Click the **Upload** button to display the **Gamma Upload** window. Click **Yes** or **No** to confirm or cancel the upload respectively.

An **Upload in Progress** window appears.

Creating a Backup File

1. Select a file type (**All**, **Preferences**, **Configuration**, **Channels**, or **Users**) from the **Backup** drop-down list.
2. Click **Backup** to initiate the download. A **Backup in Progress** bar appears. Once finished, a **File Download** window appears.
3. Click **Save** to open a **Save As** window.
4. Locate and select a folder within your Network drive or hard-drive where you wish to save the file.
5. Click **Save**.

Restoring a File

1. Select a file type (**All**, **Preferences**, **Configuration**, **Channels**, **Users** or **Real Time Events**) from the **Restore** drop-down list. **NOTE:** *Do not select All unless transferring all files from one projector to another or cloning.*
2. Click the **Browse** button to locate and select the file you wish to restore from a Network drive location or from your hard drive.
3. Click **Restore** to initiate the restore. A **Restore in Progress** bar appears. Once finished, a confirmation message appears.

Performing a Diagnostic Test using Interrogator

1. Click **Interrogate** to initiate the diagnostic test and download the diagnostic test results to your computer. A **Interrogator in Progress** bar appears. Once the download is complete, a **File Download** window appears. **NOTE:** *Once the Interrogate function begins, you must allow it to run until completion.*
2. Click **Save** to save the diagnostic test results file to your Network drive or hard-drive.

B.3.5 Admin Tab - Users

Under the Admin tab, select the Users secondary tab. Options are provided to add to and delete users from accessing the projector, and change passwords. **NOTES: 1)** *Do not use capitalization for usernames or passwords. If capitalization is used for the username or password, it will automatically convert it to lower case.* **2)** *Usernames can be a minimum of 4 and maximum of 32 characters. Passwords can be a minimum of 4 and maximum of 128 characters.*

Creating a User Name and Password

1. Click **Add User** to open the **Add User** window. See **Figure B-11**.
2. Type your username and password in the **User name** and **Password** fields respectively.
3. Re-type your password in the **Re-type Password** field.
4. Click **Ok** to save.

Figure B-11 Add User window

Change Password

1. Select the user whose password you wish to change from the **Users** window.
1. Click **Change Password** to open the **Password Change** window. See **Figure B-12**.
2. Type the new password in the **Password** field.
3. Re-type the password in the **Re-type Password** field.
4. Click **Ok** to save or **Cancel** to ignore.

Figure B-12 Password Change window

Delete User

1. Select the user that you wish to remove from the **Users** window. See **Figure B-13**.
2. Click **Delete User** to open the **Delete User** window. A confirmation message appears.
3. Click **Yes** or **No** to proceed or ignore the action.

Figure B-13 Delete User window

B.3.6 Advanced Tabbed Page - RTE

The RTE (Real-Time Events) tab is where you can manage real-time events (i.e. add, delete, edit, copy and setup the GPIO) as described in the following section.

RTE Buttons

The real-time event buttons include the following:

- **Add**, create a new event
- **Delete**, remove one or multiple existing events
- **Delete All**, remove all events
- **Edit**, change or add information for an existing event
- **Copy**, clone an existing event
- **Stop**, discontinue the event running
- **GPIO Setup**, used to configure the GPIO pins as inputs/outputs and to set the current state of the output pins

To Add a Scheduled Event

Scheduled events include a command or sequence of commands, for example, (PWR1) or (PWR1) (SHU1).

1. Click **Add** to open the **RTE Wizard**.
2. Select the **Scheduled Event** tab. **NOTE:** *The scheduled tab is always selected by default on add.*

Figure B-14 Scheduled Event Window

3. Select the frequency option for the event by selecting either **Once**, **Daily**, **Weekly**, or **Monthly**.
NOTE: *End Date is enabled when Daily, Weekly or Monthly repeat options are selected.*
NOTE: *Depending on the frequency option you select, the Repeat Every option may be highlighted on the tab. Use this area to enter the frequency of each event.*
4. Click within the **Start Time** field to open a calendar pop-up window.
5. Navigate to and choose a desired date. The selected date will populate the **Start Time** field.
6. In the field below the **Start Time** field, enter a start time in the format “hr:min:sec”. The default is the current time.
7. Click **Sync** to set the computer and projector time to be the same; otherwise, the event will run based on the projector time.

8. Enter a description of the scheduled event in the **Description** field. **NOTE:** *Maximum of 100 characters.*
9. Enter a serial command or a sequence of serial commands, that you want the projector to perform in the **Command String** box.
 - If a **GPIO** command string is needed, click the **GPIO Output Helper** button for instructions on how to create the command structure. **NOTES:** 1) The **Output** field contains 7 blocks which refer to the 7 I/O pins on the GPIO connector. Pin 1 = +12V and Pin 5 = Ground. These are not included. 2) Clicking a block toggles between H, L, and X. See **Figure B-15** See [Appendix D: Serial Command Reference](#) for detailed information.

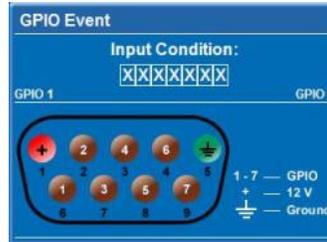


Figure B-15 GPIO Output Helper

- **NOTE:** *The contents of the Serial Representation box (Figure B-14) are read only.*
- Click the **Help** button for a description of special RTE commands available for adding loops and delays to the command sequence.
- Click the **Test** button to test the entered command string. **NOTE:** *If the test passed or failed, a green or red icon appears to the right side of the Test button as shown in Figure B-16.*



Figure B-16 Test Buttons

10. Click **Finish** to create the added event. **NOTES** 1) *The added event appears in the RTE Listing window. See Figure B-17.* 2) *To activate or deactivate one or more RTEs listed in the RTE Listing window, select or clear each check box in the Active column accordingly.*

RTE Listing			
Active	Description	Trigger	Status
<input type="checkbox"/>	RTE #1 Daily - (Scheduled Event)	2009/09/04 01:01:01	Idle
<input type="checkbox"/>	RTE #2 Weekly - (Scheduled Event)	2009/09/04 02:02:02	Idle
<input type="checkbox"/>	RTE #3 Monthly - (Scheduled Event)	2009/09/04 04:04:04	Idle
<input type="checkbox"/>	RTE #4 No Signal - (System Event)	No Signal	Idle
<input type="checkbox"/>	RTE #5 LXLHLXL - (GPIO Event)	LXLHLXL	Idle

Figure B-17 RTE Listing Window Example

To Add a System Event

1. Click **Add** to open the **RTE Wizard**.
2. Select the System Event tab.

Figure B-18 Select a type of event from the **System Event** drop-down list. See **Figure B-19**.

Figure B-19 Add System Event

NOTE: Depending on the selection made, additional selections are made available in the second drop-down list located underneath (i.e. *Input Change > Input 1, Slot 1*).

To Add a GPIO Event

1. Click **Add** to open the **RTE Wizard**.
2. Select the GPIO Event tab.
3. For the **GPIO Event** option define the **Input Condition** field as required. The **Input Condition** field contains 7 blocks which refer to the 7 I/O pins on the GPIO connector. Pin 1 = +12V and Pin 5 = Ground are not included or changed. 2) Clicking a block toggles between H, L, and X as shown in **Figure B-20**. See [Appendix D: Serial Command Reference](#) for detailed information.

Figure B-20 GPIO Event

To Add a Function Key Event

1. Click **Add** to open the **RTE Wizard**.
2. Select the **Function Key Event** tab.
3. Select a **Func** (function) key from the drop-down list as shown in **Figure B-21**. Refer to [Section 3 Operation](#) for detailed information.

Figure B-21 Function Key Event

To Add a DMX Channel Event

1. Click **Add** to open the **RTE Wizard**.
2. Select the DMX Channel Event tab.
3. Select a **DMX** channel (DMX-56 to DMX-61) from the drop-down list as shown in **Figure B-22**. Refer to [Section 3 Operation](#) for detailed information.

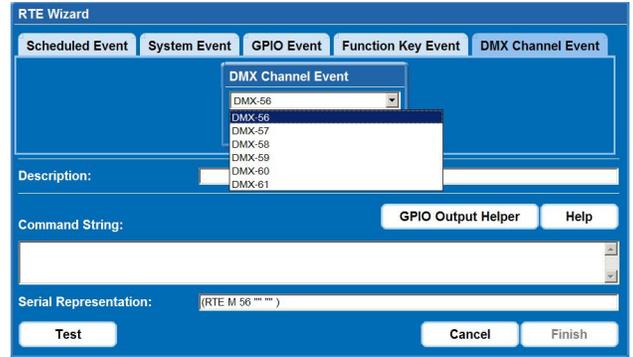


Figure B-22 DMX Channel Event

B.3.7 To Add a Serial Command

1. Enter a serial command in the **Serial Command** field. **NOTE:** See [Appendix C: Serial Command Overview and Appendix D: Serial Command Reference](#).
2. Click **Send** to add the serial command. See **Figure B-23**.
3. About Tabbed Page

Provides information about the projector’s software version, model, serial number, and license information. **NOTE:** *The information provided on the **Version** and **License** tabs are read-only.*

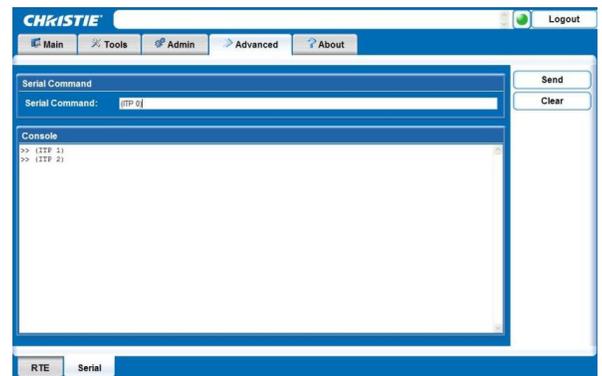


Figure B-23 Add Serial Command

Appendix C: Serial Command Overview

C.1 Introduction

This document describes the serial protocol, consisting of ASCII text messages, used to control an Entero projector remotely.

C.1.1 Connection and Use

Once you have connected your computer to either the RS-232 IN or RS-422 IN port (depending on which standard is supported by your computer) or to the ETHERNET port on a projector, you can remotely access projector controls and image setups, issue commands or queries, and receive replies. Use these bi-directional messages to:

- Control multiple projectors
- Obtain a projector's status report
- Diagnose performance problems

NOTES: **1)** Refer to [Section 7 Specifications](#) for all cable requirements and other connection details. **2)** Some commands are operational only when projector is powered up.

C.2 Understanding Message Format

Messages can be one of three types:

- **Set** - A command to set a projector parameter at a specific level, such as changing to a certain channel.
- **Request** - A request for information, such as what channel is currently in use.
- **Reply** - The projector returns the data in response to a request or as confirmation of a command.

All "Remote Control" information passes IN and OUT of the projector as a simple text message, consisting of a three letter command code, an optional 4-letter subcode, and any related data. When a parameter for a specific source is being accessed, the 4-letter subcode will be added on to the Command code. A number of optional features (message acknowledges, checksums, and network addressing) can be included.

Generally, most commands include 0 or 1 data fields or parameters. Where applicable, a message may expand to include additional parameters of related details.

The smallest step size for any parameter is always 1. For some controls (i.e. Size) the value displayed on the screen has a decimal point. (e.g. 0.200 to 4.000) In this case, the values used for the serial communications is an integer value (e.g. 200 to 4000), not the decimal value seen on the screen.

Regardless of message type or origin, all messages use the same basic format and code. Opening and closing round brackets (parentheses) surround each message, refer to **Table C.1**.

Table C.1 Message Formats

SOURCE	MESSAGE FORMAT	FUNCTION	EXAMPLES
From Controller	(Code Data)	SET (set contrast of main image to 500)	(CON500) or (CON 500)
	(Code+Subcode Data)	SET (set contrast of PIP image to 500)	(CON+PIIP500) or (CON +PIIP 500)
From Controller	(Code ?)	REQUEST (what is current contrast?)	(CON?) or (CON ?)
	(Code+Subcode ?)	REQUEST (what is contrast of PIP image?)	(CON+PIIP?) or (CON+PIIP ?)
From Projector	(Code Data)	REPLY (contrast is 500)	(CON!500)
	(Code+Subcode Data)	REPLY (PIP contrast is 500)	(CON+PIIP!500)

C.2.1 Basic Message Structure

The following component fields comprise a standard ASCII message. Optional fields, such as extra characters for special modes, restrictions or added functionality, are shown in *italics*, with the exception of Notes.

Start and End of Message

Every message begins with the “(“ (left bracket) character and ends with the “)” (right bracket) character.

NOTE: *If the start character (left bracket) is received before an end character of the previous message, the partial (previous) message is discarded.*

Prefix Characters (Optional)

For acknowledgement that the projector has responded, and/or to maximize message integrity, insert one or two special characters before the 3-character Function code:

Special Character	Description
\$	Simple Acknowledgment, which will cause a ‘\$’ character to be sent back from the projector when it has finished processing the message. See C.2.4 Maximizing Message Integrity .
#	Full Acknowledgment, which will cause an echo of the message as a reply to be sent back from the projector when it has finished processing the message. See C.2.4 Maximizing Message Integrity .
&	Checksum, which will allow a checksum to be put as the last parameter in the message for verification at the projector. See C.2.4 Maximizing Message Integrity .

Projector Numbers (Optional)

To control a selected projector or controller within a group, include its assigned number or address just before the 3-character ASCII Function code. See [C.2.7 Network Operation](#).

Function Code

The projector function you wish to work with, such as channel selection or gamma, is represented by a 3-character ASCII code (A-Z, upper or lowercase). This Function code appears immediately after the leading “(“ (left bracket) that starts the message. In messages sent to the projector that do not have a Subcode, a space between the Function code, and the first parameter (or special character) is optional.

+Subcode

The projector function you wish to work with may have one or more subcodes that will allow you to select a specific source, image, channel or subfunction. The Subcode is represented by a 4-character ASCII code (A-Z, upper or lowercase, and 0-9). This Subcode appears immediately after the Function code, with a “+” character

to separate the code, and subcode. If there is no Subcode, the “+” (plus sign) is also omitted. In messages sent to the projector that do have a subcode, a space between the subcode and the first parameter (or special character) is optional.

Request/Reply Symbols

If the controller is requesting information from the projector, a “?” (question mark) appears directly after the *Function* code. If the projector is replying, an “!” (exclamation mark) appears directly after the *Function* code. For **Set** type messages sent to the projector, neither of these characters appear. Data directly follows the code and subcode.

Other Special Functions (Optional)

To add functionality to the current message, include one or more of the following special characters between the Function code/Subcode, and the first parameter. If more than one, add them in any order. See [C.2.6 Flow Control](#).

C	Control Class Inquiry
D	Default value/Text
E	Enable Control Inquiry
G	Access Group Inquiry
H	Return the Help text for a control
L	Return a list of options for ‘list’ controls
M	Find min/max adjustments (i.e., range)
N	Return the name of the control
T	Return the type of control (i.e. Slidebar etc.)

Data

The value for a given projector state, such as “ON” or “OFF”, appears in ASCII-decimal format directly after the request/reply symbol. You can add an optional space after the symbol (i.e., before the data) in a set message, but data in replies follow the “!” (exclamation) symbol without a space. Other details to remember about data:

- All values returned by the projector (reply messages) have a fixed length, regardless of the actual value. For a specific parameter, the length will always be the same (e.g. contrast is always returned as 3 characters, projector number is always returned as 5 characters). The minimum parameter size is 3 characters. Values that are less than the pre-defined size will be padded with leading zeros as needed. Parameters which have negative signs (-) are zero padded after the negative sign, and will have one less digit to make space for the sign.
- If entering a negative number, there must be a space between the code/subcode, and the value. For example, (CRM3) and (CRM 3) can both be used when the number is positive. (CRM -2) is acceptable, but (CRM-2) is not.
- Data in set messages to the projector do not require padding with zeros.
- Within each message, multiple parameters of data must be separated by one “space” character.
- Text parameters such as channel names are enclosed in double quotes following the data, as in “Name”.

Text Parameters

Most data consists of numerical values, however some messages also require text. For example, a channel naming message typically includes a text-based name. Enclose this text in double quotation marks, as in “*Tilt the Wagon*”. Table C.2 lists special characters that require a 2-character combination.

Table C.2 Special Characters for Text

If you want this...	Enter this...	Description
\	\\	Backslash
”	\\”	Quote
(\\(Left Bracket
)	\\)	Right Bracket
0x0A	\\n	New line - if the text can be displayed on more than one line, this will set the line break.
	\\##	Sends one arbitrary code defined by the 2 hexadecimal digits ##

C.2.2 Sample Messages and their Meaning

For a Single Projector		
Message Format	Function	Example
(Code Data)	SET (set contrast of main image to 500)	(CON500)
(Code+Subcode Data)	SET (set contrast of PIP image to 500)	(CON+PIIP500)
(Code?)	REQUEST (what is current contrast?)	(CON?)
(Code+Subcode?)	REQUEST (what is contrast of PIP image?)	(CON+PIIP?)
(Code!Data)	REPLY (contrast is 64)	(CON!64)
(Code+Subcode!Data)	REPLY (PIP contrast is 64)	(CON+PIIP!64)
(\$Code Data)	SET AND ACKNOWLEDGE MESSAGE (message processed?)	(\$CON64)
(&Code+Subcode Data Checksum)	SET WITH CHECKSUM	(&CON64 240)

For a Specific Projector within a Network with 1 Controller present		
Message Format	Function	Example
(Dest Addr Code Data)	SET (turn projector #5 on)	(5pwr1)
(\$Dest Addr Code Data)	SET AND ACKNOWLEDGE MESSAGE (message processed?ffr55)	(\$5pwr1)

For a Specific Projector within a Network with Multiple Controllers present		
Message Format	Function	Example
(Dest Addr Src Code?)	REQUEST (get contrast from projector #5 to controller #2)	(5 2con?)
(\$Dest Addr Src Code Data)	SET AND ACKNOWLEDGE MESSAGE (is message from controller #2 processed by projector #5)	(\$5 2con?)
(Dest Addr Src Code!Data)	REPLY (from projector #5 to controller #2: contrast is 64)	(002 005con!064)

C.2.3 What is Actually Sent in a Message

Although you will send and read messages as strings of ASCII characters, the actual message travels as a sequence of bytes. Each character in this sequence requires 1 byte. The example below illustrates a “lamp limit is 2000 hours” reply from the projector.

ASCII =	(L	P	L	!	2	0	0	0)
HEX =	0x28	0x4	0x50	0x28	0x21	0x32	0x30	0x30	0x30	0x29

C.2.4 Maximizing Message Integrity

For additional reassurance and/or maximum message integrity, you can insert one or two special characters:

- **ACKNOWLEDGMENTS:** If you want assurance from the projector (or group of projectors) that a set message has been processed, request an acknowledgement. The acknowledgement is returned after the message has been received and fully executed by the projector (i.e. in the case of a source switch it is not sent until the switch is complete). If the message is not able to execute for some reason (i.e. invalid parameters, timeout, etc) a NAK is returned instead (not-acknowledge). Note that requesting an acknowledgement serves no purpose when included in a request message, since the acknowledgement will be redundant to the actual reply from the projector. However, if requested, the “\$” acknowledgement from the projector will follow the reply.

There are two types of acknowledgements:

- **SIMPLE ACKNOWLEDGEMENTS:** Insert a “\$” character just after the start code “(“. This will only return a ‘\$’. This will only return a ‘\$’ on success, or a ‘^’ on failure (NAK).
- **FULL ACKNOWLEDGEMENTS:** Insert a “#” character just after the start code “(“. This will return the message sent, as a reply.

This is a quick way to confirm success with set messages, and is particularly useful with long-distance communication links or where the projectors and/or images are not visible from the controller.

Acknowledgements can also be a type of flow control.

- **CHECKSUMS:** For maximum message integrity, add a checksum character “&” just after the start code “(“. You must then also include the correct checksum total (0-255) just before the “)” end code. Make sure to add a space before the calculated checksum to separate it from the last data parameter:

The checksum is the low byte of the sum of the ASCII values of all characters between the “(“ and the beginning of the checksum, but not including either. It does include the space in front of the checksum.

Calculate the checksum for the above “set contrast to 64” command as follows:

$$\begin{aligned}
 \text{CHECKSUM EXAMPLE} &= \& + c + o + n + 6 + 4 + \text{'space'} \\
 &= 26h + 63h + 6Fh + 6Eh + 36h + 34h + 20h \\
 &= 01F0h \\
 &= F0h \text{ when only the low byte is used} \\
 &= 240
 \end{aligned}$$

The projector collects all of the message bytes as defined in the first byte of the message, then creates its own checksum value for comparison with the checksum included in the controller’s message. If the values match, the message is considered to have been correctly received—otherwise the message is discarded.

NOTES: 1) ‘h’ indicates a hex number. **2)** If a “request” message has a checksum so will the reply. **3)** If using both “acknowledge” and “checksum”, either character can occur first.

C.2.5 Accessing Specific Channels or Inputs

For several commands (for example, ASR, Auto Channel Select) you can direct the message to particular channel, input or image. To do this, include a subcode after the function code.

Example:

(ASR 1)Enable Auto Channel Select for the channel being used by the Main image

(ASR+MAIN 1)Enable Auto Channel Select for the channel being used by the Main image

(ASR+PIIP 1)Enable Auto Channel Select for the channel being used by the PIP image

(ASR+C003 1)Enable Auto Channel Select for channel 3

(BBL+IN12 30)Set the bottom blanking value on slot 1 input 2 to value 30

It is only possible to set parameters from a specific channel or input if that parameter is stored separately for each channel or input. This function cannot be used for parameters that are specified for the projector as a whole such as projector address. The serial commands listed in the document specify which subcodes are applicable to each function.

C.2.6 Flow Control

Normally messages can be sent to the projector before processing of earlier messages is complete—the projector will just store messages in a buffer until ready to process. However, if a series of messages is sent it is possible that the projector may not be able to process them as fast as they arrive and the buffer will become full. If this happens, the projector will send the 13h (Xoff) code to instruct the controller (or any devices preparing to transmit) to cease transmission. At this point, the controller must respond immediately and send no more than 10 extra characters or they may be lost (i.e., the projector is able to accommodate the receipt of up to 10 more bytes after it sends 13h (Xoff)). When the buffer is once again available, the projector will send a 11h (Xon) command to resume transmission.

NOTE: *Xon and Xoff controls apply to both directions of communication. The projector will not send more than 3 characters after it has received a 13h (Xoff) code.*

C.2.7 Network Operation

Up to 1000 projectors can be linked together in a chain with the ‘OUT’ port on one connected to the ‘IN’ port on the next. A controller connected to the ‘IN’ port on the first projector can control them all, either by broadcasting messages which have no address and are thus seen by all projectors, or by directing messages to specific projector addresses.

To work with a specific projector in a group, the projectors must first be assigned a unique I.D.—either a projector number or an Ethernet IP address. Insert the number of the target projector between the starting ‘(’ and the 3-character ASCII code.

Table C.3 - Message for Specific Projector

(Addr Code Data)

Each projector compares the message address with its own address and, if matching, responds and processes the message. If the address does not match, the message is passed on until it reaches the intended projector.

Although messages without an address are always broadcast, you can also broadcast by including the reply destination address 65535. This ensures that replies go to a specific controller address rather than being broadcast. The projector will also include its address.

Table C.4 - Message for Projector from a Specific Controller

(Dest Src Code Data)

If you have more than one controller on a network, ensure to include both a source address and a destination address. With a single controller on the network, its address is never required. Place the source address between the destination address and 3-character code, including a space before and after as shown.

NOTE: Replies from a projector do not contain an address unless the request message includes both a destination address and a source address—i.e., a reply to a request having only a destination address will not have any source address.

Table C.5 - Message for Specific Projector from a Specific Controller

(Dest Src Code Data)

Examples		
Command	Message from Controller	Reply from Projector
Turn Projector #5 on.	(5pwr1)	{none}
What is the contrast level in Projector 30?	(30con?)	(CON!127)
Return Contrast from Projector #30 to Controller #2.	(30 2con?)	(00002 00030con!127)

C.3 Description Of Control Types

C.3.1 Subclasses

- **Power Down Controls** - These controls are accessible when the projector is in Standby power mode (i.e. power off) as well as when powered on.
- **Power Up Controls** - These controls are only accessible when the system electronics are fully powered (not necessarily lamp on).

C.3.2 Control Groups

- **Unsaved Controls** - These controls are not saved to flash. The settings are not maintained between power sessions.
- **Saved Controls** - These controls are saved to flash. The settings are persistent between power sessions.
- **Preference Controls** - These controls are transferable from one projector to another. Example: NET+SUB0 (projector subnet).
- **Configuration Controls** - These controls are projector specific settings. They are non-transferable between projectors. Example: NET+ETH0 (projector IP address).
- **Channel Controls** - These settings are specific to a particular input signal. Example: BRT (signal brightness).

- **Option Card Controls** - These settings are specific to a particular option card type / slot combination.

C.3.3 Access Levels

- **Operator** - Command is available at the operator level log in.
- **Advanced** - Command is available at the advanced operator level log in.
- **Admin** - Command is available at the administrator level log in.
- **Service** - Command is available at the service level log in.

Appendix D: Serial Command Reference

(ABL) ARRAY BRIGHT COLOR LOC	
CONTROL GROUP: Preference SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION This command is used to set parameters that control how the Array Bright/ColorLOC feature operates. From this control you enable the mode in which you want to operate the feature: target brightness, target gamut, update intervals, and other miscellaneous parameters.	
SUBCODE	DESCRIPTION OF USE
EABL	Enable Array Bright/ColorLOC: 0 = OFF 1 = fixed mode (uses CCA only) 2 = cool mode (uses CCA and LED control) 3 = bright mode (uses CCA and multi LED control)
BRGP	Brightness Group. Identifies a subset of all projectors in the array to be used in the Array BCLOC algorithm. May be used to provide multiple groups of projectors with different color targets. (0-9999)
BRTG	Brightness Target. Sets the target brightness that the projectors in the array brightness group should meet. (0-1000 Lumens)
MINB	Minimum Brightness. Sets the minimum brightness, as a percentage of target brightness, that the projector will display if it is capable. (0-100 percent)
MING	Minimum Gamut. Sets the minimum gamut, as a percentage of the target gamut, that the projector will display if it is capable. (0-100 percent)
ADIN	Adjustment interval. Controls the interval in seconds that this projector will run the Array Bright/ColorLOC algorithm. (1-9999)
BRIN	Broadcast interval. Controls the interval in seconds that this projector will update the projector array. (1-9999)

(ABL) ARRAY BRIGHT COLOR LOC <i>(Cont'd)</i>	
ALBV	<p>When set to 1, all projectors in the brightness group synchronize to this projector's color settings.</p> <p>0 = OFF 1 = synchronize group</p> <p>Note: A group can synchronize to only one projector. Setting ABL+ABLV on any projector in a group to make that projector the master projector releases the setting from any previous master projector in the group.</p>
DEVC	<p>Specifies the ethernet port used for transfer of ColorLOC data. When selected will use the PHM network ethernet port rather than default EM network ethernet port.</p> <p>0 = PHM network 1 = EM network</p>
WENA	<p>(FUTURE USE).</p> <p>Enable warnings associated with Bright/ColorLOC.</p> <p>0 = disable 1 = enable</p>
WBTH	<p>(FUTURE USE). Sets the brightness threshold at which a warning is issued when warnings are enabled. (0-100 percent).</p>
WGTH	<p>(FUTURE USE). Sets the gamut threshold at which a warning is issued when warnings are enabled (0-100 percent).</p>
IRTG	<p>(FUTURE USE). IR Brightness Target. Sets the target brightness that the projectors in the array brightness group should meet. (0-1000).</p>
DSEL	<p>Allows selection of the duty cycle mode of operation:</p> <p>0 = Automatic 1 = Preset</p>
SKEY	<p>Synchronize remote control keystrokes, test pattern and color enable amongst array projectors</p> <p>0 = Independent 1 = Synchronized</p>
SFRD	<p>Synchronize frame delay amongst array projectors</p> <p>0 = Independent 1 = Synchronized</p>
AFRD	<p>Sets the array frame delay parameter. Applies to all projectors in array if SFRD is set to Synchronized</p>
AFRS	<p>Read-only control reports smallest frame delay value in array that will not generate tearing artifacts</p>

(ABL) ARRAY BRIGHT COLOR LOC <i>(Cont'd)</i>	
SRGB	Synchronize RGB Brightness setting amongst array projectors 0 = Independent 1 = Synchronized
SACF	Synchronize AccuFrame setting amongst array projectors 0 = Independent 1 = Synchronized
EXAMPLES: (ABL+EABL 1) - Turn ON Array Bright/ColorLOC and run in Fixed mode (ABL+BRGP 2) - Set the brightness group to 2 (ABL+BRTG 400) - Set the brightness target to 400 Lumens (ABL+ADIN ?) - Return current value of adjustment interval in seconds	

(ACE) AUTO COLOR ENABLE	
CONTROL GROUP: Preference SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Automatically select Color Enable based on the control being adjusted. If enabled, this control allows the projector to automatically change the color enable control when the user is using the OSD interface to adjust controls such as Input levels, odd pixel, and brightness uniformity. This is an unsaved control, which can only be set when powered on, and only affects the operation of the On Screen menus.	
SUBCODE <No Subcode >	DESCRIPTION OF USE Enable/Disable auto color controls.
EXAMPLES: (ACE 0) - Disable Auto Color (ACE 1) - Enable Auto Color	

(ACO) ADAPTIVE CONTRAST	
CONTROL GROUP: Input SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Adaptive Contrast Enhancement dynamically expands the contrast of the output image producing vibrant images with seamless response to scene changes and fades. The adaptive contrast function implements a dynamic non-linear mapping between the Input and output contrast levels based on frame-by-frame luminance histogram measurement of the Input image.	
SUBCODE INxy	DESCRIPTION OF USE Set the adaptive contrast for SlotSlot x, Input y. Range 0-15.
MAIN	Set the adaptive contrast for main video. Range 0-15.
PIIP	Set the adaptive contrast for PIP video. Range 0-15.
EXAMPLES: (ACO 8) - Sets adaptive contrast for main image to 50% strength.	

(ACT) ACTIVE WINDOW	
CONTROL GROUP: Input SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION This control defines the Input active window in pixels. The production aperture is available for analog sources only, but not for decoded analog signals. The aperture is set once on every auto setup or on new signal detection when a channel for that signal is not present. The aperture defines the maximum window in which blanking controls can be opened up to, relative to the active portion of the signal. This is a read only control.	
SUBCODE INxy	DESCRIPTION OF USE Set the adaptive contrast for Slot x, Input y.
MAIN	Set the adaptive contrast for main video.
PIIP	Set the adaptive contrast for PIP video.
EXAMPLES: (ACT?) - Returns the active window for main video. (ACT+PIIP?) - Returns the active window for PIP video. (ACT+IN12?) - Returns the active window for Slot 1 Input 2.	

(ADR) ADDRESS	
CONTROL GROUP: Preference SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Set/Query Device Address on ASCII Protocol network. Required only for RS-232 connections that are daisy chained to allow directed messages.	
SUBCODE <No Subcode >	DESCRIPTION OF USE Valid Address range is 0 to 999. Reserved broadcast address is 65535.
EXAMPLES: (65535 ADR 0) - Set all devices to address 0. (0 ADR 5) - Set first device at address 0 to address to 5. (65535 1001ADR?) - Query address for all devices and return results to address 1001. Expected response to previous query (01001 00005ADR!005).	

(AGC) AUTOMATIC GAIN CONTROL	
CONTROL GROUP: Input SUBCLASS: Power Down ACCESS LEVEL: Advanced	
DESCRIPTION Enable/disable the Automatic Gain Control. This control allows the decoder to automatically track the sync amplitude of the incoming signal. Turn this control OFF if you are experiencing strange color artifacts, indicating an incompatibility between the source and the AGC.	
SUBCODE INxy	DESCRIPTION OF USE Set the AGC on Slot x, Input y to the specified state of either enable or disable.

(AGC) AUTOMATIC GAIN CONTROL (Cont'd)	
MAIN	Set automatic gain control on main image.
PIIP	Set automatic gain control on main image.
EXAMPLES: (AGC 1) - Enable AGC on main video. (AGC+MAIN 0) - Disable AGC on main video. (AGC+PIIP 1) - Enable on PIP video. (AGC?) - Returns the current AGC state on main video. (AGC+PIIP ?) - Returns the current AGC state on PIP video. (AGC+IN12 ?) - Returns the current AGC state on Slot 1 Input 2.	

(AIC) AUTO INPUT CYCLING	
CONTROL GROUP: Preference SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION When enabled, the system will continually search for the next valid signal when no signal is present or when loss of sync occurs on the current user selected Input. In the case of multiple signals to choose from, the order is based on Slot, followed by Inputs on that Slot.	
SUBCODE <No Subcode >	DESCRIPTION OF USE Enable or disable auto Input cycling.
EXAMPLES: (AIC 0) - Disable auto Input cycling. (AIC 1) - Enable auto Input cycling.	

(AIL) AUTO INPUT LEVEL	
CONTROL GROUP: Unsaved SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION If enabled, this control allows the projector to continuously monitor the Input signal levels of the analog Inputs and make adjustments as needed. Whenever the projector detects a level that would lead to the crushing of black or white levels, it adjusts the Input offset or gain to compensate. If the Input signal is not being crushed, the projector will do nothing. The Auto Input Level feature should only be used when the current source requires further Input level adjustment. There must be at least 12 consecutive white pixels in the image in order to use Auto Input Levels. The monitor period will run for 10 seconds after being issued. Auto setup or source switching will stop the level period. To use this control, turn the Auto Input Level feature ON, wait for the blacklevel and drive values to stabilize, and turn the Auto Input Level feature off or wait for the 10 seconds. When the Auto Input Level feature is turned OFF, the current drive and blacklevel values are maintained. This control only applies to analog BNC or Dual DVI cards.	

(AIL) AUTO INPUT LEVEL <i>(Cont'd)</i>	
SUBCODE	DESCRIPTION OF USE
MAIN	Perform auto Input level on the main image.
PIIP	Perform auto Input level on the PIP image.
EXAMPLES: (AIL 1) - Perform auto Input level on the main image. (AIL+PIIP 1) - Perform auto Input level on the PIP image.	

(ALT) ACTIVE LOOP-THROUGH		
CONTROL GROUP: Preference	SUBCLASS: Power Down	ACCESS LEVEL: Operator
DESCRIPTION In situations where a Twin HDMI Input card is being used to loop signals out to another projector, this feature ensures that video signals continue to be looped out when the projector enters Standby power mode. Note that when the projector is in Standby mode (and this feature is enabled), limited channel control is available - inputs can be switched, can perform Auto Setup and some limited input settings can be modified.		
SUBCODE	DESCRIPTION OF USE	
<No Subcode >	Enable or disable active loop-through.	
EXAMPLES: (ALT 1) - Enable Standby active loop-through. (ALT 0) - Disable Standby active loop-through. (ALT?) - Get the current Standby active loop-through setting.		

(APJ) ACTIVE PROJECTOR		
CONTROL GROUP: Input	SUBCLASS: Power Down	ACCESS LEVEL: Operator
DESCRIPTION Temporarily enable or disable the IR and wired keypad Inputs to a specific projector in a network of projectors. When a projector is disabled, the only key that works is PROJ. The next time the projector is powered up again, it will revert to fully enabled. The built-in keypad will always be fully functional. This control does not overwrite the Front IR, Back IR and Wired Keypad settings.		
SUBCODE	DESCRIPTION OF USE	
<No Subcode >	Set 0 to temporarily disable keypad access to this projector.	
EXAMPLES: (APJ 1) - Projector is active (keypads are enabled). (APJ 0) - Projector is not active (keypads are temporarily disabled). (APJ?) - Is the projector keypad active or not.		

(APW) AUTO POWER UP	
CONTROL GROUP: Preference SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION When the A/C switch is turned ON, the projector will automatically change from Stand-by Mode to Power ON Mode. The projector will switch the lamp(s) on without waiting for further user actions.	
SUBCODE <No Subcode >	DESCRIPTION OF USE Set to 1 to enable.
EXAMPLES: (APW 0) - Projector will remain in Standby Mode until the user presses the power key. (APW 1) - Projector will auto power up when A/C power is switched on.	

(ARO) ASPECT RATIO OVERLAY	
CONTROL GROUP: Unsaved SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Enables or disables Aspect Ratio layer over Image layer.	
SUBCODE <No Subcode >	DESCRIPTION OF USE
EXAMPLES: (ARO 1) - Turn ON Aspect Ratio Overlay. (ARO 0) - Turn OFF Aspect Ratio Overlay.	

(ASH) AUTO SHUTDOWN	
CONTROL GROUP: Saved SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION When Auto Shutdown Mode has been selected, and no projector activity has been seen for the activation time-out period, the projector will enter a Power Saving mode in which the lamps will dim and the shutter close. If this condition persists for an additional time-out period the projector will automatically go to standby. The presence of any activity within this is combined interval will cancel Auto Shutdown and return the projector to normal operation.	
SUBCODE <No Subcode >	DESCRIPTION OF USE Enable or disable Auto Shutdown Operation.

(ASH) AUTO SHUTDOWN	
SBTO	Set the uninterrupted time-out period that must elapse before projector will enter Standby Mode (The second time-out period or Standby time-out).
ALTO	Set the uninterrupted time-out period that must elapse time of activity loss until Auto Shutdown is activated (The first time-out period or Activation time-out).
EXAMPLES: (ASH 1) - Turn ON Auto Shutdown Mode. (ASH 0) - Turn OFF Auto Shutdown Mode. (ASH+SBTO 10) - Set standby time-out to 10 minutes. (ASH+ALTO 10) - Set source activity loss time-out to 10 minutes.	

(ASR) AUTO CHANNEL SELECT	
CONTROL GROUP: Channel SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION The Auto Channel Select (ASR) option allows the projector to select the channel memory best suited to the Input signal. If the current channel does not allow Auto Channel Select, the projector will not attempt to select a new channel when the signal changes. If the current channel does allow Auto Channel Select, then upon signal detection, an existing channel will be chosen. If a match is not found a new channel will be created.	
SUBCODE	DESCRIPTION OF USE
C0xx	Enable/disable Auto Channel Select on channel (xx=channel number from 01 to 99).
MAIN	Enable/disable Auto Channel Select on the channel being used by main.
PIIP	Enable/disable Auto Channel Select on the channel being used by PIP.
EXAMPLES: (ASR?) - Get Auto Channel Select state for channel being used by main. (ASR+MAIN?) - Get Auto Channel Select state for channel being used by main. (ASR+PIIP?) - Get Auto Channel Select state for channel being used by PIP. (ASR 1) - Enable Auto Channel Select for the channel being used by main. (ASR+PIIP 1) - Enable Auto Channel Select for the channel being used by PIP. (ASR+MAIN 0) - Disable Auto Channel Select for the channel being used by main. (ASR+C001 0) - Disable Auto Channel Select for channel 1.	

(ASU) AUTO SETUP	
CONTROL GROUP: Unsaved SUBCLASS: Power Down ACCESS LEVEL: Operator	
<p>DESCRIPTION</p> <p>This control tells the projector to automatically adjust as many parameters as it can to produce the optimal setup for the current input.</p> <p>NOTE: If main and PIP video are using the same channel, the Auto Setup will act on both, regardless of the sub-code being used.</p> <p>In some cases for analog video, the user can select the format that best suits their source. This selection helps the Auto Setup get the correct settings for the tracking and phase controls for analog sources that contain the same number of active lines, but have a different aspect ratios.</p> <ul style="list-style-type: none"> • All digital and decoder option cards do not allow options for auto setup since digital hardware provides enough information to perform the correct auto setup. • Analog PC graphics sources (4/5-wire sync) present a list of formats based on the current active lines detected in the video. • Analog Video Sources (3 wire sync on green) always have the options ‘Default’ and ‘Advanced’. Video sources use a look up table to determine their format based on video standards. The ‘Advanced’ Auto Setup selection measures the start pixel and start line whereas ‘Default’ uses the table values as is. 	
SUBCODE	DESCRIPTION OF USE
MAIN	Perform a standard Auto Setup on the main video.
PIIP	Perform a standard Auto Setup on the picture-in-picture (PIP) video.
<p>EXAMPLES:</p> <p>(ASU) - Perform standard Auto Setup on main video. (ASU+MAIN) - Perform standard Auto Setup on main video. (ASU+PIIP) - Perform standard Auto Setup on PIP.</p>	

(BBL) BOTTOM BLANKING	
CONTROL GROUP: Input SUBCLASS: Power Down ACCESS LEVEL: Operator	
<p>DESCRIPTION</p> <p>Set the number of lines to blank (turn to black) at the bottom of the image. This can be used to blank out any unwanted data near the bottom edge of the image.</p> <p>A positive amount of blanking makes the image smaller. A negative amount of blanking makes the image larger. Negative blanking is only applicable to analog signals, when the Auto Setup has not been able to set the image size correctly. It is preferable not to use negative blanking, but to run Auto Setup again, ensuring that the content has active pixels on each edge of the image.</p> <p>The maximum amount of bottom blanking allowed is half the image height minus 10. For negative blanking, the image size can only be increased to the limit of the sync.</p>	
SUBCODE	DESCRIPTION OF USE
INxy	Set the bottom blanking for Slot X, Input Y.

(BBL) BOTTOM BLANKING <i>(Cont'd)</i>	
MAIN	Set the bottom blanking for the main image.
PIIP	Set the bottom blanking for the PIP image.
EXAMPLES: (BBL 40) - Set bottom blanking to 40 on main video. (BBL+MAIN 40) - Set bottom blanking to 40 on main video. (BBL+PIIP 40) - Set bottom blanking to 40 on PIP video. (BBL+IN32 40) - Set bottom blanking to 40 on Slot 3 Input 2. (BBL?) - Returns the bottom blanking value on main video. (BBL+PIIP?) - Returns the bottom blanking value on PIP video. (BBL+IN12?) - Returns the bottom blanking value on Slot 1 Input 2.	

(BDR) BAUD RATE		
CONTROL GROUP: Preference	SUBCLASS: Power Down	ACCESS LEVEL: Advanced
DESCRIPTION Set the baud rate for a serial communications port. For RS-232 IN and RS-232 OUT, the default is 115200. For RS-422, the default is 19200. The default communications settings for all ports is 8 data bits, no parity. Valid baud rates, with the values to select them, are: 0 = 1200 4 = 38400 1 = 2400 5 = 57600 2 = 9600 6 = 115200 3 = 19200		
SUBCODE	DESCRIPTION OF USE	
PRTA	Set the baud rate on port A (RS-232 IN).	
PRTB	Set the baud rate on port B (RS-232 OUT).	
PRTC	Set the baud rate on port C (RS-422).	
EXAMPLES: (BDR+PRTA 6) - Set baud rate on port A to 115200 bits per second. (BDR+PRTA?) - Get baud rate (BDR+PRTA!"115200").		

(BGC) BASE GAMMA CURVE	
CONTROL GROUP: Input SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION This control lets you select the Gamma table. You can select from one of the standard tables, or select an arbitrary Gamma table that has been downloaded into the projector. A separate PC utility is needed to do this. The 2.22 table is a simple power curve. The standard table is a modified 2.22 curve with an optimized linear portion in the low end of the curve. This is the same as selecting a custom table and setting the function to be 2.22 and the slope to be 1.0. Selecting Gamma Function from the drop down list enables the Gamma Function and Gamma Slope controls. Valid values are: 0 = Standard 1 = 2.22 2 = Gamma Function	
SUBCODE	DESCRIPTION OF USE
INxy	Set the base gamma curve for Slot x, Input y.
MAIN	Set the base gamma curve for main video.
PIIP	Set the base gamma curve for PIP video.
EXAMPLES: (BGC 0) - Set main video to the standard base gamma table. (BGC+MAIN 0) - Set main video to the standard base Gamma table. (BGC+IN32 0) - Set Slot 3 Input 2 to the standard base Gamma table.	

(BGF) BASE GAMMA FUNCTION	
CONTROL GROUP: Input SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Defines the gamma power curve to be used when the Gamma table value is set to ‘Gamma Function’. This value, combined with Gamma Slope setting, determines the Gamma table to be used. The curve is generally a power curve with a small linear segment at the bottom defined by the slope. The valid range is 100-300, where 100 is 1.0 linear and 300 is a 3.00 power curve.	
SUBCODE	DESCRIPTION OF USE
INxy	Set the base gamma curve for Slot x, Input y.
MAIN	Set the base gamma curve for main video.
PIIP	Set the base gamma curve for PIP video.
EXAMPLES: (BGF 100) - Set the base Gamma Function to 1.0 for main video. (BGF+MAIN 300) - Set the base Gamma Function to 3.0 for main video. (BGF+IN32 222) - Set the base Gamma Function to 2.22 for Slot 3, Input 2.	

(BGS) BASE GAMMA SLOPE	
CONTROL GROUP: Input SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Defines the slope to be used for the base custom Gamma table in the small linear section at the bottom of the curve. This slope can be used to bring the low level blacks in the image in or out. This slope, combined with the Gamma function, defines the custom Gamma table. The valid range is 50-200, where 50 is a slope of 0.5 and 200 is a slope of 2.00.	
SUBCODE INxy	DESCRIPTION OF USE Set the base gamma curve for Slot x, Input y.
MAIN	Set the base gamma curve for main video.
PIIP	Set the base gamma curve for PIP video.
EXAMPLES: (BGS 100) - Set the base gamma slope to 1.0 for main video. (BGS+MAIN 200) - Set the base gamma slope to 2.0 for main video. (BGS+IN32 150) - Set the base gamma slope to 1.5 for Slot 3, Input 2.	

(BKY) BROADCAST KEY MODE	
CONTROL GROUP: Preference SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Toggle Broadcast Key Mode to select whether all key presses received by the projector will be relayed to all other projectors on the network.	
SUBCODE <No Subcode >	DESCRIPTION OF USE Set to 1 to enable.
EXAMPLES: (BKY 1) - Enable Broadcast Key. (BKY 0) - Disable Broadcast Key. (BKY?) - Get current Broadcast key state.	

(BLB) BLUE BLACK LEVEL	
CONTROL GROUP: Input SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Blue black level is used to compensate for relative variations in the black levels between Red, Green and Blue. This is available on all cards except the Video decoder. The correct setting achieves maximum contrast without crushing white or black. When the drive and black level controls are set correctly for a signal, the Comprehensive Color Adjustment, including color temperature, will work as expected. The drive and black level controls should not be used to setup a specific color temperature as this will require separate color temperature adjustments to be made for each signal.	
SUBCODE INxy	DESCRIPTION OF USE Set the blue black level on Slot x, Input y to the specified value in the range of -255 to 255.

(BLB) BLUE BLACK LEVEL (Cont'd)	
MAIN	Set the blue black level on the main video to the specified value in the range -255 to 255.
PIIP	Set the blue black level on the PIP video to the specified value in the range of -255 to 255.
<p>EXAMPLES:</p> <p>(BLB 128) - Set blue black level to 128 on main video. (BLB+MAIN 128) - Set blue black level to 128 on main video. (BLB+PIIP 100) - Set blue black level to 100 on PIP video. (BLB+IN32 100) - Set blue black level to 100 on Slot 3, Input 2. (BLB?) - Returns the current blue black level value on main video. (BLB+PIIP ?) - Returns the current blue black level value on PIP video. (BLB+IN12 ?) - Returns the current blue black level value on Slot 1, Input 2.</p>	

(BLD) BLUE DRIVE	
CONTROL GROUP: Input SUBCLASS: Power Down ACCESS LEVEL: Operator	
<p>DESCRIPTION</p> <p>The blue drive level is used to compensate for different amounts of attenuation between the Red, Green and Blue in the signal. This is available on all cards except the Video decoder. The correct setting achieves maximum contrast without crushing white or black. When the drive and black level controls are set correctly for a signal, the Comprehensive Color Adjustment, including color temperature, will work as expected. The drive and black level controls should not be used to setup a specific color temperature as this will require separate color temperature adjustments to be made for each source.</p>	
SUBCODE	DESCRIPTION OF USE
INxy	Set the blue drive on Slot x, Input y to the specified value in the range of -255 to 255.
MAIN	Set the blue drive on the main video to the specified value in the range -255 to 255.
PIIP	Set the blue drive on the PIP video to the specified value in the range of -255 to 255.
<p>EXAMPLES:</p> <p>(BLD 128) - Set blue drive to 128 on main video. (BLD+MAIN 128) - Set blue drive to 128 on main video. (BLD+PIIP 100) - Set blue drive to 100 on PIP video. (BLD+IN32 100) - Set blue drive to 100 on Slot 3 Input 2. (BLD?) - Returns the current blue drive value on main video. (BLD+PIIP?) - Returns the current blue drive value on PIP video. (BLD+IN12?) - Returns the current blue drive value on Slot 1 Input 2.</p>	

(BOG) BLUE ODD PIXEL GAIN	
CONTROL GROUP: Option SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION This adds an offset to Input blue gain settings on the analog Input card. It is used to compensate for differences between the A to D converter used to sample even pixels, and the one used for odd pixels. A value of 0 is the null position in which both A to D converters are set to exactly the same value.	
SUBCODE SLx0	DESCRIPTION OF USE Set a blue gain offset for the second A to D.
EXAMPLES: (BOG+SL10 -10) - Set a blue gain offset to -10 on Slot 1.	

(BOO) BLUE ODD PIXEL OFFSET	
CONTROL GROUP: Option SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION This adds an offset to Input blue black level settings on the analog Input card. It is used to compensate for differences between the A to D converter used to sample even pixels, and the one used for odd pixels. A value of 0 is the null position in which both A to D converters are set to exactly the same value.	
SUBCODE SLx0	DESCRIPTION OF USE Set a blue black level offset for the second A to D.
EXAMPLES: (BOO+SL10 -10) - Set a blue black level offset to -10 on Slot 1.	

(BRT) BRIGHTNESS	
CONTROL GROUP: Input SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION The Brightness control adjusts the offset applied to the Input signal. It has exactly the same effect as adjusting the Input levels, except that it operates on all 3 colors and can be used to make quick adjustments. For precise control, the Input level adjustments should be used. If the setting is too high, black portions of the image are displayed as dark grey, making the image appear washed-out. If the setting is too low, dark greys are displayed as deep black and detail is lost in the darkest parts of the image. This condition is known as 'crushing'. When adjusting, start from a lower setting and adjust upwards until just above the point where black is crushed.	
SUBCODE INxy	DESCRIPTION OF USE Set the brightness on Slot x, Input y to the specified value in the range of -1000 to 1000.

(BRT) BRIGHTNESS (Cont'd)	
MAIN	Set the brightness on the main video to the specified value in the range -1000 to 1000.
PIIP	Set the brightness on the PIP video to the specified value in the range of -1000 to 1000.
EXAMPLES:	
(BRT 500) - Set brightness to 500 on main video	
(BRT+MAIN 500) - Set brightness to 500 on main video.	
(BRT+PIIP -250) - Set brightness to -250 on PIP video.	
(BRT+IN32 100) - Set brightness to 100 on Slot 3, Input 2.	
(BRT?) - Returns the current brightness value on main video.	
(BRT+PIIP ?) - Returns the current brightness value on PIP video.	
(BRT+IN12 ?) - Returns the current brightness value on Slot 1, Input 2.	

(BRU) BRIGHTNESS UNIFORMITY	
CONTROL GROUP: Preference SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION	
Enable/Disable brightness uniformity and adjust brightness uniformity output.	
SUBCODE	DESCRIPTION OF USE
SLCT	Enable/Disable Brightness Uniformity.
CRSA	Enable/Disable BRU Coarse Adjustment.
UITL	Get/Set the percent of gain at top left corner.
UIML	Get/Set the percent of gain at left side.
UIBL	Get/Set the percent of gain at bottom left corner.
UITR	Get/Set the percent of gain at top right corner.
UIMR	Get/Set the percent of gain at right side.
UIBR	Get/Set the percent of gain at bottom right corner.
UIH1	Get/Set the percent of gain at left turn point.
UIH2	Get/Set the percent of gain at right turn point.
UI1P	Get/Set position of left turn point.
UI2P	Get/Set position of right turn point.
GAIN	Get/Set overall gain.
UIRT	Restore all parameters to factory default.
EXAMPLES:	
(BRU+SLCT?) - Get current state of brightness uniformity, 0 is disabled, 1 is enabled.	
(BRU+SLCT 1) - Enable brightness uniformity.	

(CCD) OUTPUT COLOR DEFAULT	
CONTROL GROUP: Preference SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Specifies the default color adjustment to use for new channels. This allows the user to specify a standard color and have that color applied by default to all new sources. The user may override this for any specific channel. Using the default subcode applies a default to be used when creating a new channel using auto setup while the YNF is not in the video path. Using the subcode DYNF allows a different color table default to be specified while the YNF is in the video path during auto setup.	
SUBCODE <No Subcode >	DESCRIPTION OF USE Apply a default table to use while running auto setup when a YNF filter is not in place.
DYNF	Apply a default table to use while running auto setup when a YNF filter is in place.
EXAMPLES: (CCD 0) - Make new channels using the MAX drive table, while running auto setup and YNF is out. (CCD+DYNF 4) - Make new channels using the HD table, while running auto setup and YNF is in.	

(CCI) INTERPOLATED COLOR	
CONTROL GROUP: Input SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION This control generates an output color map based on interpolating the values for the standard color temperatures in the range of 3200K-9300K. It effectively allows you to adjust the color temperature of the image. The selected output color table must be on 'Color Temperature' to enable this control.	
SUBCODE INxy	DESCRIPTION OF USE Set the interpolated color temperature for Slot x, Input y.
MAIN	Set the interpolated color temperature for main video.
PIIP	Set the interpolated color temperature for PIP video.
EXAMPLE: (CCI 9300) - Set the interpolated color temperature to 9300K for main video.	

(CCS) SELECT OUTPUT COLOR	
CONTROL GROUP: Input SUBCLASS: Power Down ACCESS LEVEL: Operator	
<p>DESCRIPTION</p> <p>Selects which of several predefined and 4 user defined color maps to use for a specific Input signal.</p> <p>0 = MaxDrives - All color adjustments are turned off allowing the projector to run at maximum brightness.</p> <p>1 = Color Temperature - This will allow you to specify a color temperature between 3200 and 9300 based on the setting of the Color Temperature control. Color temperature is expressed in degrees Kelvin [3200, 5400, etc.].</p> <p>Lower numbers give a reddish white, higher numbers appear bluish. There are 4 standard settings. 9300K is close to the white of many computer monitors. 6500K is the standard for color video, in both standard- and high-definition forms. 5400K is a standard for graphics and black-and-white video. 3200K is useful if the projected image is to be filmed or shot as part of a studio set that is illuminated with incandescent lights. For all color temperatures, the color primaries [red, green & blue] are unchanged and reflect the native colors of the projector.</p> <p>2 = SD Video - Optimized for SD video. This will allow you to adjust the color of red, green and blue, as well as the color white.</p> <p>3 = HD Video - Optimized for HD video. This will allow you to adjust the color of red, green and blue, as well as the color of white.</p> <p>4 = User 1 - Selects a user defined sets of color adjustments.</p> <p>5 = User 2 - Selects a user defined sets of color adjustments.</p> <p>6 = User 3 - Selects a user defined sets of color adjustments.</p> <p>7 = User 4 - Selects a user defined sets of color adjustments.</p> <p>The set of 4 User Defined settings are defined in the configuration menu.</p>	
SUBCODE	DESCRIPTION OF USE
INxy	Select the color temp setting for Slot x, Input y.
MAIN	Select the color temp setting for main video.
PIIP	Select the color temp setting for PIP video.
<p>EXAMPLE:</p> <p>(CCS 0) - Set the color temp setting to max drives for main video.</p>	

(CHA) CHANNEL	
CONTROL GROUP: Unsaved SUBCLASS: Power Up ACCESS LEVEL: Operator	
<p>DESCRIPTION</p> <p>Select the channel to use, in the range 1-99. Switching channels will switch to the appropriate option card/Input. If the signal signature in the channel does not match the signal on the channel's Input, the channel change will switch to the "auto-channel" or to the channel that was defined for the signal signature that is on the channel's Input. This command will fail if the data in the channel file does not match the current system hardware. This command can also be used to copy, delete and edit certain channel properties.</p>	
SUBCODE	DESCRIPTION OF USE
COPY	Make a copy of a channel, and assign it a unique number (optionally, specify a new channel number).
DLET	Delete a channel.
MAIN	Set the channel being used by main.

(CHA) CHANNEL <i>(Cont'd)</i>	
PIIP	Set the channel being used by PIP.
INFO	Display the information on the current channel.
EXAMPLES: (CHA?) - Get current active channel. (CHA 10) - Set main to channel 10. (CHA+PIIP 99) - Set PIP to channel 99. (CHA+COPY 1) - Make a copy of channel 1, using the next free channel number. (CHA+COPY 1 20) - Make a copy of channel 1, and copy to channel 20 (will fail if 20 already exists). (CHA+DLET 0) - Delete all unlocked channels. (CHA+DLET 20) - Delete channel 20.	

(CLE) COLOR ENABLE	
CONTROL GROUP: Unsaved SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION This control allows the three primary colors (red, green, and blue) to be turned ON or OFF separately. It is used to look at the colors one at a time or in pairs when doing convergence, light measurements, etc. The list of values for this command are: 0 = White 4 = Yellow 1 = Red 5 = Cyan 2 = Green 6 = Magenta 3 = Blue	
SUBCODE	DESCRIPTION OF USE
<No Subcode >	
EXAMPLES: (CLE 1) - Display red portion of image only. (CLE 5) - Display green and blue portion of image only. (CLE 0) - Display image normally (all primaries).	

(CLP) CLAMPING	
CONTROL GROUP: Input SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION For all analog signals a clamping pulse is generated that defines where in the signal a black reference can be found. The Clamp Location sets the clamping pulse to one of three possible locations: tip, back porch & tri-level. For most signals the correct position is backporch, just after the sync pulse. If the signal has no back porch and there is no sync pulse in the RG or B signals, clamping can occur at the front or tip of the sync pulse. For HDTV signals [1080i & 720p] the clamp must be moved past the positive pulse of the tri-level sync pulse, so the tri-level option is correct. For almost all other signals, backporch is correct. Sync tip is needed only if the backporch is too small. For many signals, this control will have no effect. Change this setting only if the image appears unusually dim, has horizontal streaks, or shows significant color drift.	

(CLP) CLAMPING <i>(Cont'd)</i>	
Value Range: 0 = sync tip 1 = backporch 2 = tri-level	
SUBCODE	DESCRIPTION OF USE
IN _{xy}	Set the black level clamping for Slot x, Input y.
MAIN	Set the black level clamping for main video.
PIIP	Set the black level clamping for PIP video.
EXAMPLES: (CLP 0) - Set the black level clamping for main video to sync tip. (CLP+MAIN 0) - Set the black level clamping for main video to sync tip. (CLP+IN32 0) - Set the black level clamping for Slot 3 Input 2 to sync tip.	

(CLR) COLOR	
CONTROL GROUP: Input SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION This control adjusts the saturation (amount) of color in a video image.	
SUBCODE	DESCRIPTION OF USE
IN _{xy}	Set the color saturation on Slot x, Input y to the specified value in the range of 0-1000.
MAIN	Set the color saturation on the main video to the specified value in the range 0-1000.
PIIP	Set the color saturation on the PIP video to the specified value in the range of 0-1000.
EXAMPLES: (CLR 500) - Set color saturation to 500 on Main video. (CLR+MAIN 500) - Set color saturation to 500 on Main video. (CLR+PIIP 250) - Set color saturation to 250 on PIP video. (CLR+IN32 100) - Set color saturation to 100 on Slot 3, Input 2. (CLR ?) - Returns the current color saturation value on Main video. (CLR+PIIP ?) - Returns the current color saturation value on PIP video. (CLR+IN12 ?) - Returns the current color saturation value on Slot 1, Input 2.	

(CNM) CHANNEL INFO: NUMBER	
CONTROL GROUP: Channel SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION This control is used to edit the channel index number.	
SUBCODE C0xx	DESCRIPTION OF USE Select a new number for channel (xx=channel number from 01 to 99).
EXAMPLE: (CNM+C001 3) - Change the channel number from 1 to 3.	

(CON) CONTRAST	
CONTROL GROUP: Input SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION This control sets the image contrast by adjusting the gain applied to the Input signal. It has exactly the same effect as adjusting the Input levels, except that it operates on all 3 colors and can be used to make quick adjustments. For precise control, the Input level adjustments should be used. If the setting is too high, bright portions of the image that are not quite at peak white are displayed as peak white and detail is lost in the brightest parts of the image. This condition is known as 'crushing'. If the setting is too low, the image will be dimmer than it need be. Start from a lower setting and adjust upwards until just below the point where white is crushed.	
SUBCODE INxy	DESCRIPTION OF USE Set the contrast on Slot x, Input y to the specified value in the range of 0-1000.
MAIN	Set the contrast on the main video to the specified value in the range 0-1000.
PIIP	Set the contrast on the PIP video to the specified value in the range of 0-1000.
EXAMPLES: (CON 500) - Set contrast to 500 on Main video. (CON+MAIN 500) - Set contrast to 500 on Main video. (CON+PIIP 250) - Set contrast to 250 on PIP video. (CON+IN32 100) - Set contrast to 100 on Slot 3, Input 2. (CON?) - Returns the current contrast value on Main video. (CON+PIIP ?) - Returns the current contrast value on PIP video. (CON+IN12 ?) - Returns the current contrast value on Slot 1, Input 2.	

(CRM) CHROMA/LUMA DELAY	
CONTROL GROUP: Input SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Chroma/Luma delay adjusts the time delay between the chroma and the luminance signals in decoded signals. Adjust the delay to eliminate shadows occurring with adjacent colors. It is useful only for video images processed by decoder cards.	
SUBCODE	DESCRIPTION OF USE
INxy	Set the luma delay on Slot x, Input y to the specified value in the range of -3 pixel to 3 pixel.
MAIN	Set the luma delay on the main video to the specified value in the range -3 pixel to 3 pixel.
PIIP	Set the luma delay on the PIP video to the specified value in the range of -3 pixel to 3 pixel.
EXAMPLES: (CRM 3) - Set luma delay to 3 pixel on Main video. (CRM+MAIN 3) - Set luma delay to 3 pixel on Main video. (CRM+PIP 3) - Set luma delay to 3 pixel on PIP video. (CRM+IN32 -3) - Set luma delay to -3 pixel on Slot 3, Input 2. (CRM ?) - Returns the current luma delay on Main video. (CRM+PIP ?) - Returns the current luma delay on PIP video. (CRM+IN12 ?) - Returns the current luma delay on Slot 1, Input 2.	

(CSP) COLOR SPACE	
CONTROL GROUP: Input SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION This control specifies which color space the Input signal uses. This determines how the color components are decoded for accurate color in the display. Color space control only applies to analog Input signals. Although the proper color space is normally determined automatically by the projector, you can override the setting. Use RGB unless you are using component video. Use YPbPr(SDTV) for most video sources. Use YPbPr(HDTV) for high definition signals.	
NOTE: When certain RGB signals are first connected, the projector may not initially recognize them as RGB and may incorrectly decode their color information as YPbPr(SDTV). These signals can include: RGB signals in NTSC, PAL, SECAM frequency ranges, Scan-doubled sync-on-green, Scan-quadrupled sync-on-green. For these signals, change the Color Space to RGB, then define a new channel for future use. Values are: 0 = RGB 1 = YPbPr (SDTV) 2 = YPbPr (HDTV)	
SUBCODE	DESCRIPTION OF USE
INxy	Set the color space on Slot x, Input y.

(CSP) COLOR SPACE (Cont'd)	
MAIN	Set the color space on Main video.
PIIP	Set the color space on PIP video.
EXAMPLES: (CSP 1) - Set color space to YPbPr(SDTV) on Main video. (CSP+MAIN 2) - Set color space to YPbPr(HDTV) on Main video. (CSP+PIIP 1) - Set color space to YPbPr(SDTV) on PIP video. (CSP+IN32 1) - Set color space to YPbPr(SDTV) on Slot 3, Input 2. (CSP?) - Returns the current color space value on Main video. (CSP+PIIP?) - Returns the current color space value on PIP video. (CSP+IN12?) - Returns the current color space value on Slot 1, Input 2.	

(DED) DUAL DVI EDID TYPE SELECTION	
CONTROL GROUP: Option SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Set the preferred EDID Timings on the Dual DVI Input card. Available Models are: 0 = Default 1 = 3D 2 = Custom NOTE: 3D option (1) is not supported for Entero or Matrix StIM/SIM.	
SUBCODE SLxy	DESCRIPTION OF USE Set the EDID timings on Slot x to the specified type.
EXAMPLES: (DED+SL31 1) - Set EDID type to 2 (Custom) on Slot 3, Input 1. (DED+SL12 ?) - Returns the current EDID type on Slot 1, Input 2.	

(DLG) DATA LOGGING	
CONTROL GROUP: Preference SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Set data logging level. 0 = Minimal logging of activities. Logging system errors, warnings and 'events' (i.e. power ON/OFF, lamp ON/OFF, user login/logout). 1 = Normal logging. Most activities logged - errors, warnings, events, and other info. 2 = Debug logging. All activities are logged.	
SUBCODE <No Subcode >	DESCRIPTION OF USE There are 3 levels for data logging.
EXAMPLES: (DLG1) - Set current logging level to 1. (DLG?) - Get current logging level. Response is (DLG!001).	

(DTL) DETAIL	
CONTROL GROUP: Input SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION This control adjusts the sharpness of the image. The sharpness detail enhancement applied is based on adaptive horizontal, vertical and diagonal large edge and small edge enhancement processes. Setting detail above the halfway-point can introduce 'noise' in the image; lower settings can improve a noisy signal. This command does not take effect unless the 'minimum change required' in the (DTT) control is reached.	
SUBCODE	DESCRIPTION OF USE
INxy	Set the detail for Slot x, Input y.
MAIN	Set the detail for Main video.
PIIP	Set the detail for PIP video.
EXAMPLE: (DTL 50) - Set the detail to mid point for Main video.	

(DTO) DETAIL OVERTHOOT	
CONTROL GROUP: Input SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Detail overshoot / undershoot control is provided to minimize ringing on the enhanced edges detail and texture effects.	
SUBCODE	DESCRIPTION OF USE
INxy	Set the detail overshoot for Slot x, Input y.
MAIN	Set the detail overshoot for Main video.
PIIP	Set the detail overshoot for PIP video.
EXAMPLE: (DTO 50) - Set the detail overshoot to mid point for Main video.	

(DTT) DETAIL THRESHOLD	
CONTROL GROUP: Input SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Detail threshold selects a filter sensitivity to noise. A higher value may improve noisy sources especially for higher settings of detail. This control sets the minimum change required before the detail (DTL) function is activated. This allows images to be sharpened without increasing the background noise.	
SUBCODE	DESCRIPTION OF USE
INxy	Set the detail threshold for Slot x, Input y.

(DTT) DETAIL THRESHOLD <i>(Cont'd)</i>	
MAIN	Set the detail threshold for Main video.
PIIP	Set the detail threshold for PIP video.
EXAMPLE: (DTT 50) - Set the detail threshold to mid point for Main video.	

(EBB) BLACK LEVEL BLENDING	
CONTROL GROUP: Config/Preference SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION The Black Level Blending control allows for Black Level Blending. Black Level Blending is the process of modifying the pixels in the bright overlapping areas that result from the overlapping of two or more images. Correct adjustment eliminates uneven black levels by matching up black area hues with a target area hue (the intersection of the center lines), and adjusting the overlaps (edges) surrounding the target area. Use the black test pattern to perform this function.	
SUBCODE	DESCRIPTION OF USE
SLCT	Enables or disables Black Level Blending mode, or choose a saved Christie TWIST™ Black Level Blending preset.
CNTV	Changes edge blending black level in the center zone.
TOPV	Changes edge blending black level in the top zone.
LFTV	Changes edge blending black level in the left zone.
RHTV	Changes edge blending black level in the right zone.
BTMV	Changes edge blending black level in the bottom zone.
TLTV	Changes edge blending black level in the top-left zone.
TRTV	Changes edge blending black level in the top-right zone.
BLTV	Changes edge blending black level in the bottom-left zone.
BRTV	Changes edge blending black level in the bottom-right zone.
LFTW	Changes edge blending black level width of the left zone.
RHTW	Changes edge blending black level width of the right zone.
TOPW	Changes edge blending black level width of the top zone.
BTMW	Changes edge blending black level width of the bottom zone.
EXAMPLES: (EBB+CNTV 100) - Set black level blend offset of center zone to 100. (EBB+LFTW 200) - Set black level blend width of left zone to 200. (EBB+RHTW?) - Get black level blend width of right zone.	

(EBL) EDGE BLENDING	
CONTROL GROUP: Config/Preference SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION This control the edge blending settings so that any of the four edges can be blended with an adjacent projector to achieve an overlapped and seamless image.	
SUBCODE	DESCRIPTION OF USE
SLCT	Enables or Disables standard edge blending mode, or choose a saved TWIST blending preset.
LFTW	Changes edge blending width of the left edge.
LFTM	Changes edge blending curve midpoint of the left edge.
LFTS	Changes edge blending curve slope at the midpoint on the left edge.
RHTW	Changes edge blending width of the right edge.
RHTM	Changes edge blending curve midpoint of the right edge.
RHTS	Changes edge blending curve slope at the midpoint on the right edge.
TOPW	Changes edge blending width of the top edge.
TOPM	Changes edge blending curve midpoint of the top edge.
TOPS	Changes edge blending curve slope at the midpoint on the top edge.
BTMW	Changes edge blending width of the bottom edge.
BTMM	Changes edge blending curve midpoint of the bottom edge.
BTMS	Changes edge blending curve slope at the midpoint on the bottom edge.
STDC	Enable the advanced curve settings.
OVLP	Enables or Disables edge blending overlap control. This more will make the active portion of the Blend zone very obvious and is intended to make setup easier.
EXAMPLES: (EBL+LFTW100) -Set edge blending left width. (EBL+LFTW?) - Get edge blending left width. (EBL+SLCT1) - Use standard edge blending mode. (EBL+OVLP1) - Enables edge blending overlap mode.	

(EME) ERROR MESSAGE ENABLE	
CONTROL GROUP: Preference SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION This control enables the displaying of error messages, and determines to which interface the messages are sent. Error messages can be turned off or can be displayed on the screen, sent out the serial port, or both. This setting does not affect messages for invalid user entries, for which error messages are always displayed. Valid values are: 0 = Off 1 = Screen 2 = Serial ports 3 = All	
SUBCODE <No Subcode >	DESCRIPTION OF USE
EXAMPLES: (EME ?) - Get current Error Message Enable state. (EME 1) - Direct error messages to the screen.	

(ESM) EM STEALTH MODE	
CONTROL GROUP: Preference SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Stealth mode extinguishes LEDs on the Electronics Module. Typically this is used in simulation environments where extraneous light would detract from the scenario (when the scene involves IR).	
SUBCODE <No Subcode >	DESCRIPTION OF USE
EXAMPLES: (ESM 1) - Enable EM stealth mode. (ESM ?) - Report the stealth mode value.	

(FAD) FADE TIME	
CONTROL GROUP: Preference SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Controls the amount of time it takes to fade between images on a source switch. It also fades in the PIP and OSD if possible.	
SUBCODE <No Subcode >	DESCRIPTION OF USE Time in hundredths of a second to allow the fade. Range 0 - 150 where 150 = 1.5 seconds, 1 = 10ms, 0 = off.
EXAMPLE: (FAD 100) - Fade for 1 second.	

(FAS) FAN ASSIST SWITCH	
CONTROL GROUP: Saved SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Enables or disables the ability for all fans to operate at maximum speed during a thermal over-temp condition.	
SUBCODE <No Subcode >	DESCRIPTION OF USE
EXAMPLES: (FAS 1) - Turn ON fan assist. (FAS 0) - Turn OFF fan assist.	

(FIL) FILTER							
CONTROL GROUP: Input SUBCLASS: Power Up ACCESS LEVEL: Operator							
DESCRIPTION Apply an internal Low Pass Filter to the current Input signal, before the A/D conversion in analog cards. This removes high frequency noise from Input signals. HDTV is typically used for 720p and 1080i video sources. The high bandwidth filter should be used for 1080p or higher frequency sources. Valid values are: <table border="0" style="width: 100%;"> <tr> <td style="width: 50%;">0 = OFF</td> <td style="width: 50%;">2 = HDTV</td> </tr> <tr> <td>1 = HDTV-High Bandwidth</td> <td>3 = EDTV</td> </tr> <tr> <td></td> <td>4 = SDTV</td> </tr> </table>		0 = OFF	2 = HDTV	1 = HDTV-High Bandwidth	3 = EDTV		4 = SDTV
0 = OFF	2 = HDTV						
1 = HDTV-High Bandwidth	3 = EDTV						
	4 = SDTV						
SUBCODE INxy	DESCRIPTION OF USE Set the filter for Slot x, Input y.						
MAIN	Set the filter for Main video.						
PIIP	Set the filter for PIP video.						
EXAMPLES: (FIL 2) - Set the filter for main video to HDTV. (FIL+MAIN 2) - Set the filter for main video to HDTV. (FIL+IN32 2) - Set the filter for Slot 3, Input 2 to HDTV.							

(FLE) FRAME LOCK ENABLE	
CONTROL GROUP: Preference SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION This control enables or disables Frame Lock, which controls how the projector controls the output frame timing based on the Input signal. When set to Frame Lock, output image frames are locked to the Input if possible. When locked, the output is always locked to the primary Input, never the PIP image. Free Run sets the output to close to 60Hz for all sources. This control must be set to locked if a 3D-Stereo signal is used.	
SUBCODE <No Subcode >	DESCRIPTION OF USE Enables or Disables frame lock.
EXAMPLES: (FLE 0) - Free Run output. (FLE 1) - Enables frame lock. (FLE ?) - Get frame lock enabled status.	

(FLW) SERIAL FLOW CONTROL	
CONTROL GROUP: Preference SUBCLASS: Power Down ACCESS LEVEL: Advanced	
DESCRIPTION Set the flow control for a serial communications port.	
SUBCODE PRTA	DESCRIPTION OF USE Set the mode on port A (RS-232 IN).
PRTB	Set the mode on port B (RS-232 OUT).
PRTC	Set the mode on port C (RS-422).
EXAMPLES: (FLW+PRTA 0) - Set no flow control on port A. (FLW+PRTA 1) - Set flow control on port A to software. (FLW+PRTA?) - Get flow control (FLW+PRTA!001 "Software")	

(FMD) FILM MODE DETECT	
CONTROL GROUP: Input SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Enable or disable film motion detection. This is only available for interlaced or segmented frame sources. Valid values are: 0 = Disabled 1 = Auto 2 = PsF	
SUBCODE INxy	DESCRIPTION OF USE Set the film mode detect for Slot x, Input y.

(FMD) FILM MODE DETECT <i>(Cont'd)</i>	
MAIN	Set the film mode detect for Main video.
PIIP	Set the film mode detect for PIP video.
EXAMPLE: (FMD 1) - Enable Auto Film mode detect for Main video.	

(FRD) FRAME DELAY	
CONTROL GROUP: Preference SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Delays the output signal timing relative to the Input signal timing by a fraction of a frame, and up to several frames. The minimum latency can vary based on the amount of scaling applied to the image. When using keystone or warping, an additional latency is required, depending on the amount of warp. The control is only available when the Input signal is frame locked. In free run mode, or in cases where the signal cannot be frame locked, the minimum latency defined by the scaling and keystone/warp is applied to the signal. The value used is a 1/1000th of a frame. For example, 1000 equals 1 frame.	
SUBCODE STAT?	DESCRIPTION OF USE Retrieve the actual minimum frame delay.
EXAMPLES: (FRD 1500) - Delay 1.5 frames. (FRD+STAT?) - Retrieve the actual minimum frame delay.	

(FRF) FREE RUN FREQUENCY	
CONTROL GROUP: Preference SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION This controls sets the output video vertical frequency.	
SUBCODE <No Subcode >	DESCRIPTION OF USE Set the output vertical frequency, used when running in “Free Run” mode. Refer to <i>(FLE) Frame Lock Enable</i> .
EXAMPLES: (FRF 5000) - Set free run frequency to 50 Hz. (FRF ?) - Get free run frequency.	

(FRZ) FREEZE IMAGE	
CONTROL GROUP: Unsaved SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Freeze the display image. This allows a detailed examination of a single frame of an otherwise moving image. Switching channels/Inputs automatically switches the projector to unfrozen.	

(FRZ) FREEZE IMAGE <i>(Cont'd)</i>	
SUBCODE	DESCRIPTION OF USE
MAIN	Freeze or un-freeze the main image (1=freeze, 0=unfreeze).
PIIP	Freeze or un-freeze the PIP image (1=freeze, 0=unfreeze).
EXAMPLE: (FRZ+MAIN 1) - Freeze the main image.	

(GAM) GAMMA CORRECTION		
CONTROL GROUP: Preference	SUBCLASS: Power Down	ACCESS LEVEL: Operator
DESCRIPTION The Gamma Correction control is used to correct ambient conditions affecting the display. The Gamma control affects the shape of the curve determining what grey shades are displayed for a given amount of signal Input between minimum (black) and maximum (white). This is done by performing a linear transform from the user selected gamma channel setting. The normal point is 0, meaning the selected gamma table is used unaltered. If there is a lot of ambient light, the image can become washed out, making it difficult or impossible to see details in dark areas. Increasing the gamma correction setting can compensate for this by transforming the curve towards a gamma of 1.0. Decreasing the control shall transform the gamma towards a gamma of 3.0.		
SUBCODE <No Subcode >	DESCRIPTION OF USE Set the interpolated gamma level.	
EXAMPLES: (GAM 100) - Set gamma to 1.0 curve. (GAM?) - Returns current gamma curve.		

(GIA) ANALOG BNC GROUNDED INPUT SELECTION		
CONTROL GROUP: Option	SUBCLASS: Power Up	ACCESS LEVEL: Operator
DESCRIPTION Set the Input signal grounding method to single-ended or differential. Valid values are: 0 = Differential (default) 1 = Single-ended		
SUBCODE SLxy	DESCRIPTION OF USE Set the Input signal grounding method for the specified Slot and Input.	
EXAMPLES: (GIA+SL31 1) - Set grounding on Slot 3, Input 1 to single-ended. (GIA+SL11 ?) - Returns the current grounding method of Slot 1, Input 1.		

(GID) VIDEO DECODER GROUNDED INPUT SELECTION	
CONTROL GROUP: Option SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Set the Input signal grounding method to single-ended or differential. Valid values are: 0 = Differential (default) 1 = Single-ended	
SUBCODE SLxy	DESCRIPTION OF USE Set the Input signal grounding method for the specified Slot and Input.
EXAMPLES: (GID+SL31 1) - Set grounding on Slot 3, Input 1 to single-ended. (GID+SL16 ?) - Returns the current grounding method of Slot 1, Input 6.	

(GIO) GENERAL PURPOSE INPUT/OUTPUT	
CONTROL GROUP: Config SUBCLASS: Power Down ACCESS LEVEL: Advanced	
DESCRIPTION Control or monitor the state of the General Purpose Inputs and Outputs. The strings have one character for each hardware connector pin, and from left to right, correspond to the pin numbers 2,3,4,6,7,8,9. (Pin 1 is 12V and Pin 5 is Ground - they cannot be read, set or configured). A low state (or value of 0) will be read on an Input pin if the circuit attached to the pin is open. A high state (or value of 1) will be read on an Input pin if the circuit attached to the pin is shorted to ground. This corresponds to a switch closing event.	
SUBCODE CNFG	DESCRIPTION OF USE Set the Direction for the individual pins to Inputs or outputs.
STAT	Get the state of all Inputs, or set the state of all outputs.
EXAMPLES: (GIO+STAT?) - Get status of all the Inputs. Returns (GIO+STAT!"0000000") - All Inputs are low. (GIO+STAT "1x01000") - Set status of the GPOs - 2 high, 3 no change, 4 Low, 6 High, 7 Low, 8 Low, 9 Low. (GIO+STAT "hxxlxxx" 500) - Set status of the GPOs - 2 Pulse high, 6 Pulse Low. Use interval of 500 ms for each. (GIO+CNFG "IIOOOIO") - Set pins 2, 3 and 8 to Input, 4, 6, 7 and 9 to Output.	

(GMS) VDIC GROUPED-INPUTS MODE	
CONTROL GROUP: Option SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Allows users to select a mode to group the last 3 BNC connectors (Input 4/5/6) on a Video Decoder Input Card. valid options are: 0 = 3 CVBS sources 1 = 1 SVideo Source + 1 CVBS source 2 = 1 YPrPb (Component) source	
SUBCODE SLx0	DESCRIPTION OF USE Set a grouping mode for the last 3 BNC connectors on Video Decoder card in the selected Slot.
EXAMPLES: (GMS+SL10 0) - Use 3 BNC connectors for CVBS source. (GMS+SL10 1) - Use 3 BNC connectors for 1 SVideo and 1 CVBS sources. (GMS+SL10 2) - Use 3 BNC connectors for 1 YPbPr(component) source. (GMS+SL10 ?) - Get the current mode setting.	

(GNB) GREEN BLACK LEVEL	
CONTROL GROUP: Input SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Green black level is used to compensate for relative variations in the black levels between Red, Green and Blue. This is available on all cards except the Video decoder. The correct setting achieves maximum contrast without crushing white or black. When the drive and black level controls are set correctly for a signal, the Comprehensive Color Adjustment, including color temperature, will work as expected. The drive and black level controls should not be used to setup a specific color temperature as this will require separate color temperature adjustments to be made for each signal.	
SUBCODE INxy	DESCRIPTION OF USE Set the green black level on Slot x, Input y to the specified value in the range of -255 to 255.
MAIN	Set the green black level on the main video to the specified value in the range -255 to 255.
PIIP	Set the green black level on the PIP video to the specified value in the range of -255 to 255.
EXAMPLES: (GNB 128) - Set green black level to 128 on Main video. (GNB+MAIN 128) - Set green black level to 128 on Main video. (GNB+PIIP 100) - Set green black level to 100 on PIP video. (GNB+IN32 100) - Set green black level to 100 on Slot 3, Input 2. (GNB?) - Returns the current green black level value on Main video. (GNB+PIIP ?) - Returns the current green black level value on PIP video. (GNB+IN12 ?) - Returns the current green black level value on Slot 1, Input 2.	

(GND) GREEN DRIVE	
CONTROL GROUP: Input SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION The green drive level is used to compensate for different amounts of attenuation between the Red, Green and Blue in the signal. Available on all cards except the Video decoder. The correct setting achieves maximum contrast without crushing white or black. When the drive and black level controls are set correctly for a signal, the Comprehensive Color Adjustment, including color temperature, will work as expected. The drive and black level controls should not be used to setup a specific color temperature as this will require separate color temperature adjustments to be made for each source.	
SUBCODE IN _{xy}	DESCRIPTION OF USE Set the green drive on Slot x, Input y to the specified value in the range of -255 to 255.
MAIN	Set the green drive on the main video to the specified value in the range -255 to 255.
PIIP	Set the green drive on the PIP video to the specified value in the range of -255 to 255.
EXAMPLES: (GND 128) - Set green drive to 128 on Main video. (GND+MAIN 128) - Set green drive to 128 on Main video. (GND+PIIP 100) - Set green drive to 100 on PIP video. (GND+IN32 100) - Set green drive to 100 on Slot 3, Input 2. (GND?) - Returns the current green drive value on Main video. (GND+PIIP?) - Returns the current green drive value on PIP video. (GND+IN12?) - Returns the current green drive value on Slot 1, Input 2.	

(GOG) GREEN ODD PIXEL GAIN	
CONTROL GROUP: Option SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Adds an offset to Input green gain settings on the analog Input card. It is used to compensate for differences between the A to D converter used to sample even pixels, and the one used for odd pixels. A value of 0 is the null position in which both A to D converters are set to exactly the same value.	
SUBCODE SL _{x0}	DESCRIPTION OF USE Set a green gain offset for the second A to D.
EXAMPLE: (GOG+SL10 -10) - Set a green gain offset to -10 on Slot 1.	

(GOO) GREEN ODD PIXEL OFFSET	
CONTROL GROUP: Option SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Adds an offset to Input green black level settings on the analog Input card. It is used to compensate for differences between the A to D converter used to sample even pixels, and the one used for odd pixels. A value of 0 is the null position in which both A to D converters are set to exactly the same value.	
SUBCODE SLx0	DESCRIPTION OF USE Set a green black level offset for the second A to D.
EXAMPLE: (GOO+SL10 -10) - Set a green black level offset to -10 on Slot 1.	

(HDC) DHDC DUAL-LINK CONFIGURATION	
CONTROL GROUP: Option SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Select whether to use the 2 Inputs as separate Inputs, or combined as a dual-link. Select 'Automatic' to let the card decide, based on the Input signal. If the card cannot determine this, it will assume 2 single links. Valid values are: 0 = Automatic 1 = 2 Single Links 2 = Dual Link	
SUBCODE SLx0	DESCRIPTION OF USE Set a single/dual-link mode for the DHDIC.
EXAMPLES: (HDC+SL10 0) - Use Automatic detection for DHDIC on Slot 1. (HDC+SL40 1) - Use 2 Single Links for DHDIC on Slot 4. (HDC+SL10 2) - Use Dual-link for DHDIC on Slot 1. (HDC+SL10 ?) - Get the current dual-link mode for DHDIC on Slot 1.	

(HLP) SERIAL HELP	
CONTROL GROUP: Unsaved SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Query a list of all available serial commands, with brief descriptions and current enabled states.	
SUBCODE <No Subcode >	DESCRIPTION OF USE Request entire command Help listing, or list for a single command.
EXAMPLES: (HLP?) - Retrieve entire command Help listing. (HLP? "BRT") - Retrieve all subcodes/descriptions/enables for BRT control.	

(HLT) PROJECTOR HEALTH	
CONTROL GROUP: Unsaved SUBCLASS: Power Down ACCESS LEVEL: Operator	
<p>DESCRIPTION</p> <p>Any system health errors are placed on the troubleshooting queue. The queue, which contains the problems and a suggested solution for each one, is read-only. All problems in the queue are read using their index number, which starts from 0.</p> <p>Problems are assigned priorities:</p> <p>1 = Critical - Will result in failure to operate or shutdown</p> <p>2 = High - Will result in significant loss of functionality but the projector may continue to run</p> <p>3 = Low - Will result in minor loss of functionality which will not seriously affect projector</p>	
SUBCODE	DESCRIPTION OF USE
LSOL	List solutions.
LALL	List one or all problems and solutions.
<p>EXAMPLES:</p> <p>(HLT?) - Returns all queued problems.</p> <p>(HLT? 3) - Returns problem index 3 in the queue.</p> <p>(HLT+LSOL? 4) - Returns the solution hint for problem index 4 in the queue.</p> <p>(HLT+LALL?) - Returns all queued problems and their solutions.</p> <p>(HLT+LALL? 3) - Returns problem index 3 and its' solution.</p>	

(HOR) HORIZONTAL POSITION	
CONTROL GROUP: Input SUBCLASS: Power Down ACCESS LEVEL: Operator	
<p>DESCRIPTION</p> <p>Move the horizontal position of the image left or right.</p>	
SUBCODE	DESCRIPTION OF USE
MAIN	Set the horizontal position for the main image.
<p>EXAMPLES:</p> <p>(HOR 500) - Set horizontal position to 500 on main video.</p> <p>(HOR+MAIN 500) - Set horizontal position to 500 on main video.</p> <p>(HOR+IN32 500) - Set horizontal position to 500 on Slot 3, Input 2.</p> <p>(HOR?) - Returns the horizontal position value on main video.</p>	

(INM) CHANNEL 'IN MENU'	
CONTROL GROUP: Channel SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Determine whether the channel should be visible in the Channel List, which is available by pressing the 'Channel' key on the remote's keypad.	
SUBCODE C0xx	DESCRIPTION OF USE Toggle In Menu for channel (xx=channel number from 01 to 99).
MAIN	Toggle In Menu for the channel being used by main.
PIIP	Toggle In Menu for the channel being used by PIP.
EXAMPLES: (INM?) - Get channel in-menu state for channel used by main. (INM+MAIN?) - Get channel in-menu state for channel used by main. (INM+PIIP?) - Get channel in-menu state for channel used by PIP. (INM 1) - Show in-menu for the channel being used by main. (INM+PIIP 1) - Show in-menu for the channel being used by PIP. (INM+MAIN 0) - Hide in-menu for the channel being used by main. (INM+C001 0) - Hide in-menu for channel 1.	

(ITG) TEST PATTERN GREY	
CONTROL GROUP: Unsaved SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Specify the grey level to use for the 'Grey' flat field internal test pattern. Range 0-1023. The level defaults to 512 on power up. This command is on available while the grey test pattern is being displayed.	
SUBCODE <No Subcode >	DESCRIPTION OF USE
EXAMPLE: (ITG 512) - Set test pattern grey to mid point.	

(ITP) INTERNAL TEST PATTERN																
CONTROL GROUP: Unsaved SUBCLASS: Power Up ACCESS LEVEL: Operator																
DESCRIPTION Puts a test pattern on the screen or queries the test pattern currently displayed. Select which test pattern to display from the list: <table style="width: 100%; border: none;"> <tr> <td style="width: 33%;">0 = Off</td> <td style="width: 33%;">4 = Flat Grey</td> <td style="width: 33%;">8 = Color Bars</td> </tr> <tr> <td>1 = Grid</td> <td>5 = Black</td> <td>11 = Aspect Ratio</td> </tr> <tr> <td>2 = Grey</td> <td>6 = Checker</td> <td>12 = Edge Blend</td> </tr> <tr> <td>Scale 16</td> <td>7 = 13 Point</td> <td>14 = Boresight</td> </tr> <tr> <td>3 = White</td> <td></td> <td></td> </tr> </table>		0 = Off	4 = Flat Grey	8 = Color Bars	1 = Grid	5 = Black	11 = Aspect Ratio	2 = Grey	6 = Checker	12 = Edge Blend	Scale 16	7 = 13 Point	14 = Boresight	3 = White		
0 = Off	4 = Flat Grey	8 = Color Bars														
1 = Grid	5 = Black	11 = Aspect Ratio														
2 = Grey	6 = Checker	12 = Edge Blend														
Scale 16	7 = 13 Point	14 = Boresight														
3 = White																
SUBCODE <No Subcode >	DESCRIPTION OF USE Enable, disable or change standard test patterns.															
EXAMPLE: (ITP 0) - Disable test patterns - revert to previous Input signal. (ITP 1) - Set test pattern to the grid pattern.																

(KCO) KEYSTONE CURSOR OFFSET	
CONTROL GROUP: Preference SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION This control offsets the 2D Keystone cursors from the edge of the image to allow manipulation of keystone on an overshoot display.	
SUBCODE KCOT	DESCRIPTION OF USE Adjusts top offset.
KCOB	Adjusts bottom offset.
KCOL	Adjusts left offset.
KCOR	Adjusts right offset.
EXAMPLES: (KCO+KCOT 25) - Offsets the cursor by 25 pixels from the top edge. (KCO+KCOB?) - Returns the offset value in pixels from the bottom edge.	

(KEN) KEYPAD IR SENSOR DISABLE	
CONTROL GROUP: Preference SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Enable or disable the IR or wired keypad sensors. You cannot disable the keypad that is currently being used.	
SUBCODE FRNT	DESCRIPTION OF USE Set to 1 to enable the front IR keypad sensor, 0 to disable.
WIRE	Set to 1 to enable the wired keypad jack, 0 to disable.
EXAMPLES: (KEN+FRNT 0) - Disable front IR sensor. (KEN+WIRE?) - Get current wired jack enabled state.	

(KEY) KEY CODE EMULATION	
CONTROL GROUP: Unsaved SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Use Key Codes to emulate button presses on the IR or wired keypads.	
SUBCODE <No Subcode >	DESCRIPTION OF USE
EXAMPLES: (KEY 46) - Send the Power key (Down/press). (KEY 174) - Send the Power key (Up/release). (KEY?) - View the last emulated key that was sent.	

(LBL) LEFT BLANKING	
CONTROL GROUP: Input SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Set the number of lines to blank (turn to black) at the left of the image. This can be used to blank out any unwanted data near the left edge of the image. A positive amount of blanking makes the image smaller. A negative amount of blanking makes the image larger. Negative blanking is only applicable to analog signals, when the auto setup has not been able to set the image size correctly. It is preferable not to use negative blanking, but to run auto setup again, ensuring that the content has active pixels on each edge of the image. The maximum amount of left blanking allowed is half the image width minus 10. For negative blanking, the image size can only be increased to the limit of the sync.	

(LBL) LEFT BLANKING <i>(Cont'd)</i>	
SUBCODE	DESCRIPTION OF USE
INxy	Set the left blanking for Slot x, Input y.
MAIN	Set the left blanking for the Main image.
PIIP	Set the left blanking for the PIP image.
EXAMPLES: (LBL 40) - Set left blanking to 40 on Main video. (LBL+MAIN 40) - Set left blanking to 40 on main video. (LBL+PIIP 40) - Set left blanking to 40 on PIP video. (LBL+IN32 40) - Set left blanking to 40 on Slot 3, Input 2. (LBL?) - Returns the left blanking value on main video. (LBL+PIIP?) - Returns the left blanking value on PIP video. (LBL+IN12?) - Returns the left blanking value on Slot 1, Input 2.	

(LDT) LEVEL DETECTOR		
CONTROL GROUP: Unsaved	SUBCLASS: Power Up	ACCESS LEVEL: Operator
DESCRIPTION This Level Detector control changes the gamma table settings to make it easy for the user to adjust the Input levels. It causes the data to be processed so that all levels below a specified value are set to black (0) and all above and including it are set to white (1024). This control takes place before the scaler/deinterlacer.		
SUBCODE	DESCRIPTION OF USE	
<No Subcode >		
EXAMPLES: (LDT 1) - Turn on level detector. (LDT 0) - Turn off level detector.		

(LDV) LEVEL DETECTOR VALUE		
CONTROL GROUP: Unsaved	SUBCLASS: Power Up	ACCESS LEVEL: Operator
DESCRIPTION The Level Value control specifies the value to be used by the level detector. The range is 1-1023. This control takes place before the scaler/deinterlacer.		
SUBCODE	DESCRIPTION OF USE	
<No Subcode >		
EXAMPLE: (LDV 500) - Set level detector to 500. All data greater than or equal to 500 will be shown in the image.		

(LOC) LOCAL SETTINGS	
CONTROL GROUP: Preference SUBCLASS: Power Down ACCESS LEVEL: Advanced	
DESCRIPTION Set the localization options such as language and display options for temperature units.	
SUBCODE LANG	DESCRIPTION OF USE Set the system language: 0 - English 4 - Italian 1 - French 5 - Chinese 2 - German 6 - Japanese 3 - Spanish 7 - Korean
TEMP	Set the temperature units: 0 - Celsius 1 - Fahrenheit
EXAMPLES: (LOC+LANG 1) - Set language to French. (LOC+LANG ?) - Get language. (LOC+TEMP 1) - Set temperature to Fahrenheit.	

(LSH) LOGICAL SHUTTER	
CONTROL GROUP: Unsaved SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Turns OFF the LEDs in the projector to simulate a shutter operation. Additionally a white shutter mode is available which allows users to correct a setting which renders the display unusable: for example when no visible light is shown in IR modes.	
SUBCODE <No Subcode >	DESCRIPTION OF USE 0 Normal projection mode 1 Black (turns OFF light) 2 White (correction display)
EXAMPLES: (LSH 1) - Turn OFF the LEDs (LSH ?) - Report current logical shutter setting	

(MCS) MENU CASCADING ENABLE	
CONTROL GROUP: Preference SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Enable or disable cascading menus. When disabled, a single menu level will be displayed at a time.	
SUBCODE <No Subcode >	DESCRIPTION OF USE Enable or disable cascading.
EXAMPLES: (MCS ?) - Get the current state of this setting. (MCS 0) - Disable cascading menus. (MCS 1) - Enable cascading menus.	

(MDE) SERIAL MODE	
CONTROL GROUP: Preference SUBCLASS: Power Down ACCESS LEVEL: Advance	
DESCRIPTION Set the mode for a serial communications port. Settings such as bits, parity and stop bits are grouped together into one selection.	
SUBCODE PRTA	DESCRIPTION OF USE Set the mode on port A (RS-232 In).
PRTB	Set the mode on port B (RS-232 Out).
PRTC	Set the mode on port C (RS-422).
EXAMPLES: (MDE+PRTA 0) - Set mode on port A to 8-bit, no parity, 1 stop bit. (MDE+PRTA 1) - Set mode on port A to 7-bit, even parity, 1 stop bit. (MDE+PRTA 2) - Set mode on port A to 7-bit, odd parity, 1 stop bit. (MDE+PRTA?) - Get mode (MDE+PRTA!000 "8N1").	

(MFT) MENU FONT	
CONTROL GROUP: Preference SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Set the font size used by OSD.	
SUBCODE <No Subcode >	DESCRIPTION OF USE View/Set Choose large font or small font as the font used by OSD.
EXAMPLES: (MFT ?) - Get current font option used by the OSD. 0 is small font, 1 is large font. (MFT 1) - Use large font as the OSD font.	

(MLK) CHANNEL MEMORY LOCK	
CONTROL GROUP: Channel SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Lock a channel from being edited.	
SUBCODE C0xx	DESCRIPTION OF USE Lock channel (xx=channel number from 01 to 99).
MAIN	Lock the channel being used by main.
PIIP	Lock the channel being used by PIP.
EXAMPLES: (MLK?) - get channel locked state for channel used by main. (MLK+MAIN?) - Get channel locked state for channel used by main. (MLK+PIIP?) - Get channel locked state for channel used by PIP. (MLK 1) - Lock the channel being used by main. (MLK+PIIP 1) - Lock the channel being used by PIP. (MLK+MAIN 0) - Unlock the channel being used by main. (MLK+C001 0) - Unlock channel 1.	

(MNR) MOSQUITO NOISE REDUCTION	
CONTROL GROUP: Input SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Mosquito Noise Reduction (MNR) dynamically adapts to image content, effectively reducing mosquito artifacts around sharp edges in DCT based compression.	
SUBCODE INxy	DESCRIPTION OF USE Set the mosquito noise reduction for Slot x, Input y.
MAIN	Set the mosquito noise reduction for main video.
PIIP/SECD	Set the mosquito noise reduction for PIP video.
EXAMPLE: (MNR 32) - Set the mosquito noise reduction to mid point for main video.	

(MNU) MENU SETTINGS AND CONFIGURATION	
CONTROL GROUP: Preference SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Set menu type, view OSD state, read menu structure.	
SUBCODE <No Subcode >	DESCRIPTION OF USE View/change the current state of the OSD (0=presentation, 1=main).
EXAMPLE: (MNU?)(MNU!000)	

(MSH) MENU SHIFT HORIZONTAL	
CONTROL GROUP: Preference SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Change the horizontal position of the main menu. If the position is not from one of the preset positions, MSP will be changed to Custom.	
SUBCODE <No Subcode >	DESCRIPTION OF USE View/set the horizontal position of the main menu.
EXAMPLES: (MSH ?) - Get current horizontal position of main menu. (MSH 50) - Set main menu horizontal position to 50 pixels from left edge.	

(MSP) MENU LOCATION	
CONTROL GROUP: Preference SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Set the default menu position on the screen. Valid options are: 0 = 4:3 TopLeft 1 = 4:3 Inset 1 2 = 4:3 Inset 2 3 = 16:9 TopLeft 4 = 16:9 Inset 1 5 = 16:9 Inset 2 6 = Center	
SUBCODE <No Subcode >	DESCRIPTION OF USE View/set the preset menu position.
EXAMPLES: (MSP ?) Get current menu position preset. (MSP 0) Set main menu position to 4:3 TopLeft, the top left corner of screen. (MSP 6) Set menu position to the center of the screen.	

(NAM) CHANNEL NAME	
CONTROL GROUP: Channel SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Channel Name is optional text assigned to a channel and can appear in the Channel Setup menu, Channel Edit menu, the channel list and the Status menu.	
SUBCODE C0xx	DESCRIPTION OF USE Set the channel name for the channel (xx=channel number from 01 to 99).

(NAM) CHANNEL NAME <i>(Cont'd)</i>	
MAIN	Set the channel name for the channel being used by main.
PIIP	Set the channel name for the channel being used by PIP.
EXAMPLES: (NAM?) - Get current active channel name for main video. (NAM+MAIN?) - Get channel name being used by main. (NAM+PIIP?) - Get channel name being used by PIP. (NAM "Test") - Set channel name being used by main to 'Test'. (NAM+PIIP "Test") - Set channel name being used by PIP to 'Test'. (NAM+MAIN "Test") - Set channel name being used by main to 'Test'. (NAM+C001 "Test") - Set channel name for channel 1 to 'Test.'	

(NET) NETWORK SETUP	
CONTROL GROUP: Config/Preference SUBCLASS: Power Down ACCESS LEVEL: Admin	
DESCRIPTION Set or request the network setup for this device.	
SUBCODE	DESCRIPTION OF USE
DOMA	Set the domain name
ETH0	Set the IP address for the first ethernet controller.
GATE	Set the network gateway.
HOST	Set the host name.
MAC0	Gets the MAC address of the first ethernet controller.
PORT	Set the PORT number.
SUB0	Set the network subnet mask for the first ethernet controller.
EXAMPLES: (NET+ETH0 "192.168.1.35") - Set new IP address on the first ethernet controller. (NET+GATE "192.168.0.1") - Set the gateway. (NET+SUB0 "255.255.255.0") - Set the subnet mask on the first ethernet controller. (NET+HOST "MyHostName") - Set the host name. (NET+DOMA "MyDomainName") - Set the domain name. (NET+ETH0 ?) - Get IP address from first controller. (NET+ETH0! "192.168.1.35"). (NET+ETH1 ?) - Get IP address from second controller. (NET+ETH1! "192.168.1.36"). (NET+MAC0 ?) - Get MAC address from first controller. (NET+MAC0! "00:12:3F:7B:76:B4"). (NET+GATE ?) - Get default gateway. (NET+GATE! "192.168.0.1"). (NET+PORT 3002) - Set the Port number. (NET+PORT ?) - Get the Port number. (NET+PORT! 3002).	

(NRB) BLOCK ARTIFACT REDUCTION	
CONTROL GROUP: Input SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Block Artifact Reduction (BAR) locates and reduces block edges produced by discrete cosine transform (DCT) based compression processing.	
SUBCODE	DESCRIPTION OF USE
INxy	Set the BAR for Slot x, Input y.
MAIN	Set the BAR for main video.
PIIP	Set the BAR for PIP video.
EXAMPLE: (NRB 32) - Set the BAR to mid point for main video.	

(NRD) GENERAL NOISE REDUCTION	
CONTROL GROUP: Input SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Adaptive general noise reduction selects a filter sensitivity to noise. A higher value may improve noisy sources, although it will soften the image.	
SUBCODE	DESCRIPTION OF USE
INxy	Set the noise reduction for Slot x, Input y.
MAIN	Set the noise reduction for main video.
PIIP	Set the noise reduction for PIP video.
EXAMPLE: (NRD 32) - Set the noise reduction to mid point for main video.	

(NTR) NETWORK ROUTING	
CONTROL GROUP: Preference SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Set routing for ASCII messages.	
SUBCODE <No Subcode >	DESCRIPTION OF USE Used to enable or disable daisy chaining. 0 = RS-232, RS-422 & Ethernet communications are all separate from one another 1 = RS-422 port(s) is/are connected to the RS-232 network 2 = The Ethernet port is connected to the RS-232 network 3 = RS-232, RS-422 & Ethernet are all connected to each other
EXAMPLES: (NTR?L) - List routing options. (NTR 0) - Set routing so that each connection is routed separately. (NTR 3) - Set routing to full daisy-chaining.	

(OPP) ODD PIXEL PHASE	
CONTROL GROUP: Option SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Adds an offset to the pixel phase setting on this card. It is used to compensate for differences between the A to D converter used to sample even pixels, and the one used for odd pixels. A value of 0 is the null position in which both A and D converters are set to exactly the same value.	
SUBCODE SLx0	DESCRIPTION OF USE Set a pixel phase offset for the second A to D.
EXAMPLES: (OPP+SL10 -1) - Set a pixel phase offset to -1 on Slot 1.	

(OSD) ON SCREEN DISPLAY	
CONTROL GROUP: Unsaved SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Display or Hide the OSD screen.	
SUBCODE <No Subcode >	DESCRIPTION OF USE Turn ON/OFF OSD display.
EXAMPLES: (OSD ?) - Get current state of OSD. 0 when OSD is hidden, 1 when OSD is displayed. (OSD 0) - Turn OFF OSD display. The OSD will run in the background, even though it is not visible.	

(OST) OSD TRANSPARENCY	
CONTROL GROUP: Preference SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Enable or Disable on screen display transparency.	
SUBCODE <No Subcode >	DESCRIPTION OF USE Enable/Disable OSD transparency.
EXAMPLE: (OST 1) - Enable OSD transparency.	

(PBC) PIP BORDER COLOR																			
CONTROL GROUP: Preference SUBCLASS: Power Up ACCESS LEVEL: Operator																			
DESCRIPTION This control lets you choose the color of the optional border around the picture-in-picture (PIP) image. The border can be disabled by setting the border width PBW to zero. Valid options are:																			
<table style="width: 100%; border: none;"> <tr> <td style="width: 33%;">0 = Black</td> <td style="width: 33%;">5 = Dark Magenta</td> <td style="width: 33%;">10 = Green</td> </tr> <tr> <td>1 = Dark Red</td> <td>6 = Dark Yellow</td> <td>11 = Blue</td> </tr> <tr> <td>2 = Dark Green</td> <td>7 = Dark Grey</td> <td>12 = Cyan</td> </tr> <tr> <td>3 = Dark Blue</td> <td>8 = Light Grey</td> <td>13 = Magenta</td> </tr> <tr> <td>4 = Dark Cyan</td> <td>9 = Red</td> <td>14 = Yellow</td> </tr> <tr> <td></td> <td></td> <td>15 = White</td> </tr> </table>		0 = Black	5 = Dark Magenta	10 = Green	1 = Dark Red	6 = Dark Yellow	11 = Blue	2 = Dark Green	7 = Dark Grey	12 = Cyan	3 = Dark Blue	8 = Light Grey	13 = Magenta	4 = Dark Cyan	9 = Red	14 = Yellow			15 = White
0 = Black	5 = Dark Magenta	10 = Green																	
1 = Dark Red	6 = Dark Yellow	11 = Blue																	
2 = Dark Green	7 = Dark Grey	12 = Cyan																	
3 = Dark Blue	8 = Light Grey	13 = Magenta																	
4 = Dark Cyan	9 = Red	14 = Yellow																	
		15 = White																	
SUBCODE <No Subcode >	DESCRIPTION OF USE																		
EXAMPLE: (PBC 0) - Select black PIP border.																			

(PBW) PIP BORDER WIDTH	
CONTROL GROUP: Preference SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Selects whether a border should be placed around the PIP window. Setting the width to zero (0) will remove the border. Setting it to 1 will enable the border.	
SUBCODE <No Subcode >	DESCRIPTION OF USE
EXAMPLE: (PBW 10) - Select PIP border width of 10.	

(PDT) PEAK DETECTOR	
CONTROL GROUP: Unsaved SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Enables or disables the peak detector test mode. This is used to aid in setup of Input levels. For each color, pixel values very near black will be displayed black, pixel values very near peak level will be displayed full on. All others will be displayed in mid-level grey. Input levels for each color should be adjusted so that black pixels in the image just turn black, and full on pixels just turn full ON. When adjustment is completed this control should be disabled to allow display of all grey levels. This control takes place before the scaler/deinterlacer.	
SUBCODE <No Subcode >	DESCRIPTION OF USE
EXAMPLES: (PDT 1) - Turn ON peak detector. (PDT 0) - Turn OFF peak detector.	

(PHP) PIP HORIZONTAL POSITION	
CONTROL GROUP: Preference SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Sets the horizontal position of the PIP window. Specifies where to place the center of the PIP window horizontally on the panel in pixels.	
SUBCODE <No Subcode >	DESCRIPTION OF USE
EXAMPLES: (PHP 100) - Set PIP horizontal position to 100 pixels. (PHP?) - Get PIP horizontal position ((PHP!100), for example).	

(PHS) PIP HORIZONTAL SIZE	
CONTROL GROUP: Preference SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Sets the size (width) of the PIP window in pixels. The active portion of the Input signal, as determined by blanking controls, will be scaled to fit into the PIP window. The height of the PIP window will be set to maintain the aspect ratio of the image being captured, as determined by the vertical stretch control.	
SUBCODE <No Subcode >	DESCRIPTION OF USE
EXAMPLES: (PHS 100) - Set PIP size to 100 pixels. (PHS?) - Get PIP size ((PHS!100), for example).	

(PIP) PICTURE IN PICTURE	
CONTROL GROUP: Preference SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION This control enables or disables 'Picture in Picture' (PIP) mode, or 'Picture by Picture' (PBP) mode. PIP and image transition effects (seamless switching) both require resources to configure a second image processing path. Therefore these two features cannot be active at the same time.	
SUBCODE <No Subcode >	DESCRIPTION OF USE 0 = Disables PIP. 1 = Enables PIP. 2 = Enables PBP.
EXAMPLES: (PIP 0) - Disables PIP video. (PIP 1) - Enables PIP video. (PIP 2) - Enables PBP video (picture-by-picture). (PIP ?) - Returns the state of the PIP control. i.e. (PIP! 1) - PIP enabled.	

(PJH) PROJECTOR HOURS	
CONTROL GROUP: Unsaved SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Reports the number of hours elapsed on the projector. This control is read-only.	
SUBCODE <No Subcode >	DESCRIPTION OF USE
EXAMPLE: (PJH ?) - Returns hours elapsed on projector.	

(PNG) PING	
CONTROL GROUP: Configuration SUBCLASS: Power Down ACCESS LEVEL: Status	
DESCRIPTION This command returns basic projector information to the user which includes the type of device & main software version. Note that some devices have multiple CPUs each with its own software version. Only the software version of what is considered to be the master CPU, is returned here. The return parameters are: Type, Major, Minor, Beta. The beta value is optional meaning it is an engineering build and has not been validated.	
NOTE: List of devices: 40 = ACT, 41 = Cinema, 42 = CinemaMini, 43 = Media Block, 44 = Mobius, 45 = Entero/StIM.	
SUBCODE <No Subcode >	DESCRIPTION OF USE
EXAMPLE: (PNG?) - (PNG!41 001 000 234) Indicates 'Cinema' type, software: 1 major, 0 minor, 234 beta.	

(PPA) POSITION PRESET ASPECT	
CONTROL GROUP: Preference SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION When enabled, this control ensures that during auto setup for any source, its aspect ratio is maintained when its default size is calculated. This is similar to cases where a stretch is defined for a source in the lookup table. If disabled and no stretch is defined, the source is scaled to fit the screen.	
SUBCODE <No Subcode >	DESCRIPTION OF USE This command accepts either 0 or 1. 0 = disables maintain aspect, 1 = enables maintain aspect.
EXAMPLES: (PPA 0) - Disables maintain aspect during auto setup. (PPA 1) - Enables maintain aspect during auto setup.	

(PPP) PIP POSITION PRESET	
CONTROL GROUP: Preference SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Choose a preset location and size for the PIP window. The Location settings will adjust the size and position of the window. Blanking will not be affected. While in split screen mode, several channel controls that resize image will be disabled. These controls are size, H-Position and V-Position. Valid values are: 0 = Top Right 1 = Top Left 2 = Bottom Left 3 = Bottom Right	
SUBCODE <No Subcode >	DESCRIPTION OF USE
EXAMPLE: (PPP 0) - Select top right preset position.	

(PPS) PIP SWAP	
CONTROL GROUP: Preference SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION This control swaps the current main and PIP Inputs. It will swap the Inputs regardless if there are valid signals on either of the Inputs.	
SUBCODE <No Subcode >	DESCRIPTION OF USE
EXAMPLE: (PPS) - Swap Inputs.	

(PRT) SERIAL PORT	
CONTROL GROUP: Preference SUBCLASS: Power Down ACCESS LEVEL: Status	
DESCRIPTION Gets the current serial port being used, or gets a list of serial ports available on the device.	
SUBCODE <No Subcode >	DESCRIPTION OF USE
EXAMPLES: (PRT ?) - Gets current serial port. (PRT ?L) - Gets list of ports.	

(PTL) SERIAL PROTOCOL	
CONTROL GROUP: Preference SUBCLASS: Power Down ACCESS LEVEL: Advanced	
DESCRIPTION Set the protocol for a serial communications port.	
SUBCODE PRTA	DESCRIPTION OF USE Set the protocol on port A (RS-232 In) pass through
PRTB	Set the protocol on port B (RS-232 Out).
PRTC	Set the protocol on port C (RS-422).
EXAMPLES: (PTL+PRTA 0) - Set protocol on port A to a Christie Digital serial protocol. (PTL+PRTA 1) - Set protocol on port A to a pass through raw data protocol. (PTL+PRTA?) - Get protocol (PTL+PRTA!000 "Christie Protocol").	

(PVP) PIP VERTICAL POSITION	
CONTROL GROUP: Preference SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Sets the vertical position of the PIP window. Specifies where to place the center of the PIP window vertically on the panel in pixels.	
SUBCODE <No Subcode >	DESCRIPTION OF USE
EXAMPLES: (PVP 100) - Set PIP vertical position to 100 pixels. (PVP?) - Get PIP vertical position (PVP!100).	

(PWR) POWER	
CONTROL GROUP: Unsaved SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Change the power state of the projector. Valid values are: 0 - Power-OFF 1 - Power-ON 10 - Cooldown lamp is cooling down, controlled by lamp (Read-only) 11 - Warmup lamp is warming up, controlled by lamp (Read-only)	
SUBCODE <No Subcode >	DESCRIPTION OF USE Get or Set the power state of the projector.
EXAMPLES: (PWR?) - Get projector power status. (PWR1) - Turn the lamp and all electrical power ON. (PWR0) - Set the projector to standby mode.	

(PXP) PIXEL PHASE	
CONTROL GROUP: Input SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Pixel Phase adjusts the phase of the pixel sampling clock relative to the incoming signal. This allows you to fine tune the sampling point within one pixel. Adjust the Pixel Phase when the image (usually from an RGB source) shows shimmer. NOTE: If the shimmer is concentrated in vertical bands with little or no shimmer between the bands, then it is likely that Pixel Tracking needs adjustment. Pixel Tracking must be set correctly before adjusting Pixel Phase. Pixel Phase can only be set on Analog Input cards. The range is 0-31.	
SUBCODE IN _{xy}	DESCRIPTION OF USE Set the pixel phase for Slot x, Input y.
MAIN	Set the pixel phase for the main image.
PIIP	Set the pixel phase for the PIP image.
EXAMPLES: (PXP 16) - Set pixel phase to 16 on main video. (PXP+MAIN 16) - Set pixel phase to 16 on main video. (PXP+PIIP 16) - Set pixel phase to 16 on PIP video. (PXP+IN32 16) - Set pixel phase to 16 on Slot 3, Input 2. (PXP?) - Returns the pixel phase value on main video. (PXP+PIIP?) - Returns the pixel phase value on PIP video. (PXP+IN12?) - Returns the pixel phase value on Slot 1, Input 2.	

(PXT) PIXEL TRACKING	
CONTROL GROUP: Input SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Pixel Tracking adjusts the position of the pixel sampling clock to match the Input signal. It can only be set on Analog Input cards. If adjusted incorrectly, flickering or vertical bars of noise appear across the image. Adjust Pixel Tracking so that the noise either disappears or fills the image. If it fills the image, use Pixel Phase to eliminate the noise. The range is 600-4095.	
SUBCODE	DESCRIPTION OF USE
INxy	Set the pixel tracking for Slot x, Input y.
MAIN	Set the pixel tracking for the main image.
PIIP	Set the pixel tracking for the PIP image.
EXAMPLES: (PXT 600) - Set pixel tracking to 600 on main video. (PXT+MAIN 600) - Set pixel tracking to 600 on main video. (PXT+PIIP 600) - Set pixel tracking to 600 on PIP video. (PXT+IN32 600) - Set pixel tracking to 600 on Slot 3, Input 2. (PXT?) - Returns the pixel tracking value on main video. (PXT+PIIP?) - Returns the pixel tracking value on PIP video. (PXT+IN12?) - Returns the pixel tracking value on Slot 1, Input 2.	

(RAL) REMOTE ACCESS LEVEL	
CONTROL GROUP: Preference SUBCLASS: Power Down ACCESS LEVEL: Admin	
DESCRIPTION Set the remote serial protocol access level for a serial communications port. NOTE: Valid selections are 0 - No Access, 1 - Login Required, 2 - Free Access Default value is 1 - Login required.	
SUBCODE	DESCRIPTION OF USE
<No Subcode >	Set the access level on Ethernet all ports.
PRTA	Set the access level on port A (RS-232 In).
PRTB	Set the access level on port B (RS-232 Out).
PRTC	Set the access level on port C (RS-422).
EXAMPLES: (RAL 0) - Disable remote serial protocol access level for all Ethernet ports. (RAL?) - Get access level for Ethernet ports (RAL!0). (RAL+PRTA 2) - Set remote serial protocol access level on port A (RS-232 In) to free access. (RAL+PRTA?) - Get access level (RAL+PRTA!2).	

(RBL) RIGHT BLANKING	
CONTROL GROUP: Input SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Set the number of lines to blank (turn to black) at the right of the image. This can be used to blank out any unwanted data near the right edge of the image. A positive amount of blanking makes the image smaller. A negative amount of blanking makes the image larger. Negative blanking is only applicable to analog signals, when the auto setup has not been able to set the image size correctly. It is preferable not to use negative blanking, but to run auto setup again, ensuring that the content has active pixels on each edge of the image. The maximum amount of right blanking allowed is half the image width minus 10. For negative blanking, the image size can only be increased to the limit of the sync.	
SUBCODE	DESCRIPTION OF USE
INxy	Set the right blanking for Slot x, Input y.
MAIN	Set the right blanking for the main image.
PIIP	Set the right blanking for the PIP image.
EXAMPLES: (RBL 40) - Set right blanking to 40 on main video. (RBL+MAIN 40) - Set right blanking to 40 on main video. (RBL+PIIP 40) - Set right blanking to 40 on PIP video. (RBL+IN32 40) - Set right blanking to 40 on Slot 3, Input 2. (RBL?) - Returns the right blanking value on main video. (RBL+PIIP?) - Returns the right blanking value on PIP video. (RBL+IN12?) - Returns the right blanking value on Slot 1, Input 2.	

(RDB) RED BLACK LEVEL	
CONTROL GROUP: Input SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Red black level is used to compensate for relative variations in the black levels between Red, Green and Blue. Available on all cards except the Video decoder. The correct setting is when the maximum contrast is achieved without crushing white or black. When the drive and black level controls are set correctly for a signal, the Comprehensive Color Adjustment, including color temperature, will work as expected. The drive and black level controls should not be used to setup a specific color temperature as this will require separate color temperature adjustments to be made for each signal.	
SUBCODE	DESCRIPTION OF USE
INxy	Set the red black level on Slot x, Input y to the specified value in the range of -255 to 255.

(RDB) RED BLACK LEVEL <i>(Cont'd)</i>	
MAIN	Set the red black level on the main video to the specified value in the range -255 to 255.
PIIP	Set the red black level on the PIP video to the specified value in the range of -255 to 255.
EXAMPLES: (RDB 128) - Set red black level to 128 on main video. (RDB+MAIN 128) - Set red black level to 128 on main video. (RDB+PIIP 100) - Set red black level to 100 on PIP video. (RDB+IN32 100) - Set red black level to 100 on Slot 3, Input 2. (RDB?) - Returns the current red black level value on main video. (RDB+PIIP ?) - Returns the current red black level value on PIP video. (RDB+IN12 ?) - Returns the current red black level value on Slot 1, Input 2.	

(RDD) RED DRIVE	
CONTROL GROUP: Input SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION The red drive level is used to compensate for different amounts of attenuation between the Red, Green and Blue in the signal. Available on all cards except the Video decoder. The correct setting achieves maximum contrast without crushing white or black. When the drive and black level controls are set correctly for a signal, the Comprehensive Color Adjustment, including color temperature, will work as expected. The drive and black level controls should not be used to setup a specific color temperature as this will require separate color temperature adjustments to be made for each source.	
SUBCODE	DESCRIPTION OF USE
IN _{xy}	Set the red drive on Slot x, Input y to the specified value in the range of -255 to 255.
MAIN	Set the red drive on the main video to the specified value in the range -255 to 255.
PIIP	Set the red drive on the PIP video to the specified value in the range of -255 to 255.
EXAMPLES: (RDD 128) - Set red drive to 128 on main video. (RDD+MAIN 128) - Set red drive to 128 on main video. (RDD+PIIP 100) - Set red drive to 100 on PIP video. (RDD+IN32 100) - Set red drive to 100 on Slot 3, Input 2. (RDD?) - Returns the current red drive value on main video. (RDD+PIIP ?) - Returns the current red drive value on PIP video. (RDD+IN12 ?) - Returns the current red drive value on Slot 1, Input 2.	

(RGB) ADVANCED COLOR SETTING	
CONTROL GROUP: Preference SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Adjusts native projector color space by adjusting the LED power levels. This can significantly increase brightness of unsaturated colors. These adjustments turn on multiple RGB LEDs simultaneously which uses more power and increases the possibility of over-heating	
SUBCODE	DESCRIPTION OF USE
CLRM	Color Mode. Selects: 1 = Native 4 = User preset 2 2 = EBU 5 = User preset 3 3 = User preset 1 6 = User preset 4
ROFR	Red part of red (0-255)
GOFR	Green part of red (0-255)
BOFR	Blue part of red (0-255)
ROFG	Red part of green (0-255)
GOFG	Green part of green (0-255)
BOFG	Blue part of green (0-255)
ROFB	Red part of blue (0-255)
GOFB	Green part of blue (0-255)
BOFB	Blue part of blue (0-255)
RGBB	Controls overall brightness of LEDs (0-1000) percentage with one decimal place
COPY	Copies color mode settings from an existing preset to the current preset. Values: 1 = Copy from Native 4 = Copy from User 2 2 = Copy from EBU 5 = Copy from User 3 3 = Copy from User 1 6 = Copy from User 4
EXAMPLE: (RGB+ROFR 128) - Set Red of Red value. (RGB+BOFB ?) - Get Blue of Blue value. (RGB+RBBB 500) - Set overall brightness to 50%. (RGB+CLRM 4) - Select user preset 2. (RGB+COPY 2) - Copy EBU preset values to current preset.	

(ROG) RED ODD PIXEL GAIN	
CONTROL GROUP: Option SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Adds an offset to Input red gain settings on the analog Input card. It is used to compensate for differences between the A to D converter used to sample even pixels, and the one used for odd pixels. A value of 0 is the null position in which both A to D converters are set to exactly the same value.	
SUBCODE SLx0	DESCRIPTION OF USE Set a red gain offset for the second A to D.
EXAMPLE: (ROG+SL10 -10) - Set a red gain offset to -10 on Slot 1.	

(ROO) RED ODD PIXEL OFFSET	
CONTROL GROUP: Option SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Adds an offset to Input red black level settings on the analog Input card. It is used to compensate for differences between the A to D converter used to sample even pixels, and the one used for odd pixels. A value of 0 is the null position in which both A to D converters are set to exactly the same value.	
SUBCODE SLx0	DESCRIPTION OF USE Set a red black level offset for the second A to D.
EXAMPLE: (ROO+SL10 -10) - Set a red gain offset to -10 on Slot 1.	

(RQR) RGB QUANTIZATION RANGE	
CONTROL GROUP: Input SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Select RGB quantization range, 0 = full(0~255), 1 = limited(16~235).	
SUBCODE INxy	DESCRIPTION OF USE Set the RGB quantization range for Slot x, Input y.
MAIN	Set the RGB quantization range for main video.
PIIP	Set the RGB quantization range for PIP video.
EXAMPLE: (RQR 1) - Set RGB quantization range to limited.	

(RTE) REAL TIME EVENTS
CONTROL GROUP: Unsaved **SUBCLASS:** Power Down **ACCESS LEVEL:** Operator

DESCRIPTION

Real time events allow custom user actions to occur based on a system trigger. There are various triggers in the system such as power up, channel change, errors, or based on time. Time can be absolute, (e.g. 12:00:00 on December 25, 2008) or relative (e.g. 5 hours and 30 minutes from now).

Special Function keys can also be used as a trigger. An example would be pressing FUNC+1 on the remote. Events can also be connected to external hardware triggers via the General Purpose IO port (GPIO).

EVENTS:
Single Occurrence Events:

(RTE T YYYY/MM/DD HH:MM:SS S "description" "command")

Daily Occurring Event:

(RTE T YYYY/MM/DD HH:MM:SS YYYY/MM/DD D R "description" "command")

Where the first date and time is the start date and occurrence time. The second date is the end date.

R is the "Repeat Every" interval i.e. repeat every R days

Weekly Occurring Event:

(RTE T YYYY/MM/DD HH:MM:SS YYYY/MM/DD W R "D" "description" "command")

Where the first date and time is the start date and occurrence time. The second date is the end date.

R is the "Repeat Every" interval i.e. repeat every R weeks

D is the weekday or weekdays that the command should run on:

M = Monday W = Wednesday F = Friday Su = Sunday

Tu = Tuesday Th = Thursday S = Saturday

I.E. "MT" will run on Monday and Tuesday "TTh" will run on Tuesday and Thursday "MTWFSSu" will run on Monday, Tuesday, Wednesday, Friday, Saturday, and Sunday

Monthly Occurring Event:

(RTE T YYYY/MM/DD HH:MM:SS YYYY/MM/DD M R "description" "command")

Where the first date and time is the start date and occurrence time. The second date is the end date.

R is the "Repeat Every" interval i.e. repeat on the same date every R months

NOTE: If there are not 31 days in the next run cycle month, the event will not run in that month.

Function Key Events:

(RTE F K "description" "command"), where K = the specific function key (1-5,7-9). Key 6 is reserved and cannot be used.

DMX Events:

(RTE M C "description" "command"), where C = channel (54-63)

System Events:

(RTE S E T "description" "command"), where E is the event to respond to:

(RTE) REAL TIME EVENTS (Cont'd)	
0 = Boot Up	2 = Any System Error
1 = Power ON/OFF	3 = Good Signal
T = 0 (Either a Power ON or OFF event)	4 = No Signal
T = 1 (Power ON only)	5 = Input Change
T = 2 (Power OFF only)	6 = Channel Change
	T = channel (where channel is 1-99)
GPIO Events:	
(RTE G "AAAAAAA" "description" "command")	
where A is GPIO Input for each pin:	
= X (don't care)	
= H (when pin is high) - See (GIO) General Purpose Input/Output on page D-31	
= L (when pin is low) - See (GIO) General Purpose Input/Output on page D-31	
Delete All Events:	
(RTE X *)	
Delete a single event:	
(RTE X A), where A is the event to be deleted (0-??)	
SUBCODE	DESCRIPTION OF USE
<No Subcode >	
EXAMPLE:	
Single Occurrence Events:	
(RTE T 2008/12/25 11:48:00 S "description" "(LSH 1)") - close the shutter at 11:48:00 on December 25, 2008	
(RTE T 2009/01/01 23:00:00 S "description" "(CHA 2)") - switch to channel 2 on January 1, 2009 at 23:00:00	
Daily Occurring Event:	
(RTE T 2009/01/01 23:00:00 2009/02/01 D 1 "description" "(PWR 1)") - power on the projector every day at 23:00:00, starting from January 1, 2009 until February 1, 2009	
(RTE T 2009/01/01 23:00:00 2009/02/01 D 2 "description" "(PWR 1)") - power on the projector every other day at 23:00:00, starting from January 1, 2009 until February 1, 2009	
(RTE T 2009/01/01 23:00:00 2009/02/01 D 5 "description" "(PWR 1)") - power on the projector every fifth day at 23:00:00, starting from January 1, 2009 until February 1, 2009	
Weekly Occurring Event:	
(RTE T 2009/01/01 23:00:00 2009/03/01 W 1 "SSu" "description" "(PWR 0)") - power off the projector every week, on Saturday and Sunday at 23:00:00, starting from January 1, 2009 until March 1, 2009 (inclusive)	
(RTE T 2009/01/01 23:00:00 2009/03/01 W 2 "MTWThF" "description" "(PWR 1)") - power on the projector every other week, on every weekday at 23:00:00, starting from January 1, 2009 until March 1, 2009 (inclusive)	
(RTE T 2009/01/01 23:00:00 2009/03/01 W 5 "MTWThF" "description" "(PWR 1)") - power on the projector every fifth week, on every weekday at 23:00:00, starting from January 1, 2009 until March 1, 2009 (inclusive)	

(RTE) REAL TIME EVENTS *(Cont'd)*
Monthly Occurring Event:

(RTE T 2009/01/1 23:00:00 2010/01/01 M 1 "description" "(PWR 0)") - power off the projector on the 1st day of every month at 23:00:00, starting January 1, 2009 until January 1, 2010 (inclusive)

(RTE T 2009/01/10 23:00:00 2010/01/01 M 12 "description" "(PWR 0)") - power off the projector on the 12th day of every 12 months at 23:00:00, starting January 12, 2009 until January 1, 2010 (inclusive)

(RTE T 2009/01/31 23:00:00 2010/01/01 M 2 "description" "(PWR 0)") - power off the projector every other month on day 31 starting January 31, 2009 until January 1, 2010 (inclusive)

Function Key Events:

(RTE F 1 "description" "(LSH 0)") - open the shutter if Func+1 is pressed on the remote

(RTE F 2 "description" "(LSH 1)") - close the shutter if Func+2 is pressed on the remote

DMX Events:

(RTE M 55 "description" "(LSH 0)") - open the shutter when the DMX channel 55 is moved into the range of 192-255

(RTE M 56 "description" "(LSH 1)") - close the shutter when the DMX channel 56 is moved into the range of 192-255

System Events:

(RTE S 1 1 "description" "(CLE 5)") - change color to cyan when system powers up

(RTE S 6 25 "description" "(LSH 1)") - close the shutter if channel 25 is selected

GPIO Events:

(RTE G "XXXXXXX" "description" "(PWR 1)") - turn ON the projector if we receive any GPIO Input

(RTE G "" "description" "(PWR 1)") - turn ON the projector if we receive any GPIO Input

(RTE G "XX" "description" "(PWR 1)") - turn ON the projector if we receive any GPIO Input

(RTE G "XXXXXLH" "description" "(PWR 0)") - turn OFF the projector if pin 6 is set to low and pin 7 is high

(RTE G "HH" "description" "(FRZ 0)") - freeze the image if pins 1 and 2 are set to high

(RTE G "XXHHXXH" "description" "(FRZ 0)") - freeze the image if pins 3,4,7 are set to high

(RTE G "LLHXX" "description" "(FRZ 0)") - freeze the image if pins 1,2 are set to Low and pin 3 is set to high

(RTE G "LLH" "description" "(FRZ 0)") - freeze the image if pins 1,2 are set to Low and pin 3 is set to high

(SIN) SELECT INPUT

CONTROL GROUP: Preference **SUBCLASS:** Power Down **ACCESS LEVEL:** Operator

DESCRIPTION

Select the active Input for the video in control (VIC). The VIC can be main or picture in picture (PIP). To specify a new Input routing, enter the number of the Slot followed by the Input. The projector will switch to that Input location and automatically select the channel best suited to the incoming signal. For example, 1 2 would indicate Slot 1 Input 2.

(SIN) SELECT INPUT <i>(Cont'd)</i>	
SUBCODE	DESCRIPTION OF USE
MAIN	Set the active Input for the main video.
PIIP	Set the active Input for the (picture in picture) PIP video.
EXAMPLES:	
(SIN 12) - Set main video to Slot 1, Input 2.	
(SIN+MAIN 45) - Set main video to Slot 4, Input 5.	
(SIN+PIIP 21) - Set picture in picture video to Slot 2, Input 1.	
(SIN?) - Get the current main video Input (SIN!12).	
(SIN+MAIN?) - Get the current main video Input (SIN+MAIN!12).	
(SIN+PIIP?) - Get the current (picture in picture) PIP video Input (SIN+PIIP!21).	

(SIZ) SIZE		
CONTROL GROUP: Input	SUBCLASS: Power Down	ACCESS LEVEL: Operator
DESCRIPTION		
<p>This controls how much the projector will electronically expand or shrink the image. It will expand/contract the image in both the vertical and horizontal directions so that the aspect ratio will not change. 1000 is the neutral position where no resizing is done. Scale = value / 1000. The horizontal scaling of the image is always to exactly this value but the vertical scale is also controlled by the VST control which stretches the image vertically. When size is changed on PIP video, nothing will visually happen. It gets saved in the PIP's channel and will be applied the next time that channel is on main video.</p>		
SUBCODE	DESCRIPTION OF USE	
<No Subcode >	Set the size for the main image.	
EXAMPLES:		
(SIZ 500) - Set size to 500 on main video.		
(SIZ?) - Returns the size value on main video.		

(SMP) SAMPLING MODE		
CONTROL GROUP: Input	SUBCLASS: Power Up	ACCESS LEVEL: Operator
DESCRIPTION		
<p>This control sets the color sampling mode for a digital signal to either YCbCr 4:4:4, RGB or YCbCr 4:2:2. Although the proper sampling mode is determined automatically by the projector, you can override the setting. Valid values are:</p> <p>0 = YCbCr 4:4:4 (or RGB)</p> <p>1 = YCbCr 4:2:2</p>		
SUBCODE	DESCRIPTION OF USE	
INxy	Set the sampling mode on Slot x, Input y.	

(SMP) SAMPLING MODE <i>(Cont'd)</i>	
MAIN	Set the sampling mode on main video.
PIIP	Set the sampling mode on PIP video.
EXAMPLES: (SMP 1) - Set sampling mode to YCbCr422 on main video. (SMP+MAIN 0) - Set sampling mode to YCbCr444 on main video. (SMP+PIIP 1) - Set sampling mode to YCbCr422 on PIP video. (SMP+IN32 1) - Set sampling mode to YCbCr422 on Slot 3, Input 2. (SMP?) - Returns the current sampling mode value on main video. (SMP+PIIP?) - Returns the current sampling mode value on PIP video. (SMP+IN12?) - Returns the current sampling mode value on Slot 1, Input 2.	

(SOR) SCREEN ORIENTATION		
CONTROL GROUP: Preference	SUBCLASS: Power Up	ACCESS LEVEL: Operator
DESCRIPTION Selects the orientation of the displayed image. It can be displayed normally, inverted horizontally, inverted vertically, or inverted in both directions, as required by the projector installation. Valid values are: 0 = Front Projection 1 = Rear Projection 2 = Front Projection Inverted 3 = Rear Projection Inverted		
SUBCODE <No Subcode >	DESCRIPTION OF USE	
EXAMPLE: (SOR 0) - Set image orientation to Front projection.		

(SPS) SPLASH SCREEN		
CONTROL GROUP: Preference	SUBCLASS: Power Up	ACCESS LEVEL: Operator
DESCRIPTION Upload a User Splash Screen (logo) bitmap and configure splash screen display options.		

(SPS) SPLASH SCREEN <i>(Cont'd)</i>	
SUBCODE <No Subcode >	DESCRIPTION OF USE View/Set option indicating when a logo is displayed. Valid values are: 0 = Always OFF 1 = Display on Startup only 2 = Display on Startup and when there is no Signal
SLCT	View/Set which logo to display. Valid values are: 0 = Default Splash Screen 1 = User Splash Screen
EXAMPLES: (SPS ?) - Get the display option. If 0, logo is always OFF. 1, logo is displayed at start up, etc. (SPS 2) - Set the display option. Logo will be displayed when there is no signal. (SPS+SLCT 0) - Use Christie logo.	

(SPT) SPLIT SCREEN		
CONTROL GROUP: Unsaved	SUBCLASS: Power Down	ACCESS LEVEL: Status
DESCRIPTION Split screen enable control. Allows a snap shot of the main image to be presented on the right side of the screen to allow evaluation of advanced image processing features. All resizing controls are honoured on both images. However, image processing controls only happen on the left side image. Changing Inputs, channels or test patterns will disable this control. PIP operation must be disabled prior to enabling this control. Valid options are: 0 = OFF 1 = Side 2 = Top		
SUBCODE <No Subcode >	DESCRIPTION OF USE	
EXAMPLES: (SPT 1) - Turn ON split screen to the side. (SPT 0) - Turn OFF split screen.		

(SST) SYSTEM STATUS	
CONTROL GROUP: Preference	SUBCLASS: Power Down
ACCESS LEVEL: Status	
DESCRIPTION Retrieve the various system status groups.	
SUBCODE <No Subcode >	DESCRIPTION OF USE Returns information on all status groups, with one message per item.
ALRM	Returns a summary of any active alarms.
CONF	Returns configuration data - model, sn, build date, etc.

(SST) SYSTEM STATUS <i>(Cont'd)</i>	
COOL	Returns cooling data - cooling fans, air flow, etc.
HLTH	Returns system health.
LAMP	Returns LAMP operational data.
SIGN	Returns signal data - freq, etc.
SYST	Returns system data - power, hours of use, shutter open, etc.
TEMP	Returns temperature data.
VERS	Returns version numbers.
<p>EXAMPLES: (SST+ALRM?) returns (SST+ALRM!000 002 "101" "Prism temperature") where parameters are P1=index number, P2=error level, P3=value, P4=description. Error level is 0=no errors or warnings, 1=warning, 2=error, 3=error and warning.</p>	

(STD) VIDEO STANDARD	
<p>CONTROL GROUP: Input SUBCLASS: Power Up ACCESS LEVEL: Operator</p>	
<p>DESCRIPTION This control displays or sets the current video standard that is decoding the Input signal. You can allow the projector to automatically determine the standard or you can specify a specific standard from the selection list. 0 = Auto. Automatically determined by decoder. 1 = PAL is a commonly used format in much of Europe, China, Australia, and some South American and African countries. 2 = NTSC is a commonly used format in North America, and Japan. 3 = SECAM is a format found primarily in France, Eastern Europe and much of Africa. 4 = NTSC44 is a tape-only standard and is usually used with hybrid signals used to provide compatibility with video material of another TV format without a complete translation. 5 = PAL-M is a format found primarily in Brazil. 6 = PAL-NC is a format found primarily in Argentina and Chile, and some other Latin American countries. 7 = PAL-60 Only those standards that have similar horizontal and vertical frequencies to the current Input source are enabled.</p>	
SUBCODE	DESCRIPTION OF USE
INxy	Set the video standard on Slot Input y to the specified value in the range of known video standards.
MAIN	Set the video standard on the main video to the specified value in the range of known video standards.

(STD) VIDEO STANDARD <i>(Cont'd)</i>	
PIIP	Set the video standard on the PIP video to the specified value in the range of known video standards.
EXAMPLES: (STD 0) - Set video standard to 0 (PAL) on main video. (STD+MAIN 1) - Set video standard to 1(NTSC_M) on main video. (STD+PIIP 0) - Set video standard to 0(PAL) on PIP video. (STD+IN32 3) - Set video standard to 3(NTSC_4_43) on Slot 3 Input 2. (STD ?) - Returns the current video standard on main video. (STD+PIIP ?) - Returns the current video standard value on PIP video. (STD+IN12 ?) - Returns the current video standard value on Slot 1 Input 2.	

(SZP) SIZE PRESETS		
CONTROL GROUP: Unsaved	SUBCLASS: Power Up	ACCESS LEVEL: Operator
DESCRIPTION Sets the image to one of several preset size/position presets. 0 = Default 3 = Full Width 5 = Anamorphic 1 = None 4 = Full Height 6 = Custom 2 = Full Screen		
SUBCODE	DESCRIPTION OF USE	
<No Subcode >		
EXAMPLES: (SZP 1) - Set the size preset to no resizing.		

(TBL) TOP BLANKING	
CONTROL GROUP: Input	ACCESS LEVEL: Operator
DESCRIPTION Set the number of lines to blank (turn to black) at the top of the image. This can be used to blank out any unwanted data near the top edge of the image. A positive amount of blanking makes the image smaller. A negative amount of blanking makes the image larger. Negative blanking is only applicable to analog signals, when the auto setup has not been able to set the image size correctly. It is preferable not to use negative blanking, but to run auto setup again, ensuring that the content has active pixels on each edge of the image. The maximum amount of top blanking allowed is half the image height minus 10. For negative blanking, the image size can only be increased to the limit of the sync.	
SUBCODE	DESCRIPTION OF USE
INxy	Set the top blanking for Slot x, Input y.
MAIN	Set the top blanking for the main image.

(TCS) TARGET COLOR SPACE (Cont'd)	
RDxY	Adjusts the y coordinate of the red color point (0 - 800 with 3 decimal places)
GNxX	Adjusts the x coordinate of the green color point (0 - 800 with 3 decimal places)
GNxY	Adjusts the y coordinate of the green color point (0 - 800 with 3 decimal places)
BLxX	Adjusts the x coordinate of the blue color point (0 - 800 with 3 decimal places)
BLxY	Adjusts the y coordinate of the blue color point (0 - 800 with 3 decimal places)
COPY	Copy gamut settings from preset to current. Value 0-8 for source preset
CCAP	Read-only field which returns string that gives relationship between projector capability and the color target.
<p>EXAMPLES:</p> <p>(TCS+SLCT 1) - Select EBU color gamut as target (TCS+RDCX 290) - Set current Target gamut red x point to 0.290 (TCS+BLEY ?) - Return value of EBU preset blue y point (TCS+COPY 3) - Copy settings from HD Video to current</p>	

(TED) TWIN HDMI EDID TYPE SELECTION	
CONTROL GROUP: Option SUBCLASS: Power Up ACCESS LEVEL: Operator	
<p>DESCRIPTION</p> <p>Set the preferred EDID Timings on the Twin HDMI Input card. Available Models are: 0 = Default 1 = 3D 2 = Custom</p> <p>NOTE: 3D option (1) is not supported for Entero or Matrix StIM/SIM.</p>	
SUBCODE	DESCRIPTION OF USE
SLxy	Set the EDID timings on Slot x to the specified type.
<p>EXAMPLES:</p> <p>(TED+SL31 2) - Set EDID type to 2 (Custom) on Slot 3 Input 1. (TED+SL12?) - Returns the current EDID type on Slot 1 Input 2.</p>	

(TIL) TILING CONTROL	
CONTROL GROUP: Preference SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Set the projector as part of a tiled array. NOTE: <i>TIL cannot be used with native warping.</i>	
SUBCODE	DESCRIPTION OF USE
SLCT	Enable or disable tiling.
RTOT	Set the total number of rows in the projector array.
CTOT	Set the total number of columns in the projector array.
RVAL	Set the row number of this projector.
CVAL	Set the column number of this projector.
EXAMPLES: (TIL+SLCT 1) - Enable tiling. (TIL+RTOT 2) - Set the total number of rows of projectors to 2. (TIL+CTOT 2) - Set the total number of columns of projectors to 2. (TIL+RVAL 2) - Set the projector to be in the 2nd row. (TIL+CVAL 1) - Set the projector to be in the 1st column.	

(TMD) TIME/DATE	
CONTROL GROUP: Preference SUBCLASS: Power Down ACCESS LEVEL: Admin	
DESCRIPTION Set the date, time or time zone.	
SUBCODE	DESCRIPTION OF USE
DATE	Set the date in the form yyyy/mm/dd.
TIME	Set the local time in the form hh:mm:ss NOTE: Some Currently, time must be set using 24hr clock (regardless of LOC+TIME setting).
EXAMPLES: (TMD+TIME "17:50:45") - Set new local time. (TMD+DATE "2007/02/30") - Set the local date. (TMD+TIME?) - Get local time (TMD+TIME! 17:50:45).	

(TNT) TINT	
CONTROL GROUP: Input SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Tint adjusts the balance of red-to-green in your image. It is useful only for video images processed by decoder cards.	
SUBCODE IN _{xy}	DESCRIPTION OF USE Set the tint level on Slot x, Input y to the specified value in the range of -45 deg to 45 deg.
MAIN	Set the tint level on the main video to the specified value in the range -45 deg to 45 deg.
PIIP	Set the tint level on the PIP video to the specified value in the range of -45 deg to 45 deg.
EXAMPLES: (TNT 40) - Set tint level to 40 on main video. (TNT+MAIN 40) - Set tint level to 40 on main video. (TNT+PIIP 20) - Set tint level to 20 on PIP video. (TNT+IN32 40) - Set tint level to 40 on Slot 3 Input 2. (TNT ?) - Returns the current tint level on main video. (TNT+PIIP ?) - Returns the current tint level on PIP video. (TNT+IN12 ?) - Returns the current tint level on Slot 1 Input 2.	

(TPE) TEST PATTERN ENABLE	
CONTROL GROUP: Preference SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION Automatically select White test pattern based on the control being adjusted. Certain controls that deal with color settings will enable white test pattern when entering OSD menus and disable when exiting the menu. This control defines whether this happens. There are some situations where the user may not want to automatically go to a white test pattern when the OSD menu is selected, for example if they have specific content that they wish to evaluate. 0 = Disable automatic test pattern enable 1 = Enable automatic test pattern enable	
SUBCODE <No Subcode>	DESCRIPTION OF USE
EXAMPLES: (TPE 0) - Disable test pattern enable. (TPE ?) - Report state of test pattern enable.	

(TTM) THIC TRANSMITTER MODE CONFIGURATION	
CONTROL GROUP: Option SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Select a working mode for one of the transmitters on the THIC card. 0 = 'Default' to select 12-bit per channel HDMI output 1 = 'Compatible' to select 8-bit per channel HDMI output 2 = 'DVI only' to select 8-bit per channel DVI output	
SUBCODE SLxy	DESCRIPTION OF USE Set transmitter working mode for THIC card.
EXAMPLES: (TTM+SL11 0) - Use 12 bit HDMI output for THIC on Slot 1, Input 1. (TTM+SL42 1) - Use 8 bit HDMI output for THIC on Slot 4, Input 2. (TTM+SL11 2) - Use 8 bit DVI output for THIC on Slot 1, Input 1. (TTM+SL12 ?) - Get the transmitter working mode for THIC on Slot 1, Input 2.	

(TWP) TARGET WHITE POINT	
CONTROL GROUP: Preference SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION This command is used to set the ArrayLOC target white-point. Several preset white points are provided in addition to 4 user setting white points. The control subcodes provide access to all the presets. Due to the large number of sub-codes, they are not all listed. Instead a simple substitution for the small 'x' is made, according to the following table:	
0	3200K
1	5000K (D50)
2	6500K (D65)
3	7500K (D75)
4	9300K (D93)
5	User 1
6	User 2
7	User 3
8	User 4
C	Current

(UID) USER ID	
CONTROL GROUP: Unsaved SUBCLASS: Power Down ACCESS LEVEL: None	
DESCRIPTION Allows users to login to the serial interface.	
SUBCODE <No Subcode >	DESCRIPTION OF USE
EXAMPLES: (UID "username" "password") - Login a user. (UID) - Logout the current user, also happens automatically when a new user logs in. (UID?) - Display the current logged in user and their access level (UID!"username" 01).	

(VBL) VIDEO BLACK INPUT	
CONTROL GROUP: Input SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION This control affects the black level for video signals. Most NTSC video standards include an offset to black which is useful for setting up CRT projectors. Set this control to 7.5 IRE if the video black level seems excessively elevated. Set to 0 IRE if video black levels are crushed. This control applies to analog cards with YUV color space only. Valid values are: 0 = 0 IRE 1 = 7.5 IRE	
SUBCODE IN _{xy}	DESCRIPTION OF USE Get the video black level for Slot x, Input y.
MAIN	Set the video black level for main video.
PIIP	Set the video black level for PIP video.
EXAMPLES: (VBL 1) - Set the video black level for main video to 7.5 IRE. (VBL+MAIN 1) - Set the video black level for main video to 7.5 IRE. (VBL+IN32 0) - Set the video black level for PIP video to 0 IRE. (VBL?) - Returns the video black level on main video.	

(VRT) VERTICAL POSITION	
CONTROL GROUP: Input SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION This control sets the vertical position of the image.	
SUBCODE <No Subcode >	DESCRIPTION OF USE Set the vertical position for the main image.
EXAMPLE: (VRT 500) - Set vertical position to 500 on main video. (VRT?) - Returns the vertical position value on main video.	

(VST) VERTICAL STRETCH	
CONTROL GROUP: Input SUBCLASS: Power Down ACCESS LEVEL: Operator	
DESCRIPTION Use Vertical Stretch to adjust the height of the image while keeping the width constant. This controls how much the image is electronically stretched vertically. As it does not affect the horizontal width, it changes the aspect ratio of the image. 1000 is the neutral position where no stretching is done. Vertical Scale = (VST-Value / 1000) * (SIZ-Value / 1000).	
SUBCODE <No Subcode >	DESCRIPTION OF USE Set the vertical stretch for the main image.
EXAMPLES: (VST 500) - Set vertical stretch to 500 on main video. (VST?) - Returns the vertical stretch value on main video.	

(WRP) WARP / KEYSTONE	
CONTROL GROUP: Configuration/Unsaved SUBCLASS: Power Up ACCESS LEVEL: Operator	
DESCRIPTION This serial command will control the writing and reading of 2D keystone maps, warp maps, edge-blend map, uniformity maps and associated parameters. NOTE: <i>The commands below are used from the OSD only, and are not highly applicable for use from Serial Commands. If they are set, they will only be applied on Power up or if applying them from the OSD.</i> NOTE: <i>WRP cannot be used if TIL is enabled.</i>	
SUBCODE SLCT	DESCRIPTION OF USE Select Warping mode: 0 = disabled 1 = 2D keystone 2 = TWIST maps
HKST	1D Horizontal keystone adjust
VKST	1D Vertical keystone adjust
KRST	Reset keystone settings to zero
KTLH	2D keystone adjust (Top-Left H-position)
KTLV	2D keystone adjust (Top-Left V-position)
KTRH	2D keystone adjust (Top-Right H-position)
KTRV	2D keystone adjust (Top-Right V-position)
KBLH	2D keystone adjust (Bottom-Left H-position)
KBLV	2D keystone adjust (Bottom-Left V-position)

(WRP) WARP / KEYSTONE <i>(Cont'd)</i>	
KBRH	2D keystone adjust (Bottom-Right H-position)
KBRV	2D keystone adjust (Bottom-Right V-position)
EXAMPLES: (WRP+SLCT 0) - Warping disabled. (WRP+SLCT 1) - Use 2D keystone mode. (WRP+SLCT 2) - Use TWIST map #1. (WRP+KTLH 75) - Set 2D keystone Top-left Horizontal position to 75.	

Numerics

- 2D keystone adjustments, 3-38
- 2D Keystone Cursor Offsets, 3-39

A

- Active Input Window, blanking, 3-20
- Adaptive Contrast, 3-23
- Adjust 2D Keystone, 3-38
- Adjust Horizontal Keystone, 3-37
- Adjust Vertical Keystone, 3-37
- adjusting contrast, 3-4
- adjusting images
 - brightness, *See also Gamma Settings menu*
 - sharpness, *See Detail Settings menu*
 - auto input levels, 3-24
 - automatic setup, 3-16
 - color overlaps, 3-23
 - input levels, 3-24 to 3-26
 - overview, 3-16
 - split screen, 3-23
- adjusting input levels, input peak detector, 3-25
- advanced controls, 3-30
- Advanced Diagnostics, 3-47
- Advanced Edge Blending, 3-41, 3-42
- Advanced Image Settings menu, 3-26
- All Joined
 - network routing option, 3-35
- ambient light
 - gamma correction, 3-27
- ambient light, adjusting gamma, 3-5
- analog BNC input card, 2-4
- Array Capability, 3-49, 3-56
- Array Color Target, 3-49
- array status, 3-52
- array status (fig.), 3-52
- ArrayLOC
 - color management
 - fine tune projector color, 3-57
 - managing colors, 3-55
 - master projector, 3-56
 - projector color, meter, 3-58
- ArrayLOC Configuration, network, 3-53
- ArrayLOC menu, 3-48
- arrow keys, remote keypad, 3-7
- aspect ratio
- Aspect Ratio Overlay, 3-46
- Auto Color Enable, 3-50, 3-51
- Auto Color Enable, input levels, 3-25
- Auto Input Level, 3-24
- Auto Input Searching, 3-62
- Auto key, remote keypad, 3-3
- Auto Power Up, 3-31
- auto select channels, 3-15
- auto setup changes, 3-3
- Auto Shutdown Enable, 3-31
- Auto Source, creating channels, 3-12

- automatic image setup, 3-16
 - See also adjusting images*

B

- Back Porch, *See clamp location*
- Baud Rate, 3-34
- Black
 - test pattern, 3-41
- Black Blend Enable, 3-44
- Black Level Blending, 3-44
 - edge blend widths, 3-44
- black levels, 3-22
 - See also input levels*
- Blanking, 3-20
- Blend
 - definition, 3-41
- Blend Midpoint, 3-42
- Blend Shape, 3-42
- Blend Width, 3-42, 3-43, 3-44
- Block Artifact Reduction, 3-28
- Bright key, remote keypad, 3-5
- Bright/ColorLOC ArrayStatus, 3-52
- Bright/ColorLOC Configuration, 3-48
- Brightness, 3-21
 - brightness
 - See also clamp location*
 - adjusting, 3-5
 - Brightness Uniformity
 - adjusting, 3-40
 - definition, 3-39
 - prerequisites for adjustment, 3-40
 - brightness uniformity
 - disabling using Func key, 3-6
 - Brightness Uniformity Enable, 3-39
 - Brightness, target
 - adjusting, 3-56
- Broadcast Keys, 3-36
- broadcasting. *See Proj key*
- buttons. *See remote keypad*
- Bx
 - projector blue CIE 1931 x capability, 3-53
- BY
 - projector blue CIE 1931 Y capability, 3-53
- By
 - projector blue CIE 1931 y capability, 3-53

C

- Cards
 - settings, 3-47
- Cascading Menus, 3-33
- CAUTIONS
 - before servicing, 5-1
 - LED radiation, 5-3
 - light module, 5-4
 - stay out zone, 5-1
- Center Brightness, 3-44

- changing case, editing text, 3-9
- Channel Edit menu, 3-15
- Channel key, remote keypad, 3-4
- Channel Setup menu, channels
 - Channel Setup menu, 3-12
- channels, 3-11
 - Auto Select, 3-15
 - Channel Edit menu, 3-15
 - copying, 3-14
 - creating, 3-12
 - deleting, 3-14
 - editing, 3-15
 - horizontal and vertical frequency, 3-12
 - including in menus, 3-15
 - list, 3-11
 - Locked, 3-15
 - signal type, 3-13
 - using, 3-12
- See also channels*
- check boxes, menus, 3-9
- Chroma/Luma Delay, 3-23
- Clamp Location, 3-25
- Cleaning
 - projection lens, 5-3
 - projector covers, 5-3
- Clear Adjustments
 - projector color adjustment, 3-51
- Coarse Adjustment
 - brightness uniformity, 3-39
- Codes
 - error, 6-3
- color
 - See also Video Options*
 - color drift. *See clamp location*
 - Color Enable, 3-46
 - color management, *see ArrayLOC*
 - Color Space, 3-21
 - Color, saturation, 3-23
 - colors, changing display, 3-6
 - Common Gamut, 3-52
 - Communications, 3-34 to 3-36
 - components, projector, 1-4
 - Configuration menu, 3-30
 - connecting sources, 2-2
 - contrast, adaptive, 3-23
 - Contrast, Image Settings menu, 3-21
 - Contrast, remote keypad, 3-4
 - Cooling considerations, 5-1
 - Copy Adjustments From, 3-52
 - Copy Channel, 3-14
 - Copy Color Space From, 3-50
 - copying channels, 3-14
 - Covers
 - projector, cleaning, 5-3
 - creating channels, 3-12
 - crushing
 - See also input peak detector*
 - auto input levels, 3-24
 - black levels, 3-22

- input levels, 3-24
- Custom Sizing, 3-17
- D**
- DANGERS
 - electrical hazards, 5-2, 5-4
 - eye damage, 5-1
 - servicing qualifications, 5-2
- Date & Time, setting, 3-32
- decoder AGC, enabling, 3-22
- default aspect ratio, 3-17
- Default Gateway, 3-35
- Delete All Channels, 3-14
- Delete Channel, 3-14
- Delete Unlocked Only, 3-14
- deleting channels, 3-14
- Detail Settings menu, 3-28
- Diagnostics & Calibration, 3-45
- Digital Mirror Device (DMD), 1-4
- dim image. *See clamp location*
- Dimensions, 7-5
- Direct Loop, 3-31
- Display
 - status, 6-2
- Display Automatic Message Boxes, Menu Preferences, 3-33
- Display Error Messages, Menu Preferences, Menu Preferences, 3-33
- display font, 3-32
- Display User Message Boxes, Menu Preferences, 3-33
- Domain Name, 3-36
- drop-down lists, menus, 3-9
- dual link DVI input card. *See DVI input card*
- dual SD/HD - SDI input card, 2-4
- DVI digital video, 2-3
- DVI input card, 2-3
- Dynamic Iris, adaptive contrast, 3-23
- E**
- Edge Blend
 - test pattern, 3-41
- Edge blend widths, 3-44
- Edge Blending, 3-41
 - procedure, 3-43
- edge blending
 - disabling using Func key, 3-6
- editing channels, 3-15
- editing text, 3-6
 - activating edit windows, 3-9
 - changing case, 3-9
- Electrical hazards
 - DANGER, 5-2, 5-4
- Electromagnetic compatibility, 7-2
- electronics module (EM), 1-3
- EM Network, 3-54
- Emissions
 - specifications, 7-2
- Enable Decoder AGC, 3-22
- Enter key, remote keypad, 3-6
- Enter Standby After (min), power management, 3-32
- entering negative numbers, 3-6
- Environmental regulations, 7-2
- Error
 - codes, 6-3
- Error Messages
 - System Warnings/Errors, 6-1
- Ethernet Settings, 3-35 to 3-36
- Exit key, remote keypad, 3-7
- Eye damage
 - DANGER, 5-1
- Eye-Motion Filter, 3-29, 3-40
- F**
- Fade Time, 3-61
- Fan Assist, power management, 3-32
- Fan packs
 - replacement schedule, 5-3
- features, 1-4
- Film Mode Detect, 3-23
- Filter, 3-23
- Flags
 - array, 3-52
 - for source, 3-27
- Frame Locking, 3-61
- Free Run Frequency, 3-31
- Freeze Image, 3-46, 3-47, 3-59, 3-60, 3-61
- Freeze Image During Auto Setup, 3-46
- Front IR Enabled, 3-36
- front projection, image orientation, 3-30
- Full Screen Eye-Motion Filter, 3-40
- Func (Function) key, 3-6
 - changing display color, 3-6
 - editing text, 3-6
- Func (Function) key, remote keypad, 3-6
- G**
- Gamma, 3-27
 - gamma adjusting, 3-5
- Gamma Correction
 - for ambient light, 3-27
- Gamma key, remote keypad, 3-5
- Gamma Settings menu, 3-26
- Geometry and Color, 3-36
- Geometry Correction, 3-36
- global icon, 3-8
- Grey Level, 3-45
- Grid
 - test pattern, 3-41
- Group
 - bright/color, array, 3-53
- Gx
 - projector green CIE 1931 x capability, 3-53
- GY
 - projector green CIE 1931 Y capability, 3-53
- Gy
 - projector green CIE 1931 y capability, 3-53
- H**
- HDMI Output Loop Source, 3-31, 3-62
- Help key, remote keypad, 3-5
- Help menu, 3-8
- horizontal frequency, channel, 3-12
- Horizontal keystone
 - adjusting, 3-37
- horizontal position. *See H-Position*
- Horizontal Shift, Menu Preferences, 3-32
- horizontal streaks. *See clamp location*
- Host Name, 3-36
- H-Position, 3-19
- hue, tint, 3-23
- I**
- Image adjustment, 3-62
- Image Settings menu, 3-21
- Image Size, 3-18
- images
 - See also adjusting images*
 - custom sizing, 3-17
 - default aspect ratio, 3-17
 - preset sizes, 3-17 to 3-18
 - size and position, 3-17
- Immunity
 - specifications, 7-2
- In Menu, channels, 3-15
- including channels in menus, 3-15
- input card. *See DVI input card*
- Input Drive. *See Input Levels*
- Input key, remote keypad, 3-4
- Input Level Detector, 3-46
- input levels
 - adjusting, 3-24 to 3-26
 - adjusting with input peak detector, 3-25
- Input Levels menu, 3-24
- Input Peak Detector, 3-25, 3-46
- Input Video Black, 3-22
- inputs and channels
 - See also channels*
 - See also switching inputs*
 - overview, 3-10
- installation and setup
 - connecting sources, 2-2
- intensity. *See chrome/luma delay*
- Interconnections, A-3
- IP Address
 - setting, 3-35
- IR remote keypad
 - layout (fig.), 3-2
 - wired, 3-3
- IRE values. *See Input Video*, 3-22
- K**
- Keep Aspect On Auto Setup, 3-61

Keep Aspect On Auto Setup, aspect, auto set-up, 3-19
 keys. *See remote keypad*
 Keystone
 2D adjustments, 3-38
 definition, 3-36
 horizontal and vertical adjustment, 3-37
 resetting settings, 3-39
 keystone
 disabling using Func key, 3-6

L

Labels
 projector, 5-1
 labels
 projector, 1-1
 warning symbols, 1-1
 Language, 3-30
 Large Menu Font, Menu Preferences, 3-32
 Laser key, remote keypad, 3-7
 laser pointer specifications, 3-7
 laser pointer, remote keypad, 3-1
 LED
 status, 6-2
 LED radiation
 CAUTION, 5-3
 LED Strobe Adjust, 3-47
 LED, status
 error conditions, 6-3
 Lens
 cleaning, 5-3
 installation, 5-5
 removal, 5-4
 specifications, 7-4
 Level Detector Threshold, 3-46, 3-47
 Light Engine Test Pattern, 3-47
 Light Module (LM)
 CAUTION, 5-4
 replacement, 5-4
 specifications, 7-4
 Locked channels, 3-15
 luma delay, *See Chrome/Luma Delay*, 3-23

M

MAC Address, 3-36
 Main Input, 3-59
 Main menu, 3-7
 Main/Secondary Loop, 3-31
 Maintenance, 5-1 to 5-5
 Maintenance, preventative, 5-3
 Markings
 projector, 5-1
 markings. *See labels*
 master projector, 3-56
 Maximum
 Target Color Space selection, 3-50
 Menu Font Size, 3-35
 Menu key, remote keypad, 3-5
 Menu Location, Menu Preferences, 3-32

menu navigation
 See also Menu Preferences
 check boxes, 3-9
 drop-down lists, 3-9
 functions. *See Func key*
 showing/hiding, 3-5
 slide bars, 3-8
 Menu Preferences, 3-32
 Menu Tree, 4-1 to 4-6
 Menu Type, Menu Preferences, 3-33
 menu, channels, 3-15
 Minimum Brightness, 3-48
 minimum gamut, 3-48
 Moire artifact, *See Eye-Motion Filter*
 Mosquito Noise Reduction, 3-28
 Mounting
 specifications, 7-5

N

navigation. *See menu navigation*
 negative numbers, entering, 3-6
 Network Routing, 3-35
 Noise Reduction Settings menu, 3-28
 noise, filter, 3-23
 noisy source
 input levels, 3-24
 number keys, remote keypad, 3-5

O

on-line help, 3-8
 Option Card Settings, 3-47
 Optional accessories, 7-7
 OSD
 showing/hiding projector menus, 3-5
 OSD (on-screen display) key
 See also menus
 OSD (on-screen display) key, remote keypad, 3-5
 OSD Transparency, Menu Preferences, 3-33
 Output Level Detector, 3-47
 Output Options menu, 3-30
 Output Peak Detector, 3-47
 Overall Gain, 3-40
 overshoot. *See input levels*
 overview, 1-3

P

PBP (Picture-by-Picture), 3-59
 PCA, *see projector color adjustment*
 PHM Network, 3-54
 Picture-by-Picture (PBP), 3-59
 Picture-in-Picture (PIP), 3-59
 PIP
 PIP (Picture-in-Picture), 3-59
 PIP Border Color, 3-60
 PIP Border Width, 3-60
 PIP enable, 3-60
 PIP H-Position, 3-60

PIP key, remote keypad, 3-4
 PIP Position Presets, 3-60
 PIP V-Position, 3-60
 PIP Window Options, 3-60
 PIP Window Size, 3-60
 Pixel Phase, 3-19
 Pixel Track, 3-19
 Port number
 entering, 3-35
 position, *See Size and Position menu*
 Power key, remote keypad, 3-3
 Power Management menu, 3-31
 power precautions, 2-1
 power projector OFF, 2-1
 power projector ON, 2-1
 precautions
 See safety
 preferences. *See Menu Preferences*
 preset sizes, images, 3-17 to 3-18
 Preventative maintenance, 5-3
 Proj (Projector) key, remote keypad, 3-6
 Proj ID
 array, 3-53
 Projection Head Module (PHM)
 overview, 1-3
 Projector
 assigning/changing number, 3-34
 location precautions, 5-2
 projector
 features, 1-4
 power OFF, 2-1
 power ON, 2-1
 Projector Address, 3-34
 Projector Capability, 3-49
 Projector Color Adjustment, 3-51
 projector color adjustment, 3-57
 projector components, 1-4
 projector configuration, 3-30
 projector menu. *See menu navigation*
 projector overview, 1-2
 Electronics Module (EM), 1-3
 projection head module, 1-3

R

rear projection, image orientation, 3-30
 remote keypad
 commands (buttons), 3-3
 using, 3-1
 Reset Current Adjustments To Defaults, 3-51
 Reset Keystone Settings, 3-39
 Resize Presets, 3-17 to 3-18
 RGB
 color space, 3-21
 part of each color, 3-51
 RGB Brightness, 3-55
 RGB Brightness Target, 3-51
 RGB Quantization Range, 3-24
 RS-232
 options, 3-34

- RS-232 and Ethernet Joined, 3-35
- RS-232 and RS-422 Joined, 3-35
- RS-422
 - options, 3-34
- Rx
 - projector red CIE 1931 x capability, 3-53
- RY
 - projector red CIE 1931 Y capability, 3-53
- Ry
 - projector red CIE 1931 y capability, 3-53
- S**
- saccadic eye-motion artifacts, *See Eye-Motion Filter*
- Safety
 - specifications, 7-1
- safety
 - laser point specifications, 3-7
 - power, 1-3
 - visible LED radiation, 1-1
 - warnings and guidelines, 1-1
- Sampling Mode, 3-23
- saturation, color, 3-23
- Screen Image Orientation, 3-30
- Secondary Advanced Image Settings, 3-61
- Secondary Blanking, 3-61
- Secondary Image Settings, 3-61
- Secondary Input, 3-59
- Secondary Input & Switching, 3-59
- Secondary Input Levels, 3-61
- secondary inputs
 - switching. *See secondary input*
- Secondary Size & Position, 3-61
- Secondary Video Options, 3-61
- Select Channel Operation menu
 - channels
 - Select Channel Operation menu, 3-14
- selecting inputs, *See switching inputs*
- Separate
 - network routing option, 3-35
- Serial (RS-232 IN) Options, 3-34
- Serial (RS-232 OUT) Options, 3-34
- Serial (RS-422) Options, 3-34
- Serial Command Reference, C-1, D-1
- Serial commands
 - control types, C-7
 - message format, C-1
- Serial Flow Control, 3-34
- Serial Mode, 3-34
- Serial Protocol, 3-34
- Service
 - CAUTION, 5-1
 - DANGER, 5-2
 - menu, 3-47
 - requirements, 5-2
- servicing
 - See also safety*
 - Set Frame Delay, 3-30
 - Set White to Color Temperature, 3-50
 - Show Blending Overlap, 3-41, 3-42
 - shutdown, automatic, 3-31
 - Shutter key, remote keypad, 3-6
 - signal type, channels, 3-13
 - Size and Position menu, 3-17
 - slide bars, menus, 3-8
 - Slot key, input, remote keypad, 3-4
 - slots. *See also inputs and channels*
 - sources
 - connecting, 2-2, 2-5
 - sources. *See inputs and channels*
 - specification
 - laser pointer, 3-7
- Specifications, 7-1
 - display, 7-3
 - electromagnetic compatibility, 7-2
 - emissions, 7-2
 - environmental, 7-2
 - immunity, 7-2
 - inputs, 7-8
 - lenses, 7-3
 - light module, 7-4
 - mounting, 7-5
 - physical, 7-5
 - power requirements, 7-3
 - safety, 7-1
 - standard components, 7-7
- Splash Screen, 3-33
- Splash Screen Setup, Menu Preferences, 3-33
- Split Screen, 3-23
- Standard components, 7-7
- Standby Active Loop-Through, 3-62
- Standby mode, auto shutdown, 3-31
- Status, 3-58
 - display, 6-2
 - LED, 6-2
- Stay out zone
 - CAUTION, 5-1
- Subnet Mask, 3-35
- Swap key, remote keypad, 3-4
- Swap Main & Secondary inputs, 3-60
- switching inputs, 3-10
 - secondary input (PIP), 3-11
- Sync Tip, *See clamp location*
- synchronize
 - master projector, 3-56
- Synchronize to This Projector, 3-48, 3-56
- System errors, 6-1
- system parameter, 3-30
- System warnings, 6-1
- T**
- Target Color Space, 3-49, 3-51
 - Maximum selection, 3-50
- Target Gamut
 - array, 3-52
 - Target RGB values, 3-50
 - Target White values, 3-50
 - TCP Port, 3-35
 - Test key, remote keypad, 3-3
 - Test Pattern, 3-36, 3-37, 3-40, 3-41, 3-45
 - Test Pattern Color Swap, 3-46
 - Test Pattern Enable, 3-51, 3-52
 - text, editing, 3-6
 - Texture Enhancement, detail settings, 3-28
 - Tiling Setup, 3-44
 - Time, setting, 3-32
 - Tint, color hue, 3-23
 - Tri Level, *See clamp location*
 - troubleshooting
 - changing display color, 3-6
 - Troubleshooting Trees, 6-9 to 6-11
 - Turn Off Image After (min), power management, 3-32
 - twin HDMI input card, 2-3
- U**
- undershoot. *See input levels*
- User White, 3-56
- V**
- vertical frequency, channel, 3-12
- Vertical keystone
 - adjusting, 3-37
- vertical position. *See V-Position*, 3-19
- Vertical Shift, Menu Preferences, 3-32
- Vertical Stretch, 3-18
- video decoder input card, 2-4
- Video Options menu, 3-22
- Video Standard, 3-22
- video standards use table, 3-22
- V-Position, 3-19
- W**
- WARNING
 - message, system, 6-2
- Web user interface, B-1 to B-13
 - basic operation, B-3
 - logging on, B-1
 - navigating, B-3
- Weight, 7-5
- White
 - test pattern, 3-41
- White Brightness Adjustment, 3-52
- White Color Temperature, 3-50
- White, target
 - adjusting, using User presets, 3-56
- Wired Keypad Enabled, 3-36
- wired remote, 3-3
- Wx
 - projector white CIE 1931 x capability, 3-53
- WY
 - projector white CIE 1931 Y capability,

3-53

Wy

projector white CIE 1931 y capability,
3-53

Y

YPbPr (HDTV) color space, 3-21

YPbPr (Video) color space, 3-21



ASSY TECH DOCS Entero

Corporate offices

USA – Cypress
ph: 714-236-8610
Canada – Kitchener
ph: 519-744-8005

Worldwide offices

United Kingdom
ph: +44 118 977 8000
France
ph: +33 (0) 1 41 21 00 36
Germany
ph: +49 2161 664540

Eastern Europe
ph: +36 (0) 1 47 48 100
Middle East
ph: +971 (0) 4 299 7575
Spain
ph: + 34 91 633 9990

Singapore
ph: +65 6877-8737
Beijing
ph: +86 10 6561 0240
Shanghai
ph: +86 21 6278 7708

Japan
ph: 81-3-3599-7481
South Korea
ph: +82 2 702 1601